

# GV60 Programmable Remote Control

Your fireplace's remote control helps you get the comfort, convenience and aesthetics you want from your appliance. The "remote" controls your fireplace in different ways.

*Note: If you would just like to turn your fireplace to the desired temperature, just press the **SET** button to ☀TEMP or 🌙TEMP and press and hold the **SET** button until the display flashes; press the ▲(up) or ▼(down) buttons to the desired temperature.*

## Operation Modes

**MAN** MAN MODE—Manual Mode. The flame height can be adjusted in the following manners:

1. Press the ▲(up) button to turn on the main burner.
2. Press the ▲(up) button to increase the flame height.
3. Press the ▼(down) button to decrease the flame height or to go to pilot Standby position.

For fine adjustments, tap the ▲ and ▼ buttons.

**NOTE:** While pressing either button, a symbol indicating transmission appears on the upper right hand corner of the display. The receiver confirms transmission with an acoustic signal

**STANDBY MODE**—Ignited pilot only.

☀TEMP TEMP MODE—Daytime Temperature Mode (appliance must be in standby mode; pilot ignited): The room temperature is measured and compared to the set temperature. The flame height is then automatically adjusted to achieve the Daytime set temperature.

🌙TEMP TEMP MODE—Nighttime Setback Temperature Mode (appliance must be in Standby mode, pilot ignited): The room temperature is measured and compared to the Nighttime Setback temperature. The flame height is then automatically adjusted to achieve the Nighttime Setback temperature.

TIMER TIMER MODE—(appliance must be in Standby mode, pilot ignited): The Timer setting allows you to set two (2) burner ON times and two (2) burner OFF times for every 24-hour period.

## Changing the Mode of Operation

Briefly pressing the **SET** button changes the mode of operation in the following order:

MAN → ☀TEMP → 🌙TEMP → TIMER → and back to MAN.


**NOTE:** MAN mode can also be reached by pressing either the ▲ or the ▼ buttons.

In **TEMP** mode,

- ☀ indicates the daytime temperature setting.
- 🌙 indicates the nighttime temperature setting.


In **TIMER** mode,

- ☀ indicates the start time setting.
- 🌙 indicates the stop time setting.

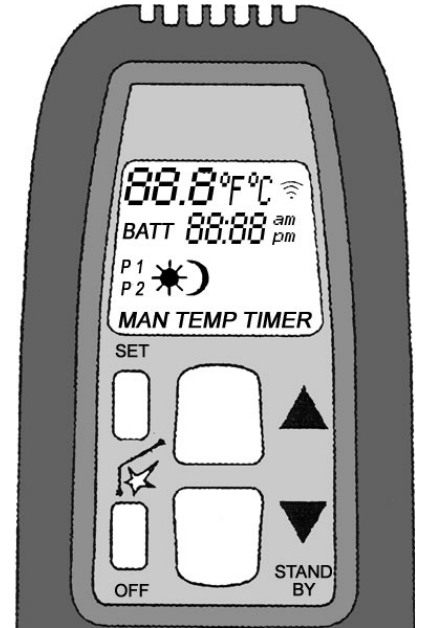



**Time** To set the time, follow the steps below.

1. The display indicates °C/24-hour or °F/12-hour clock. To change from one to the other, press and hold both the **OFF** and **▼** buttons until the display changes.
2. Hold down **both** the **▲** and the **▼** buttons until the display flashes. Let go.
3. Quickly press the **▲** to set the hour and the **▼** to set the minutes. Note: You must start setting the time while the display is flashing. If it stops flashing, go back to 1.
4. Press the **OFF** button to return to manual mode or simply wait and it will automatically return to manual mode.

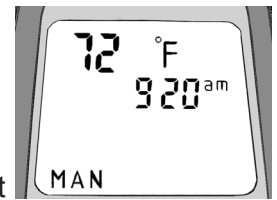

**Temperature** Use this setting when you come in and want to enjoy a set temperature. Here's what you do:

1. Select either the **☼ TEMP MODE** or the **☾ TEMP MODE** by briefly pressing the **SET** button.
2. Hold the **SET** button until the **TEMP** display flashes.
3. Set the desired temperature with the **▲** or the **▼** buttons. Note: 4.5°C/40°F is the minimum temperature setting.
4. Press the **OFF** button or simply wait and the display will go to the temperature control mode. Note: If you would like the Nighttime Setback temperature control to turn off, decrease the **☾ TEMP MODE** setting until [---] appears on the display.

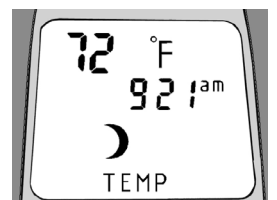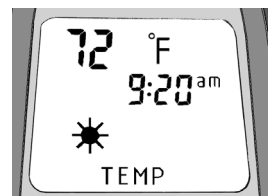

Your fireplace will reach the set temperatures and the remote will check the temperature every five minutes, adjusting the amount of fuel needed to give you a steady, even heat.

5. The display must remain in **TEMP** mode on the remote.

Note: Be patient with settings as it can take a few seconds to program.

**Flame Height**

1. In Standby mode, press the **▲** button to increase the flame height.
2. Press the **▼** button to decrease the flame height or to set the appliance at the pilot flame.

For fine adjustments, tap the **▲/▼** buttons.



**Timer** It is possible to program two periods of time per day at which your fireplace will turn on and off automatically.

For example, you can set your fireplace to turn on in the morning just before you get up (P1 ✨ [start time]) and to turn off when you leave for the day (P1 ⏸ [stop time]). Then, you can set your fireplace to turn on again at the end of the day (P2 ✨ [start time]) and to turn off when you go to bed at night (P2 ⏸ [stop time]).

If you wish to set only one time period at which your fireplace will turn on and off, program P2 ✨ [start time] and P2 ⏸ [stop time] for the same time as P1 ⏸ [stop time].

Here are the steps to program your fireplace.

1. Select **TIMER MODE** by briefly pressing the **SET** button.
2. Press and hold the **SET** button until **TIMER** is displayed on the lower right hand side.
3. Press and hold the **SET** button until the P1 ✨ and the time display flashes. Set the start time by pressing the ▲ button for the hour and by pressing by the ▼ button for the minutes. Then, press P1 ⏸ and set the stop time in the same manner you just set P1 ✨.
4. Briefly press the **SET** button for the next burner cycle time, which will be P2 ✨ and P2 ⏸.
5. Once all four (4) times are set, press **OFF** or simply wait to complete programming.
6. The remote must remain in **TIMER** mode to function automatically.

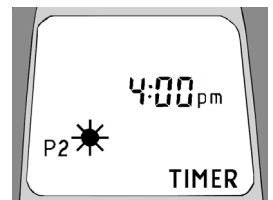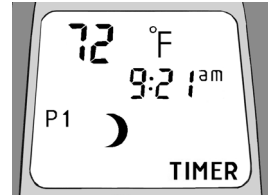

### Low Battery Indication

**Remote handset:** **BATT** will appear on the display when the battery needs to be replaced. Replace the handset battery with 1 x 9 V (alkaline recommended).

**Receiver:** Three (3) short 'beeps' will sound when the motor turns when the batteries need to be replaced.

Replace the receiver batteries with 4 x 1.5 V (alkaline recommended).

**To replace the batteries in the receiver,** carefully pull the receiver off its *Velcro* attachments under the cross beam. **WARNING—Do not move the receiver's antenna which is taped to the receiver.** The antenna could touch the ignition wire and the receiver's circuits could be destroyed.

**WARNING!**  
Handle the receiver box very carefully  
so that its antenna wire does  
**NOT TOUCH** the ignition wire.

### Handset/ Receiver Match

The remote control handset and receiver are programmed to function together. In case of a replacement of the handset or the receiver, you will need to press the reset button on the control valve to allow them to function together.