

Installation Manual



PORTRAIT

Direct Vent Zero Clearance
Gas Fireplace
natural gas 530VN
propane gas 530VP

Installer: Place model/serial number here.

Installer: Leave this manual with the appliance.
Consumer: Retain this manual for future reference.

⚠ WARNING:
FIRE OR EXPLOSION HAZARD

Failure to follow safety warnings exactly could result in serious injury, death, or property damage.

Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance.

WHAT TO DO IF YOU SMELL GAS

- Do not try to light any appliance.

- Do not touch any electrical switch; do not use any phone in your building.
- Leave the building immediately.
- Immediately call your gas supplier from a neighbor's phone. Follow the gas supplier's instructions.
- If you cannot reach your gas supplier, call the fire department.

Installation and service must be performed by a qualified installer, service agency or the gas supplier.

⚠ DANGER



Hot glass will cause burns.

Do not touch glass until cooled.

Never allow children to touch glass.

A barrier designed to reduce the risk of burns from the hot viewing glass is provided with this appliance and must be installed for the protection of children and other at-risk individuals.

This appliance may be installed in an after-market permanently located, manufactured (mobile) home where not prohibited by local codes. This appliance is only for use with the type of gas indicated on the rating plate. This appliance is not convertible for use with other gases, unless a certified kit is used.

INSTALLER: Leave this manual with the appliance.

CONSUMER: Retain this manual for future reference.

Massachusetts:

The piping and final gas connection must be performed by a licensed plumber or gas fitter in the State of Massachusetts. Also, see Carbon Monoxide Detector requirements page 51 in this manual.

⚠ **WARNING**

This product can expose you to chemicals including Benzene, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to www.P65Warnings.ca.gov.

Note: Natural gas, in its original state, contains Benzene.

This manual contains instructions to install the **ENGINE ONLY**. A trim kit is **REQUIRED** to complete the installation. A barrier screen is provided with the trim kit. **Refer to the manual supplied with the trim for installation.**

This appliance is a domestic room-heating appliance. It must not be used for any other purposes such as drying clothes, etc.

This appliance is suitable for installation in a bedroom or bed sitting room.

Ce guide est disponible en français sur demande.



We recommend a US Certified National Fireplace Institute (NFI) specialist install our gas hearth products.



The information contained in this manual is believed to be correct at the time of printing. Miles Industries Ltd. reserves the right to change or modify any information or specifications without notice. Miles Industries Ltd. grants no warranty, implied or stated, for the installation or maintenance of your heater, and assumes no responsibility for any consequential damage(s).

© Copyright Miles Industries Ltd., 2026. All rights reserved.
Designed and manufactured for Miles Industries Ltd.

Welcome to Valor®

This appliance has been professionally installed by:

Dealer Name: _____

Phone: _____

Please read this manual BEFORE installing and operating this appliance.

Fireplace Safety	4
Specifications	6
Kits & Accessories.....	7
Approved Venting Components	8
Dimensions & Clearances.....	10
Framing.....	11
Wall Finish	11
Venting	12
Overview	12
Co-Axial	13
Typical Co-Axial Venting Components.....	13
Rear Vent—No Vertical Rise	14
Horizontal Vent Termination Location.....	15
Venting Configurations—With Vertical Rise	16
Venting Charts	17
Co-Axial Vertical Installations	18
Restrictors.....	19
Vent Conversion	20
Applications.....	20
Existing Fireplace Preparation	20
Co-Linear	21
Complete Installation Into an Existing Fireplace...21	
Partial Installation Into an Existing Fireplace	23
Installation Into an Adjacent Chimney.....	24
Co-Axial Flex	26
Preparation	28
Before Installing.....	28
Window & Burner Removal.....	29
Vent Outlet.....	30

Installation	32
Gas Supply.....	32
Liner Panels	33
Fuel Beds	34
Birch Logs Set 530VBLK.....	34
Traditional Logs Set 530VLSK	37
Driftwood Logs Set 530VDWK	40
Coal Set 530VCSK	43
Refit & Check Window.....	45
Battery Holder.....	46
Remote Control Pairing.....	47
Operation Check & Burner aeration.....	48
Accessories	49
Front and Barrier Screen	49
Handset Wall Holder.....	49
Wiring Diagram	50
Commonwealth of Massachusetts	51
Appendix A – Lighting Instructions Plate.....	52
Appendix B – Remote Control Operation	53
Appendix C – Spare Parts	57

Fireplace Safety


This manual contains very important information about the safe installation and operation of the fireplace. Read and understand all instructions carefully before installing and operating the fireplace. Failure to follow these instructions may result in possible fire hazard and will void the warranty.

Replacement manuals are available by contacting the Valor Customer Service at 1-800-468-2567, or by visiting valorfireplaces.com.

WARNING: Extremely Hot!

Heat and flammability

- Some parts of the fireplace are extremely hot, particularly the glass windows. Use the barrier screens provided or a gate to reduce the risk of severe burns.
- The glass windows can exceed 500°F at full capacity.
- Always keep the appliance clear and free from combustible materials, gasoline, and other flammable vapors and liquids.
- Be aware of hot wall surfaces! The walls directly above the fireplace can get very hot when the fireplace heats. Although safe, it may reach temperatures in excess of 200°F (93°C) depending on choice of optional accessories. Do not touch!
- Be aware of hot hearth/floor surfaces! Any projections directly around the fireplace can get very hot when the fireplace heats. Although safe, they may reach temperatures in excess of 200°F (93°C) depending on elevation of hearth. Be careful of touching these! Temperature of projection surfaces will be reduced when barrier screens are installed.
- Some materials or items, although safe, may discolor, shrink, warp, crack, peel, and so on because of the heat produced by the fireplace. Avoid placing candles, paintings, photos and other combustible objects sensitive to heat or furniture within 36 inches (0.9 m) around the fireplace.
- Solid wood flooring in front of the fireplace (if allowed) may shrink during the heating season due to heat.
- Due to its high temperatures, the appliance should be located out of traffic areas and away from furniture and draperies.
- Clothing or flammable material should not be placed on or near the appliance.

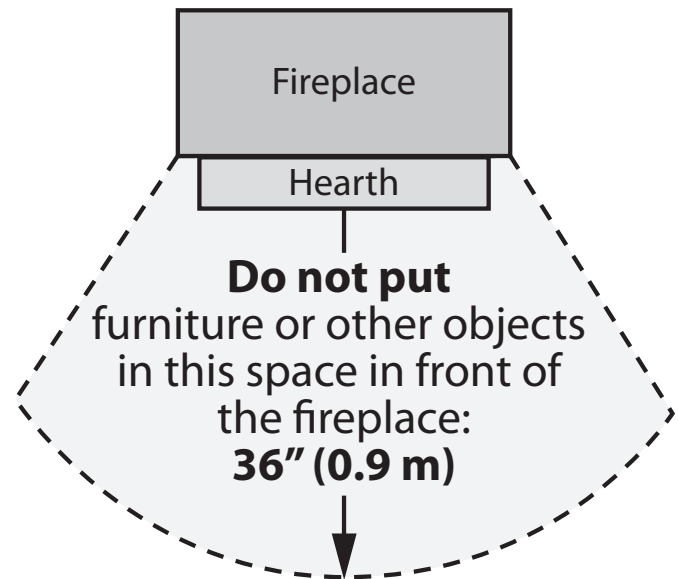

Barrier Screen and Safety

- A barrier designed to reduce the risk of burns from the hot viewing glass is provided with this appliance and shall be installed for the protection of children and other at-risk individuals.
- Children and adults should be alerted to the hazards of high surface temperature and should stay away to avoid burns or clothing ignition.
- Young children should be carefully supervised when they are in the same room as the appliance. Toddlers, young children, and others may be susceptible to accidental contact burns. A physical barrier is recommended if there are at-risk individuals in the house. To restrict access to a fireplace or stove, install an adjustable safety gate to keep toddlers, young children, and other at-risk individuals out of the room and away from hot surfaces.
- Any safety screen, guard, or barrier removed for servicing an appliance must be replaced prior to operating the appliance.

Fireplace Safety

Glass windows

WARNING

Do not operate this appliance with the glass front removed, cracked, or broken.

Do not strike or slam the glass front.

Replacement of the glass front should be performed by a licensed or qualified service person.

- The glass front assemblies must be in place and sealed before the unit can be placed into safe operation.
- The glass front assemblies must only be replaced as complete units, as supplied by the fireplace manufacturer. No substitute material may be used.
- Do not use abrasive cleaners on the glass front assemblies. Do not attempt to clean the glass when it is hot.

Venting

- This unit must be used with a vent system as described in this manual. No other vent system or components may be used.
- Never obstruct the flow of combustion and ventilation air. Keep the front of the appliance clear of all obstacles and materials for servicing and proper operation.
- This gas fireplace and vent assembly must be vented directly to the outside and must never be attached to a chimney serving a separate solid fuel burning appliance. Each gas appliance must use a separate vent system. Common vent systems are prohibited.

Intended use

- This appliance is designed and approved as a supplemental heater and provides the potential for most energy conservation when used while attended. The use of an alternate primary heat source is advisable.
- This unit is not for use with solid fuel.
- Do not use this heater as a temporary source of heat during construction.

Installation and Servicing

- Installation and repair should be done by a qualified service person. The appliance should be inspected before use and at least annually by a professional service person. More frequent cleaning might be required due to excessive lint from carpeting, bedding material, et cetera. It is imperative that control compartments, burners, and circulating air passageways of the appliance be kept clean.
- Do not use this appliance if any part has been under water. Immediately call a qualified service technician to inspect the appliance and to replace any part of the control system and any gas control that has been under water.

Specifications

Approval & Codes

This appliance is certified to ANSI Z21.88/CSA 2.33 American National Standard / CSA Standard for Vented Gas Fireplace Heaters for use in Canada and USA, and to CGA 2.17-M91 High Altitude Standard in Canada. This appliance is for direct vent installations.

This appliance complies with CSA P.4.1-15 Testing method for measuring annual fireplace efficiencies.

The installation must conform to local codes or, in the absence of local codes, with the National Fuel Gas Code, ANSI Z223.1/NFPA 54 or the Natural Gas and Propane Installation Code CAN/CGA-B149.1. Only qualified licensed or trained personnel should install this appliance.

This appliance must be electrically grounded in accordance with local codes, or, in the absence of local codes, with the National Electrical Code, ANSI/NFPA 70 or the Canadian Electrical Code, CSA C22.1.

Ratings

Model	530VN	530VP
Gas	Natural	Propane
Altitude (Ft.)*	0-4,500 feet*	
Input Maximum (Btu/h)	20,500	19,500
Input Minimum (Btu/h)	12,000	11,000
Manifold Pressure (in w.c.)	3.5"	9.5"
Minimum Supply Pressure (in w.c.)	5.0"	11.0"
Maximum Supply Pressure (in w.c.)	10"	14"
Main Burner Injector Marking	DMS #44	DMS #55
Pilot Injector Marking	BL22N	BL14LP
Min. Rate By-Pass Screw	175	105

*High Altitude Installations

Input ratings are shown in BTU per hour and are certified without deration for elevations up to 4,500 feet (1,370 m) above sea level.

For elevations above 4,500 feet (1,370 m) in USA, installations must be in accordance with the current ANSI Z223.1 and/or local codes having jurisdiction. Heating value of gas in some areas is reduced to compensate for elevation—consult your local gas utility to confirm.

For installations at elevations above 4,500 feet (1,370 m) in Canada, please consult provincial and/or local authorities having jurisdiction.


Supply Gas

Heater engine 530VN is used with natural gas.

Heater engine 530VP is used with propane gas.

The supply pressure must be between the limits shown in the Ratings table.

The supply connection is 3/8" NPT female located at the left side of the control valve. The opening for the gas supply line is at the rear left corner of the appliance.

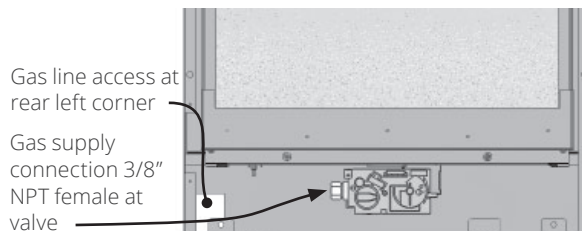

Gas Conversion

The 530 fireplace is offered with natural gas or propane gas. It can be converted from one gas to the other. See installation manual supplied with the gas conversion kit for more information.

Fuel Beds

The 530 engine can use a simulated logs, coals, or driftwood fuel bed with natural gas or propane.

Electrical

The 530 does not require an electrical power source unless fitted with an optional circulating fan.



WARNING

**NO ELECTRICAL CONNECTION ALLOWED
for any outdoor installation!**

Outdoor Conversion Kit

The 530 model is supplied standard for indoor applications and may be adapted for installation in specific "outdoor" applications protected from weather as defined in the GV60CKO Outdoor Conversion Kit manual.

Specifications

Floor/Hearth

This appliance is approved for installation directly on combustible material such as plywood. When the appliance is installed directly on carpeting, tile or other combustible material other than wood flooring, the appliance shall be installed on a metal or wood panel extending the full width and depth of the appliance.

This appliance does not require a hearth. Combustible flooring may extend up to the front of the unit.

Front Trims/Stove

Various fronts are available for the 530 engine. This engine may be installed as a free standing, zero clearance or insert application depending on which style front trim is selected. **The front trim/stove style affects the framing cavity. A front trim kit is required for all applications and should be on site when the engine is installed** as the parts to make the engine suitable for zero clearance are supplied with the front trim kits (except 549 front).

Kits & Accessories

Required Kits

Fuel Beds (choose one)		
530VLSK	Traditional Logs	
530VBLK	Birch Logs	
530VCSK	Coals Set	
530VDWK	Driftwood Logs	
Liner Sets (choose one)		
526RL	Reversible Liner Panels	
580RGLV2	Reflective Glass Liners	
Fronts/Stove (choose one)		Barrier Screen
Zero Clearance Installations		
536CXB	President ZC Front	4006382
539AF v2	Windsor Arches	4003290
545CFVZC	Clearview ZC Front	4005146
563CSB	Senator Front	4003291
Insert Installations		
536CXBI	President Insert Front (closure plate 582 or 583 required)	4006382
582CPB	Closure Plate, black, 26" w x 31" h	
583CPB	Closure Plate, black, 30" w x 33" h	
545CFV	Clearview Insert Front (583 optional)	4005146
546LF	Ledgeview Insert Fronts	4005099
539/549AF v2	Windsor Arches	4003290
Free Standing Stove Installations		
531CSB	President Stove FS	4006382
Venting Components		
See Approved Venting Components list next pages.		

Optional Accessories

Gas Conversion Kits	
530VNGK	Conversion to natural gas
530VPGK	Conversion to propane gas
Other Accessories	
GV60CKO*	Outdoor Fireplace Conversion Kit
583CPB	Closure Plate, black, 30"w x 33"h (optional with 545CFV)
567FGP	Top Grille
555CFK*	Circulating Fan Kit
1265WSK	Wall Switch Kit
RBWSK	Remote Battery & Wall Switch Kit
GV60PAK	AC Adapter
Hearth Gate	Hearth gates such as Cardinal's VersaGates are available at retail stores carrying safety products for children.



WARNING

*** NO ELECTRICAL CONNECTION ALLOWED for any outdoor installation!**

Information accurate at the time of printing and subject to change without notice.

Approved Venting Components

Approved Direct Vent Suppliers for Valor Models 530							
Venting Parts Description		Venting Parts Code / availability by Manufacturer					
		DURA-VENT	SELKIRK	ICC EXCEL DIRECT	MILES INDUSTRIES	BDM	
Termination Caps	Horizontal	Standard Co-axial	46DVA-HC	4DT-HC	TM-4HT	658DVK2	DVR6-HCP
		Deluxe Co-axial	—	—	TM-4RHT	—	DVR6-HC
		High Wind Co-axial	—	—	—	—	—
		Co-linear	—	—	—	720SWK	—
	Vertical	Standard Co-axial	46DVA-VC	4DT-VT	—	—	DVR6-VCH DVR6-VCSB
		High Wind Co-axial	46DVA-VCH	—	TM-4SVT	—	—
		Extended Co-axial	46DVA-VCE	—	—	—	—
		Co-linear	46DVA-CL33 46DVA-CL33H 46DVA-33P	—	TM-IVT	559CLT	940033B 940033HWS 940033RD
Vent Adapters	Valor Adapter	817VAK	—	TM-4AA2	—	—	—
	Adapter for Sidewall Terminal MTO-4 or MTO-4F	—	—	—	DVA-M4/7 w/DuraVent venting only	—	—
	Co-linear Flex Connector	46DVA-ADF	—	—	—	—	—
	Co-axial-to-Co-linear Adapter	46DVA-GCL 46DVA-CLAA	—	TM-4CAA	556CLA	DVR6-A33	—
	Co-linear-to-Co-axial Adapter	46DVA-GK 46DVA-CLTA	—	TM-4CTA	—	—	—
	Co-axial-to-Co-axial flex Adapter	—	—	—	590CFA (5" x 3")	—	—
	DV to B-Vent Adapter	—	—	—	DVA5BV	—	—
Aluminum Flexible Liner	3" diameter	NOTE: 2-ply liner approved to CAN/ULC S635 suitable for venting gas appliances. As manufactured by Z-Flex, Flexmasters or others.					
		2280 Series	AF3-35L	TM-ALK33 TM-ALT33	590FVK2 (5" x 3" kit)	952703	—
Adjustable Pipe Length and Pipe Extensions 4" x 6-5/8"	Galvanized or Black	46DVA-08A 46DVA-08AB (3" to 7")	—	—	—	DVR6-08A DVR6-08AB	—
	Galvanized or Black	46DVA-16A 46DVA-16AB (3" to 14-1/2")	—	TC-4DLS1 TC-4DLS1B	—	DVR6-16A DVR6-16AB	—
	Galvanized or Black	46DVA-17TA 46DVA-17TAB (11" to 17")	—	TC-4DLS2 TC-4DLS2B (1-7/8" – 21")	—	—	—
	Galvanized or Black	46DVA-24TA 46DVA-24TAB (17" to 24")	—	TC-4DLA30 TC-DLA30B (16.5" – 29")	—	—	—
	Co-axial Flex	46DVA-36FF 46DVA-60FF 46DVA-120FF	—	—	—	—	—
DV Elbows	30°	Galvanized	46DVA-E30	—	—	—	—
	45°	Galvanized	46DVA-E45 (swivel)	4DT-EL45	TE-4DE45	—	DVR6-E45
		Black	46DVA-E45B (swivel)	4DT-EL45(B)	TE-4DE45B	—	DVR6-E45B
	60°	Galvanized	46DVA-E60	—	—	—	—
	90°	Galvanized	46DVA-E90 (swivel)	4DT-EL90	TE-4DE90	—	DVR6-E90
		Black	46DAV-E90B (swivel)	4DT-EL90(B)	TE-4DE90B	—	DVR6-E90B

Approved Venting Components

Venting Parts Description			Venting Parts Code / availability by Manufacturer				
			DURA-VENT	SELKIRK	ICC EXCEL DIRECT	MILES INDUSTRIES	BDM
Pipes 4" x 6 5/8" (ID x OD)	6" long	Galvanized	46DVA-06	4DT-06	TC-4DL6	—	DVR6-06
		Black	46DVA-06B	4DT-06(B)	TC-4DL6B		DVR6-06B
	7" long	Galvanized	—	—	—	—	—
		Black					
	9" long	Galvanized	46DVA-09	4DT-09	TC-4DL9	—	DVR6-09
		Black	46DVA-09B	4DT-09(B)	TC-4DL9B		DVR6-09B
	12" long	Galvanized	46DVA-12	4DT-12	TC-4DL1	—	DVR6-12
		Black	46DVA-12B	4DT-12(B)	TC-4DL1B		DVR6-12B
	18" long	Galvanized	46DVA-18	4DT-18	—	—	DVR6-18
		Black	46DVA-18B	4DT-18(B)			DVR6-18B
	24" long	Galvanized	46DVA-24	4DT-24	TC-4DL2	—	DVR6-24
		Black	46DVA-24B	4DT-24(B)	TC-4DL2B		DVR6-24B
	36" long	Galvanized	46DVA-36	4DT-36	TC-4DL3	—	DVR6-36
		Black	46DVA-36B	4DT-36(B)	TC-4DL3B		DVR6-36B
	48" long	Galvanized	46DVA-48	4DT-48	TC-4DL4	—	DVR6-48
		Black	46DVA-48B	4DT-48(B)	TC-4DL4B		DVR6-48B
Flashings	Roof Flashing 0/12-6/12		46DVA-F6	4DT-AF6	TF-4FA	—	DVR6-AF012
	Roof Flashing 7/12-12/12		46DVA-F12	4DT-AF12	TF-4FB	—	DVR6-AF712
	Flat Roof Flashing		46DVA-FF	—	TF-4F	559FSK	DVR6-TCF
	Masonry Flashing		—	—	TF-4MF	—	—
	New Siding Flashing		—	—	—	658NSFK	—
Various Venting System Parts	Wall Thimble		46DVA-WT	4DT-WT1	TM-4WT	—	DVR6-WTU
	Storm Collar		46DVA-SC	4DT-SC	TM-SC	—	DVT68-SC
	Decorative Plate		46DVA-DC	—	TM-4TR TM-4TP	—	DVR6-DC
	Ceiling Support	Cathedral	46DVA-CS	4DT-CCS	TM-4SS	—	DVR6-CS
		Regular	—	4DT-CS	—	—	—
	Ceiling Firestop		46DVA-FS	4DT-FS	TM-4RDS	—	DVR6-CFS
					TM-CS		
	Attic Radiation Shield / Firestop		46DVA-IS	ADT-41S	TM-4AS	—	DVR6-AIS
	Wall Strap		46DVA-WS	4DTWSB	TM-WS	—	DVR6-WS
	Vinyl Siding Standoff		46DVA-VSS	4DT-VSS (before siding) 4DT-VSSB (after siding)	TM-VSS	—	DVR6-VSS
	Elbow Strap / Offset Support		46DVA-ES	4DT-OS	TM-OS	—	DVR6-ES
	Terminal Guard		46DVA-WG	—	TM-HTS	845TG	DVR6-SHRD
					TM-RHTS	658TG	

- Notes:**
1. All listed above co-axial pipes and fittings require Valor 817VAK Adapter Kit to fit Valor's smooth collars (Valor adapter 4DSC-V by American Metal Products may also be used) on 530VN/VP and 534 models.
 2. Follow instructions supplied with each manufacturer's components.
 3. Unless otherwise specified, all the parts and assemblies from the above table are to be used with 4" x 6-5/8" pipes.
 4. Do not mix components from different vent manufacturers, except those from Miles Industries which are approved to use with other manufacturer's.

Dimensions & Clearances

The dimensions and clearances vary with each applications and with the front trim installed. Refer to the installation instructions of the front trim chosen for more information.



WARNING

Some materials or items, although safe, may discolor, shrink, warp, crack, peel, and so on because of the heat produced by the fireplace. Avoid placing candles, paintings, photos, and other items sensitive to heat around the fireplace.



WARNING

HOT HEARTH/FLOOR! The hearth or floor in front of the fireplace may become very hot when the fireplace heats. Do not use the hearth as a seat or shelf. Solid wood flooring in front of the fireplace (if allowed) may shrink during the heating season due to heat.

Framing

The framing vary with each application and with the front trim installed. Refer to the installation instructions of the front trim chosen for more information.

Planning Wall Finish

Non-Combustible Materials Specifications

Non-combustible materials will not ignite and burn. Such materials are those consisting entirely of steel, iron, brick, tile, concrete, slate, glass or plasters, or any combination thereof.

Materials that are reported as passing ASTM E 136, Standard Test Method for Behavior of Materials in a Vertical Tube Furnace at 750 °C shall be considered non-combustible materials.

Combustible Materials Specifications

Materials made of or surfaced with wood, compressed paper, plant fibers, plastics, or other material that can ignite and burn, whether flame proofed or not, or plastered or unplastered shall be considered combustible materials.

Non-combustible cement board—ZC applications

With most front trims, the 530 fireplace installed in a zero clearance application will require a ½" [13 mm] thick non-combustible cement board or equivalent, to be used as a wall surface immediately above the unit—see front trim installation manual for more information.

Extending the cement board well beyond the minimum shown will help avoid cracking due to differential expansion of materials. Pre-drill cement board with oversized holes and do not over-tighten screws to avoid cracking due to heat expansion.

Standard gypsum wall board may be used beyond the perimeter of the cement board although it is preferable not to change materials to help avoid cracking.

Finishing around trims

Additional non-combustible material such as tile and others may be applied over top of the wall surface or you may choose to leave it finished clean with no tile.

Be aware that a trim is always required and that the wall finish thickness must be taken into account for all installations.

Wall Finish

Avoiding Cracking Wall Finishes


If a clean finish with no tile, etc. is desired, joints in the non-combustible board and the transition to gypsum board will require special attention if future cracking is to be controlled.

Shrinkage and differential movement of the framing and non-combustible wall board can transmit cracking through to tiles, etc.

Be aware that temperatures on the non-combustible wall surface above the appliance can exceed 185°F.

Below are some tips on how to best avoid any cracking:

- Allow materials to dry thoroughly before finishing the wall. Cement board has the ability to absorb up to 30 percent of its weight in water and may shrink as much as 1/8" over a 48" length when drying from a saturated condition. Running the fireplace for an extended period before final finishing will help drive out moisture.
- Always pre-drill screw holes through cement board and use screws with self-milling head.
- Always use mesh tape over joints.
- Always stagger joints in wall board.
- Behind joints, double up studs or use studs "on the flat" to add extra support to the joint. Adhesive on the backside of wall board behind any joints can help control differential movement.
- Use multiple, thinner coats of joint compound and allow to dry thoroughly between coats.
- Ensure framing materials are dry.
- After finishing the wall, introduce heat gradually to slowly dry any excess moisture rather than drying too fast.
- Avoid notching cement board or tiles around corners of window opening and instead provide a joint that intersects the corner.
- Avoid using large, one-piece slab of material with a cut-out in the middle as a surround for the fireplace. Expansion above the opening will cause cracking at inside corners. Provide a joint that intersects the inside corner to avoid cracking.

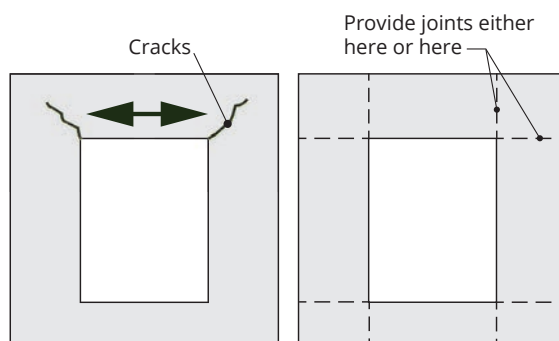

Top or Rear Facing Outlet

The 530 appliance is supplied standard with a rear facing direct vent outlet and may be converted to a top facing direct vent outlet with no extra parts required—see *Vent Outlet* page 30.

The 530 appliance is supplied with a smooth 4 x 6-5/8" co-axial collar and will require a 817VAK Vent Adapter to convert the collar to a twist-lock type collar.

Vent Material

This appliance is approved for installation using 4 x 6-5/8-inch co-axial direct vent pipe and accessories as listed in *Approved Venting Components* pages 8–9.

This appliance may also be converted to co-linear venting with two 3-inch pipes or co-axial flex with 3x5 flex pipes for use in solid-fuel burning fireplaces and chimneys using approved adapters and accessories. See *Vent Conversion* pages 20–27, and *Approved Venting Components* pages 8–9.

Follow the installation instructions supplied with the individual venting accessories.

Do not mix components from different manufacturers.


Do not cut pipe lengths; use adjustable lengths instead.

Vent Sealing

Seal all **outer** co-axial pipe and elbow joints, including sectioned **outer** elbow joints, using high quality, high temperature 2-inch wide self-adhesive aluminum foil tape (Nashua-322-2 brand or similar). Wrap the tape completely around all **outer** joints and press firmly to seal.

A high-temperature black silicone sealant may be used in the outer joints as a substitute to foil tape.

Ensure all the pipe joints have a minimum of 1-1/4 inch overlap.

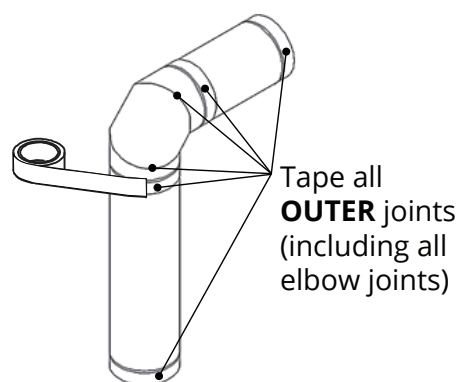

Wall Thickness

The appliance vent is suitable for penetrating a combustible wall assembly up to 14 inches in thickness. A non-combustible wall can be of any thickness up to the maximum horizontal run of vent pipe allowed for the particular installation.

Vent Penetration Through Walls & Ceilings


Combustible

When penetrating through combustible walls and ceilings, frame a minimum of 10 inches x 10 inches opening and ensure that the insulation is kept clear of the vent pipe using either a wall thimble or an attic insulation shield. Follow the installation instructions supplied with the individual venting components.

Non-combustible

If the wall is totally non-combustible (e.g. masonry block or concrete), mark for a 7-inch circular hole.

In both cases, the center of the hole should line up with the center line of the horizontal vent.

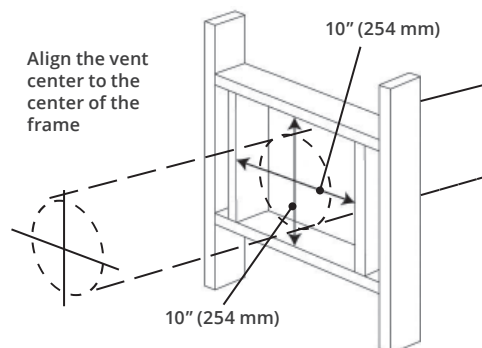



All horizontal pipe runs must be graded 1/4 inch per foot upwards in the direction of the exhaust flow. The final pipe length, when terminating through the wall may be graded downwards slightly to prevent water migration.

Co-Linear Direct Vent Installations for Free Standing or Recessed Installations (flexible piping)


Converts the appliance outlet collars to accept two 3-inch diameter flexible liners for installation into existing solid-fuel burning fireplaces and chimneys. Requires a co-linear adapter at the appliance and either a co-linear terminal or co-linear-to-co-axial terminal at the top of the chimney. Sidewall co-linear installation is also possible using a 720WSK Sidewall Terminal Kit—see instructions packed with the kit. A list of approved venting accessories is shown on pages 8-9.

Typical Co-Axial Venting Components


See venting accessories list on pages 8-9 for allowable components.

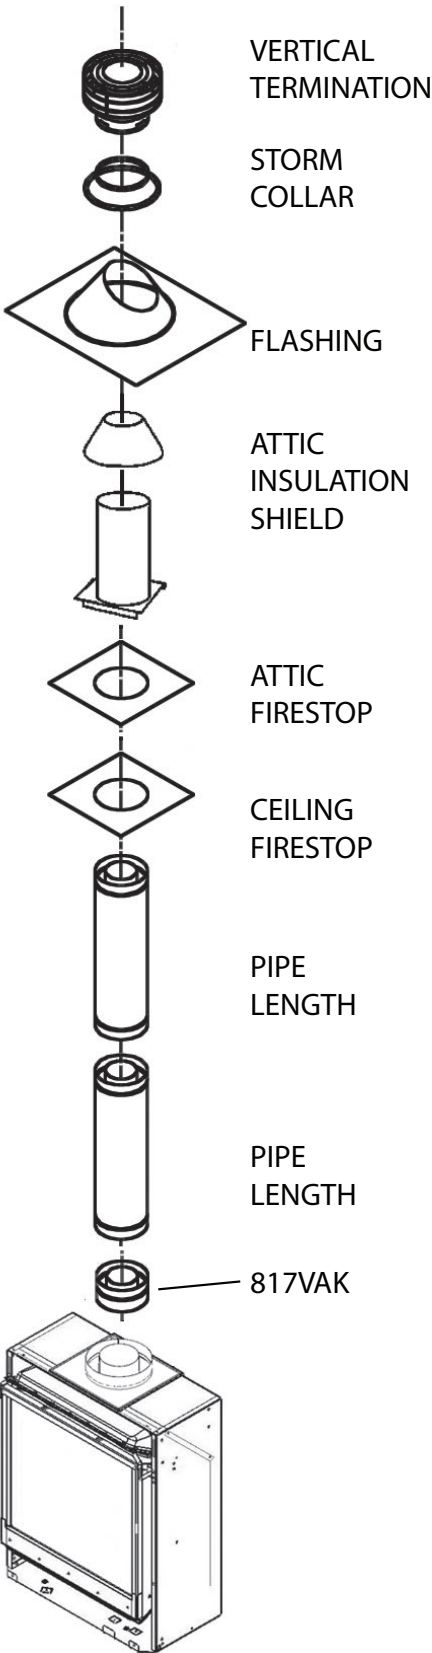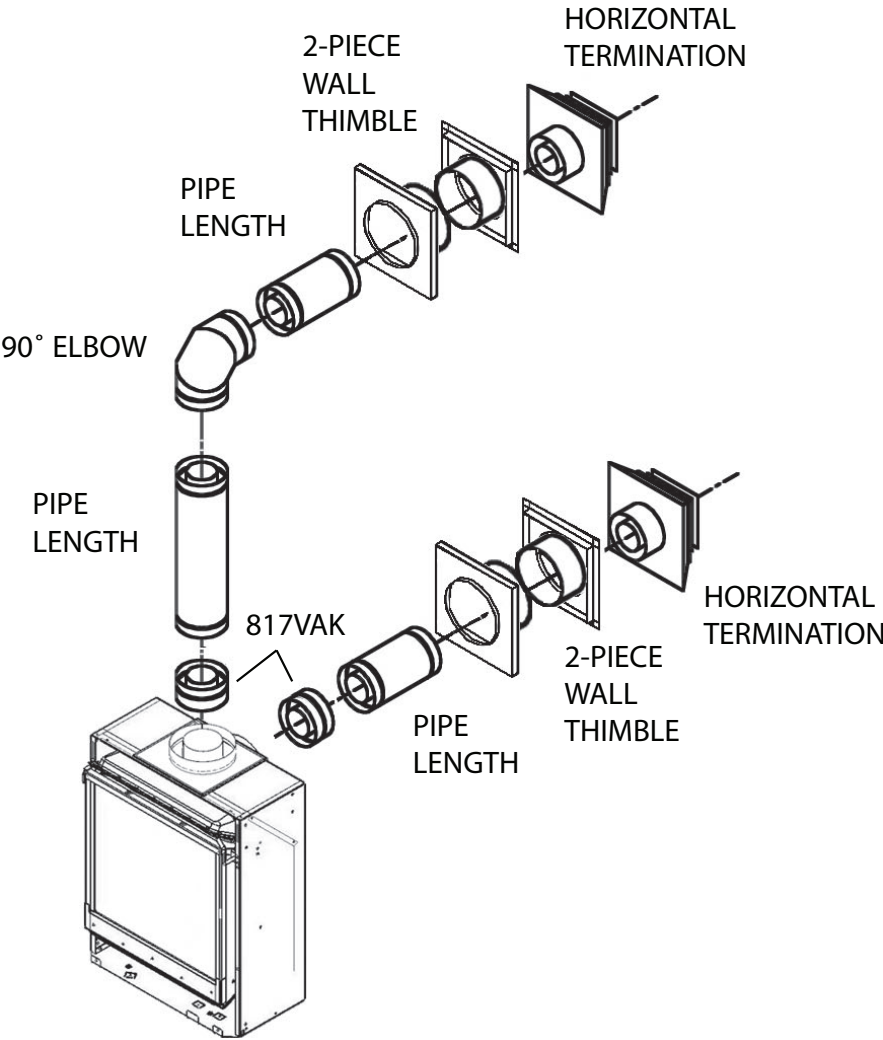

Rear Vent—No Vertical Rise

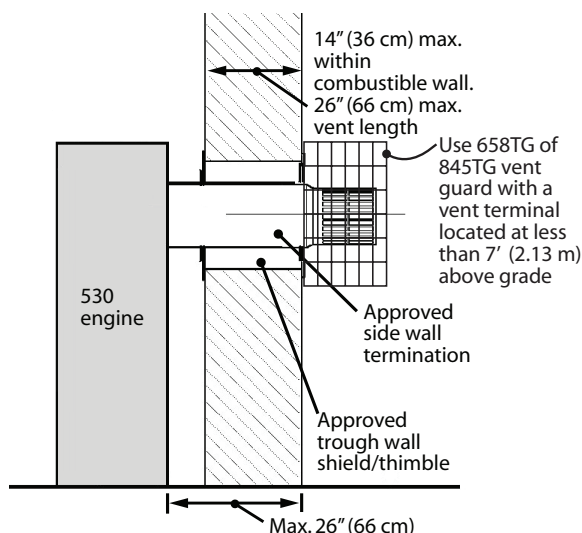

Rear vent—no vertical rise

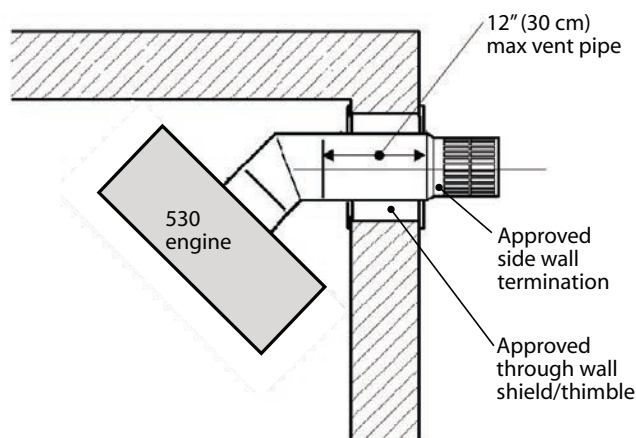

Corner rear vent—no vertical rise

Important Installer Notice—Weather Sealing & Vapor Barrier

It is the installer's responsibility to ensure that vent installations through exterior walls are caulked and weatherproofed in such a manner as to:

- Prevent rain from entering the wall from the weather side by adequately caulking the outer vent plate to the exterior wall surface.
- Prevent moisture inside the home from penetrating into the wall structure by ensuring the inside wall plate is adequately sealed to the inside vapor barrier.
- Prevent rain water and moisture from entering the walls by sealing the joints between the outer vent tube and the inner and outer wall plates.


We recommend the use of a high quality polyurethane sealant.

Horizontal Vent Termination Location

- The vent terminal must be located on an outside wall or through the roof.
- This direct vent appliance is designed to operate when an undisturbed airflow hits the outside vent terminal from any direction.
- The minimum clearances from this terminal that must be maintained when located on an outside wall are shown in figure below. Any reduction in these clearances could result in a disruption of the

airflow or a safety hazard. Local codes or regulations may require greater clearances.

- The vent terminal must not be recessed into a wall or siding.
- The vent terminal should be positioned where any snowdrifts will not cover it.
- Sidewall vent terminations require a terminal guard such as 658TG or 845TG when accessible—within 7' of ground.

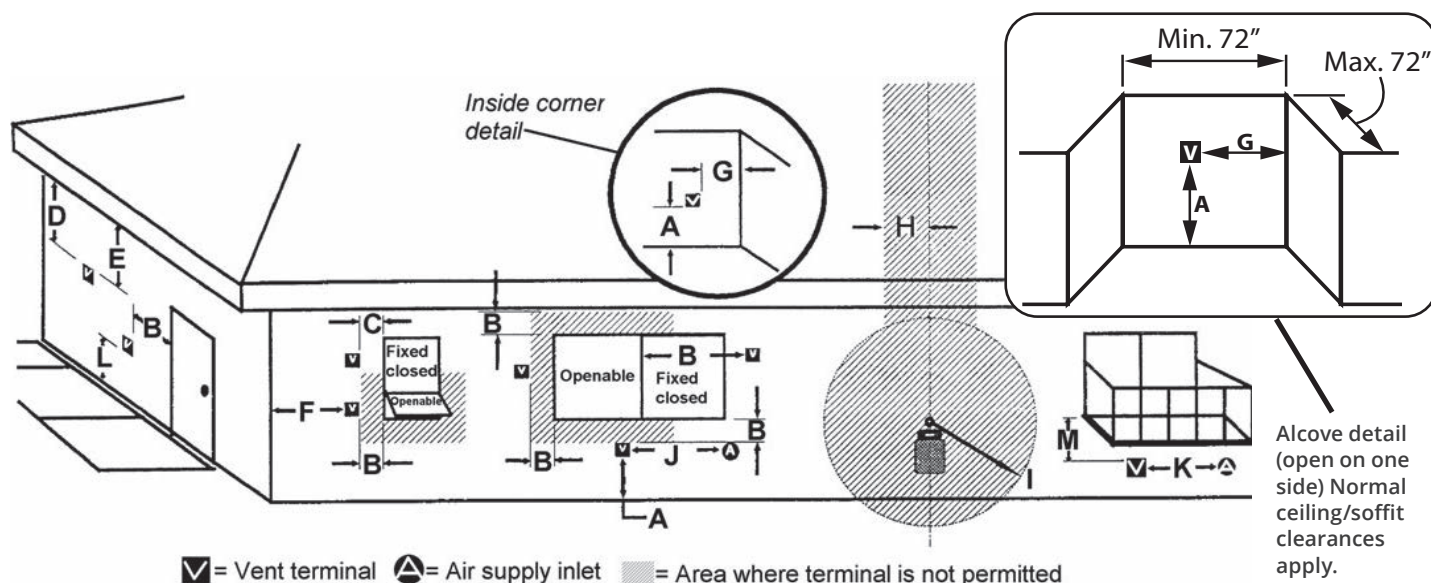


KEY	VENT TERMINAL LOCATIONS - MINIMUM DISTANCES	MINIMUM CLEARANCE	
		Inches	Cm
A	Clearance above grade, verandah, porch, deck or balcony	12	30
B	Clearance to window or door that may be opened	12	30
C	Clearance to permanently closed window (recommended to prevent condensation on window)	12	30
D	Vertical clearance to ventilated soffit located above the terminal within a horizontal distance of 2 feet (60 cm) from the center-line of the terminal	18	46
E	Clearance to unventilated soffit	12	30
F	Clearance to outside corner (measured from the center of vent)	12	30
G	Clearance to inside corner (measured from the center of vent)	12	30
H	Horizontal clearance to center-line of meter/regulator assembly located within 15 feet (4.6 m) below the terminal	36	90
I	Clearance to service regulator vent outlet	36	90
J	Clearance to non-mechanical air supply inlet to the building or the combustion air inlet to any other appliance	12	30
K	Clearance to a mechanical air supply inlet	72	180
L	Clearance above paved sidewalk or a paved driveway located on public property Note: A vent must not terminate directly above a sidewalk or paved driveway, which is located between two single-family dwellings and serves both dwellings. THIS DOES NOT APPLY to direct vent, non-condensing appliances in the Province of Ontario.	84	210
M	Clearance under a verandah, porch, deck or balcony Only permitted if veranda, porch, deck or balcony is fully open on a minimum of 2 sides beneath the floor	12	30

Note: Local codes and regulations may require different clearances.

Venting Configurations—With Vertical Rise

4 x 90° ELBOWS MAXIMUM
(or equivalent)

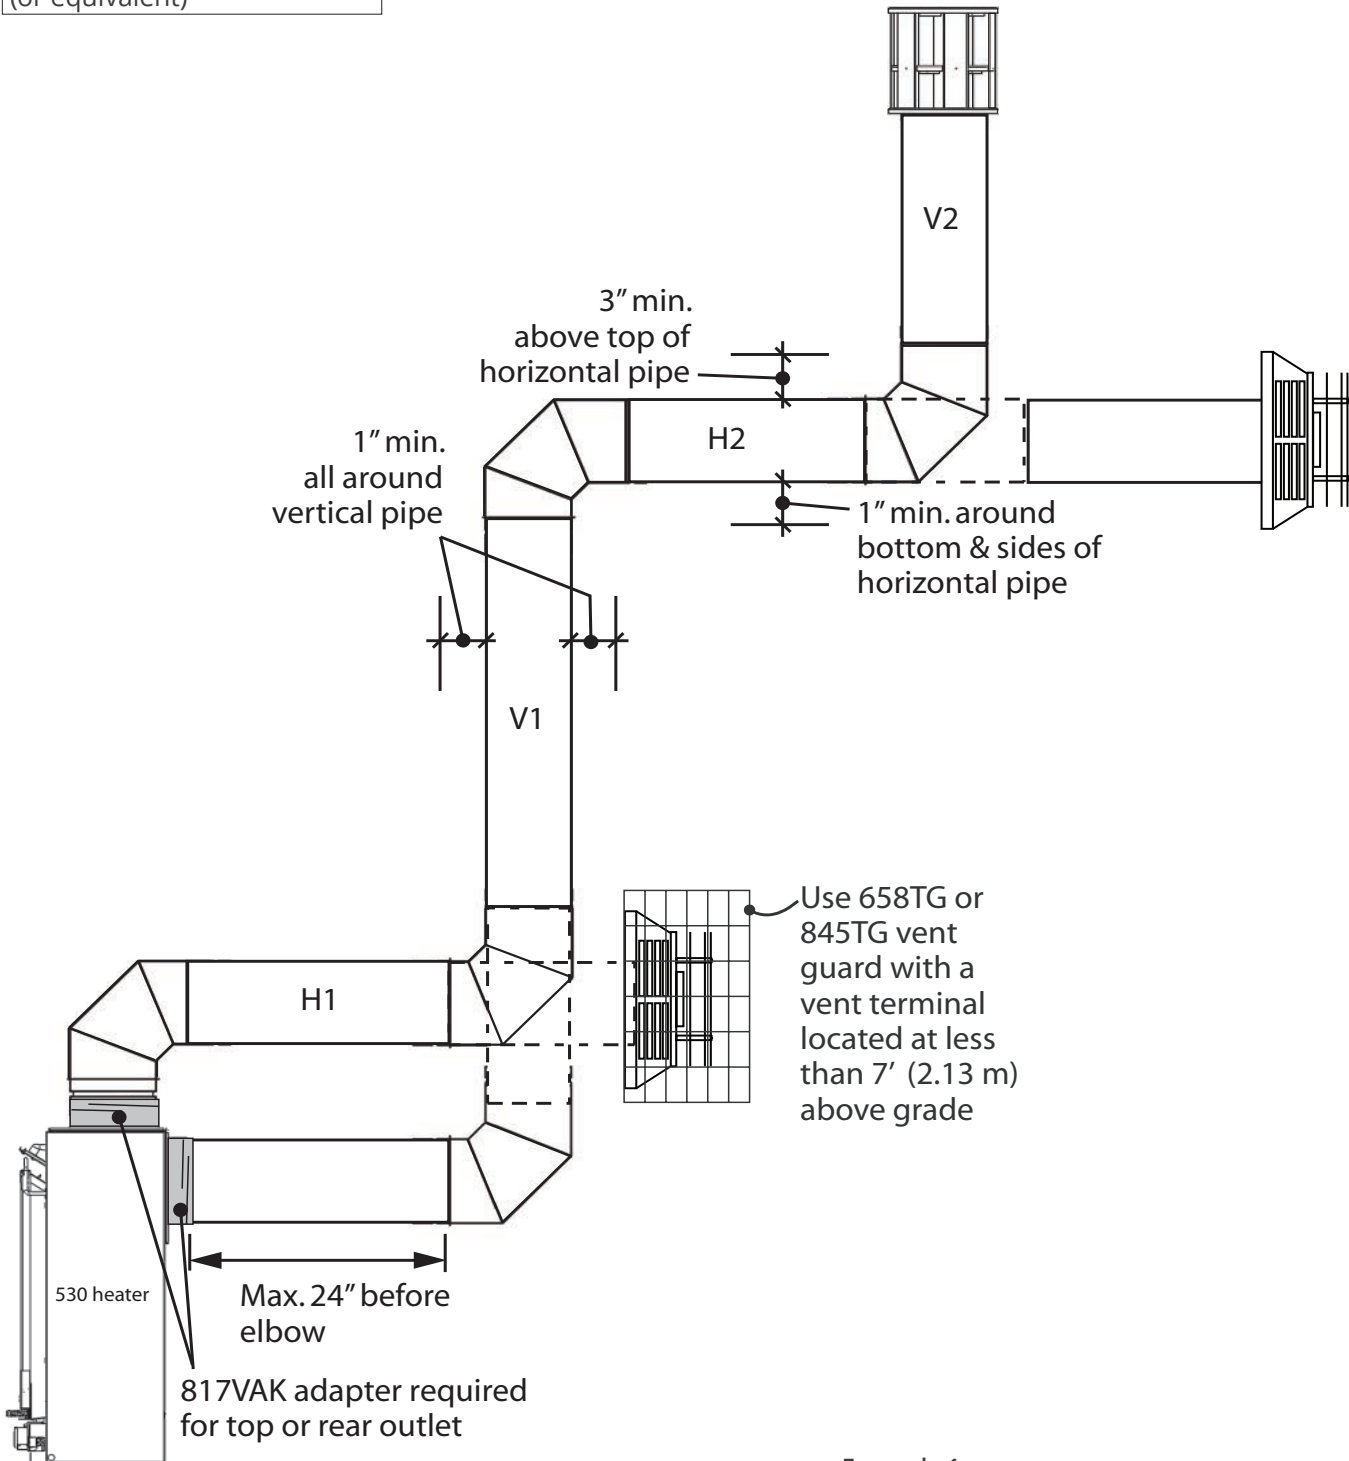


Example 1
 Value V = V1 (6') + V2 (4') = 10'
 Value H = H1 (2') + H2 (1') = 3'

How to Read the Venting Charts

The charts below apply to co-axial roof or wall termination in installations with vertical rise. See page 14 for installations with no vertical rise.

1. The total length of the vent pipe cannot exceed 40 feet.
2. The minimum vertical height with roof termination is 8 feet.
3. Any combination of rise and run can be used as long as they are within the allowable limits shown on the chart below.
4. A maximum of 4 x 90 degrees elbows—or equivalent (2 x 45 degrees = 90 degrees)—can be used.
5. Each 90 degrees elbow installed on the horizontal plane is equivalent to a 3 feet horizontal pipe; therefore, 3 feet must be subtracted from allowable horizontal run. (45 degrees elbow is equivalent to 18 inches horizontal pipe.)
6. All horizontal pipe runs must be graded 1/4 inch per foot upwards in the direction of the exhaust flow. The final pipe length, when terminating through the wall may be graded downwards slightly to prevent water migration.
7. Maximum co-linear venting is 40 feet.
8. A restrictor is required for all installations—see *Restrictors* page 19 for more information.



Venting Charts Allowable Co-Axial Vent Configurations with Vertical Rise

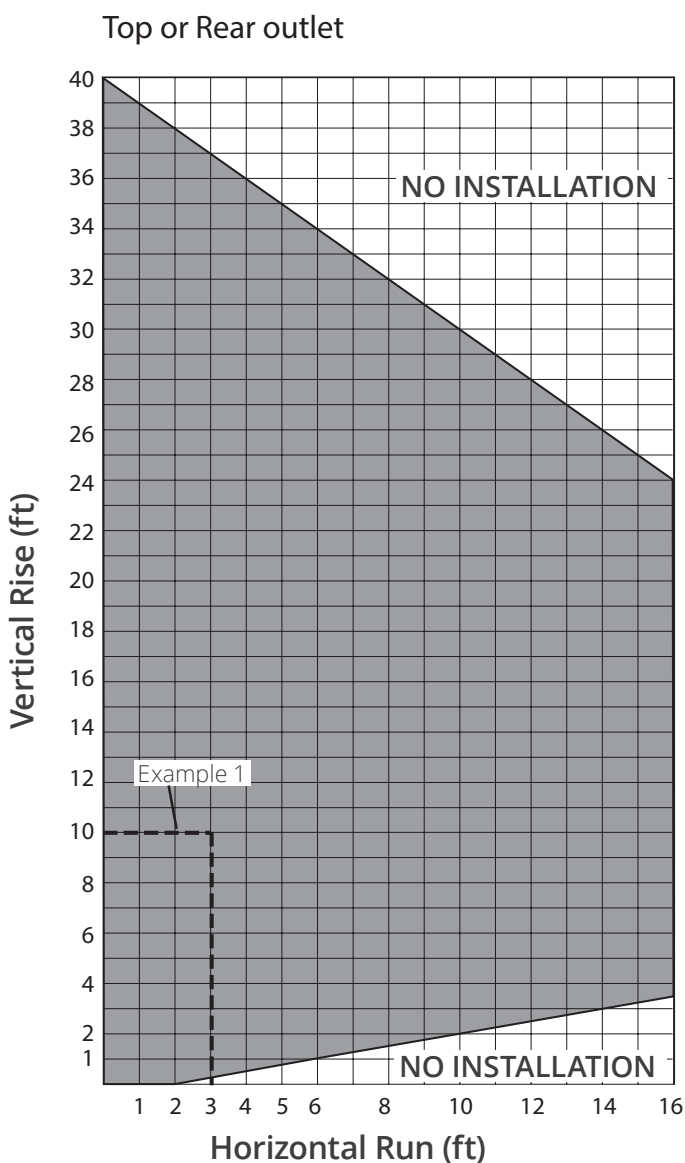

Example 1
 Value V = V1 (6') + V2 (4') = 10'
 Value H = H1 (2') + H2 (1') = 3'

Co-Axial Vertical Installations

- Check the roof pitch to determine which roof flashing will be needed. See *Approved Venting Components* pages 8–9 for allowable components.
- The distance from the roof to the lowest terminal discharge opening (“H” in figure) depends on the roof pitch and must be in accordance with the manufacturer’s instructions supplied with the termination unit.
*Note: The venting system for these appliances is considered to be **Special Venting System**. The rule in the CAN/CGA-B149 Installation Code requiring a minimum vent height of 2 feet above any portion of a building within 10 feet does not, therefore, apply.*
- The minimum clearances to combustibles materials all round the vent pipes must be in accordance with the dimensions shown in *Venting Configurations—With Vertical Rise* page 16 of this manual.
- Drop a plumb from the ceiling to the center of the appliance vent opening. Mark the position on the ceiling. Drill a small hole at the marked position.
- Determine the position where the vent will pass through the roof. If directly above the position where it penetrates the ceiling, drop a plumb from the roof to the small hole in the ceiling and mark the roof at this spot.
If rafters or other obstructions will prevent a vertical exit or if clear attic space is desired, the roof outlet can be offset using 45 degrees elbows. Drill a small hole at the marked position.
- A ceiling firestop must be installed at the second floor and higher floors.
A ceiling support should be used below the flat ceiling. To install the firestop and support, cut and frame a 10 inches (254 mm) square hole centered on the small hole previously drilled.
- Fit vent accessory elbows a pipe lengths as required up through ceiling support boxes and firestops.
If installation includes offset, support the offsetting pipes every 3 feet (1 m) with wall straps as shown.
- Cut a hole in the roof centered on the small hole. The hole must allow for the minimum clearances to combustibles materials. See Venting section in this manual.
- Fit pipe lengths through the roof. Fit roof flashing securing it with roofing nails.
- Fit storm collar and termination cap.
- **FS installations.** Secure the appliance to the floor or wall if necessary.

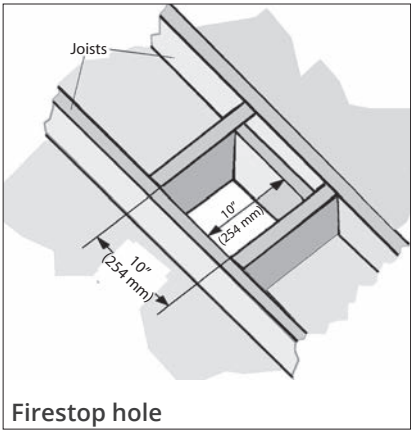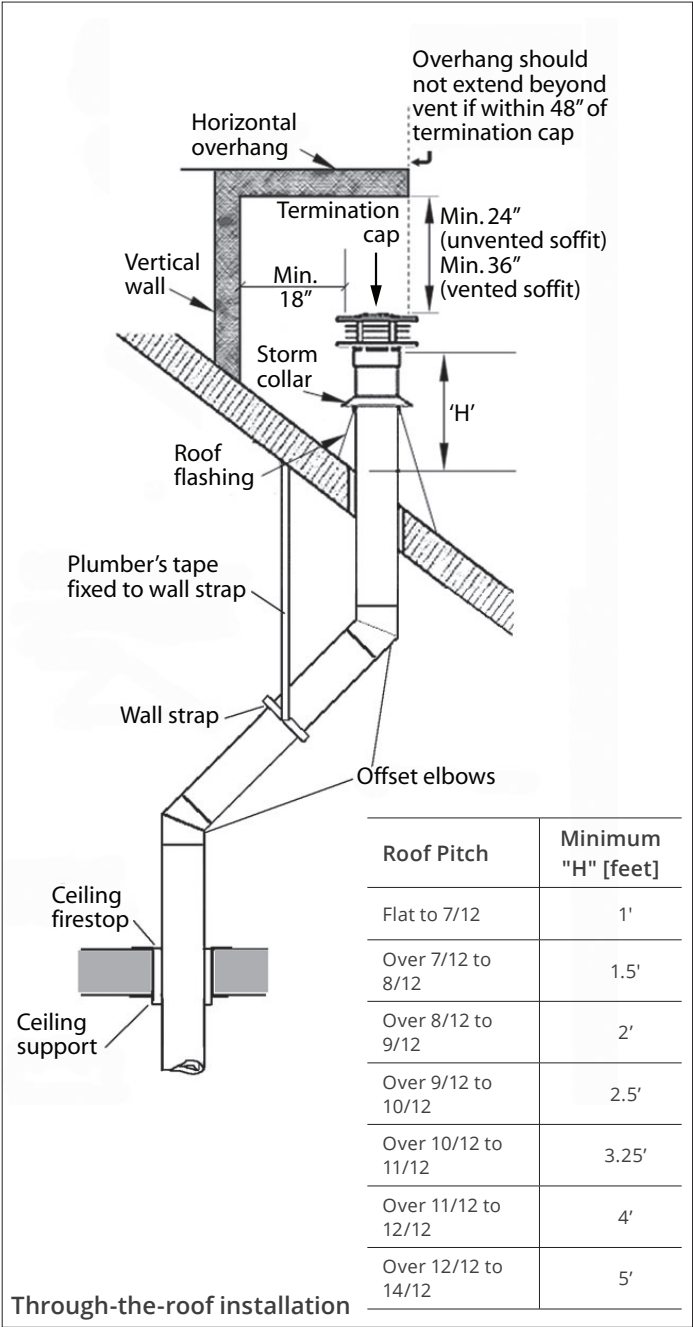

Venting

Restrictors







Install Air Restrictors—Appliances with Vertical Vent Rise Only



No restrictors are required for appliances which only have a horizontal vent run, no vertical rise. If appliance has a rear vent facing outlet connection and no vertical vent pipe rise, ignore this stage.

Two restrictor sets, like the one shown below, are supplied with each 530 appliance. The restrictors cover part of the **inlet air openings** in the firebox rear wall on each side of the brick support. **DO NOT install the restrictors in the roof of the firebox!**

Each restrictor set includes an adjustable piece which can be moved to different positions depending of the vent configuration. See the table below to find out which position is optimal for each type of installation.

- To fit the restrictors, loosen the two center screws of the left and right inlet ports. Place the restrictor assembly under the screw heads and tighten the center screws.
- To set the adjustable restrictor piece, loosen the two screws, position the adjustable piece according to the diagram below and tighten the screws.
- No restrictor means none of the pieces provided, wide open ports.

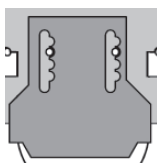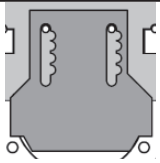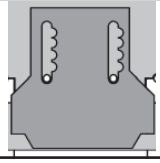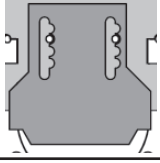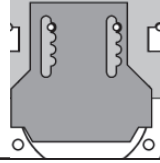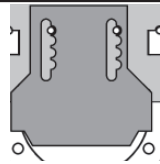Vent Size	Vent Configuration		Restrictor Setting	
	Horizontal	Vertical		
4x6-5/8" co-axial	Straight out	Less than 2 feet	None	
		2 to 10 feet	#4	
		More than 10 feet	#6	
3x5" co-axial flex		Less than 14 feet	#1	
		14 to 20 feet	#4	
		More than 20 feet	#5	
3x3" co-linear	720SWK	Less than 5 feet	None	
		More than 10 feet	#5	

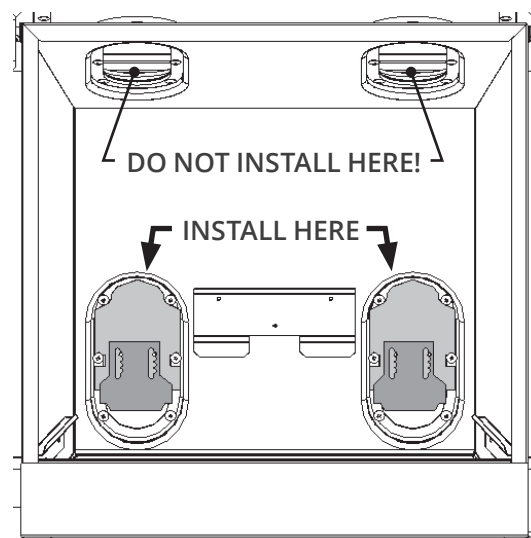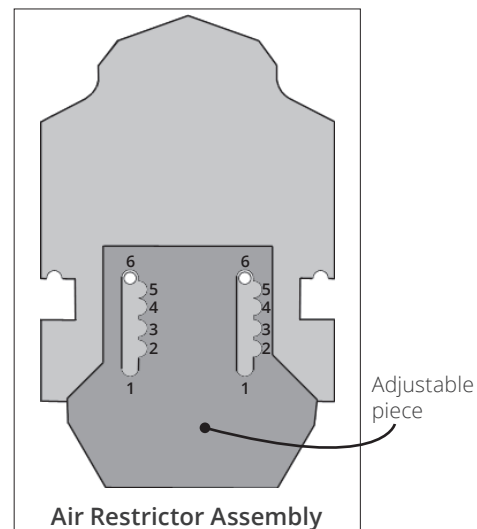

Install restrictors in the inlet air openings in the firebox rear wall

Venting

Vent Conversion

Applications

This appliance can be converted to install as a co-linear application or as a co-axial using flex pipes application. The co-linear or co-axial flex portion of the vent system may only be installed within a solid-fuel burning appliance.

This appliance must not be connected to a chimney flue serving a separate solid-fuel burning appliance.

Types of Installations

- Complete installation into an existing fireplace
 - Partial installation into an existing fireplace
 - Installation into an adjacent chimney
 - Installation in chimney using co-axial flex venting
- See the following pages for each installation details.

Rules for Co-Linear Venting

- Maximum 40 feet vertical pipe
- Minimum 8 feet vertical
- Maximum offset 8 feet with liners at minimum 45 degrees from horizontal plane
- Restrictor: See each application to confirm and set the position.

NOTE

Co-linear or co-axial flexible aluminum venting liners should be professionally inspected periodically for corrosion and damage and replaced when necessary. If the installation does not allow for future inspection or replacement of the flexible aluminum liners, then stainless steel vent liners are recommended.

Existing Fireplace Preparation

A few points must be considered before inserting the 530 into an existing fireplace cavity. Generally, no modifications are allowed to the existing fireplace that will compromise the integrity of the existing fireplace.

Cutting away any sheet metal parts of the existing fireplace to accommodate the installation of the 530 is prohibited. Check with local authorities if in doubt.

Components that are bolted or screwed on such as dampers or baffles may be removed to accommodate the installation of the 530 engine. Refractory bricks, glass doors, screen rails, screen mesh, and log grates can be also removed.

Clean Fireplace and Chimney

Have the chimney swept and the fireplace cavity including ash dumps and clean-outs cleaned before installing the 530 heater and vent liners. Any creosote or soot residue remaining in the fireplace cavity chimney or clean-out may cause odors or stains once the 530 insert is installed. Consult with chimney sweep for information on how best to clean.

Existing Dampers

Factory-built, zero-clearance fireplaces will require the damper to be removed in order to install the vent liners. These dampers are usually bolted into place. Dampers in masonry fireplaces must be fixed open and may remain in place.

Ash Retaining Curbs

Some fireplaces (particularly factory-built) have a raised curb at the front edge to retain ashes. Check the dimensions carefully to ensure the 530 engine will fit behind any raised curb (some curbs may be removed separately from the refractory base).

Gas Line Routing

Plan the routing of the gas line before proceeding. Utilize the existing hole for the gas line of the factory-built fireplace.

If the fireplace has no access hole, carefully drill an access hole of 1.5 inch (37.5 mm) or less through the lower sides or bottom of the firebox in a proper workmanship manner. This access hole must be plugged with non-combustible insulation after the gas supply line has been installed.

See *Dimensions* section for detailed location of gas inlet. Also, take into consideration whether or not a fan or shut-off valve will interfere when planning routing of the gas line.

Combustible Mantels

Combustible mantel clearances must conform to those required for the original solid-fuel fireplace into which the 530 is being installed.

Attach Warning Conversion Plate to Existing Fireplace

(Label supplied with vent adapter)

Attach the "This fireplace has been converted..." label to the existing fireplace using screws or other mechanical means and store any removed parts in back of the existing fireplace for future use.

Venting

Co-Linear

Complete Installation Into an Existing Fireplace


The appliance can be installed completely inserted into the non-combustible cavity as illustrated. In this case, the firebox zero clearance standoffs supplied with the heater are not required.

Required venting components:

- Valor Co-axial to co-linear adapter 556CLA;
- 2 lengths of 2-ply, flexible chimney liner approved for venting gas appliances:
 - 1 x 3-inch diameter for air inlet and
 - 1 x 3-inch diameter for exhaust;
- Co-linear termination kit 3 x 3 and flashing or co-linear to co-axial adapter and either high wind vertical vent terminal cap or a low profile vertical termination.


NOTES

- Dimensions shown with standoffs removed. Only for applications where the unit is fully recessed into an existing solid-fuel burning fireplace.
- Co-linear and co-axial venting may be combined in a single venting system provided conversion is done only once using approved components and maintaining proper clearances.

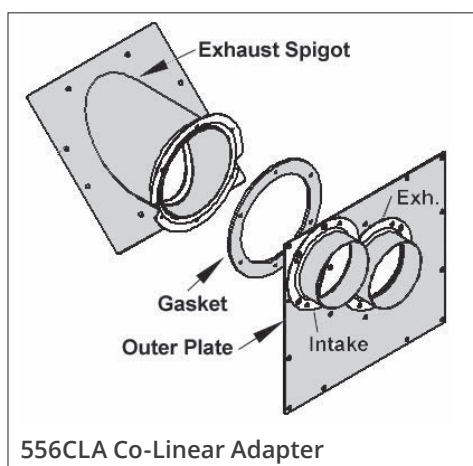


NOTE

See 556CLA installation manual for complete instructions.

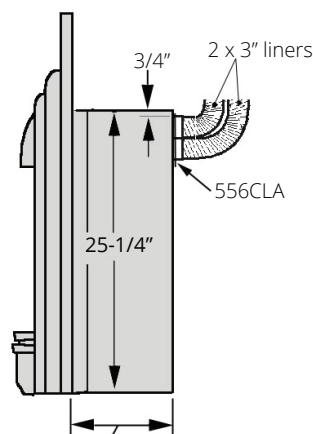


9 to 11-1/2" depending of front used - see front manual

556CLA Rear Mounted

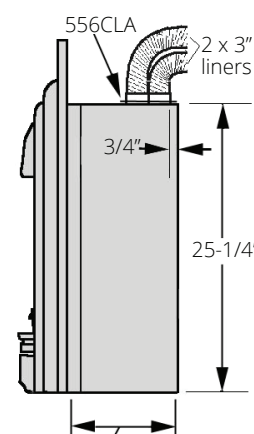

9 to 11-1/2" depending of front used - see front manual

556CLA Top Mounted

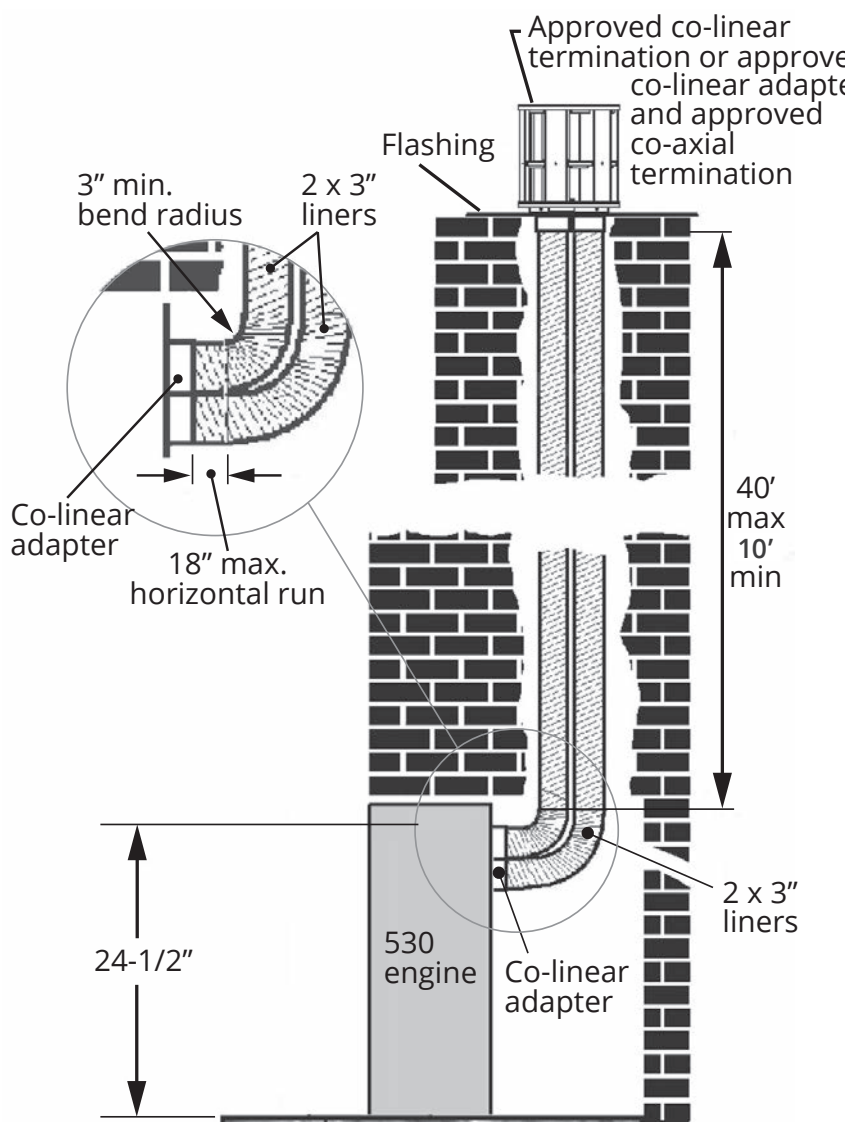

Installing Into Existing Fireplace with 720SWK

The appliance can be installed completely inserted into the non-combustible cavity as illustrated below.

In this case, the firebox zero clearance standoffs supplied with the heater are not required.


Terminal Clearances: see *Horizontal Vent Termination Location* page 15.

Required venting components:

- Valor 556CLA Co-Linear Adapter;
- Two lengths of 2-ply, 3" diameter flexible chimney liners approved for venting gas appliances;
- Valor 720SWK Sidewall Co-linear Termination kit;
- Terminal Guard such as Valor 658TG or 845TG if terminal located at less than 7'-0" of grade.
- Restrictors not required for co-linear sidewall venting with less than 5'-0" vertical rise. For restrictor settings beyond 5'-0" refer to chart on page 19.

NOTE

See 556CLA and 720SWK installation manual for complete instructions.

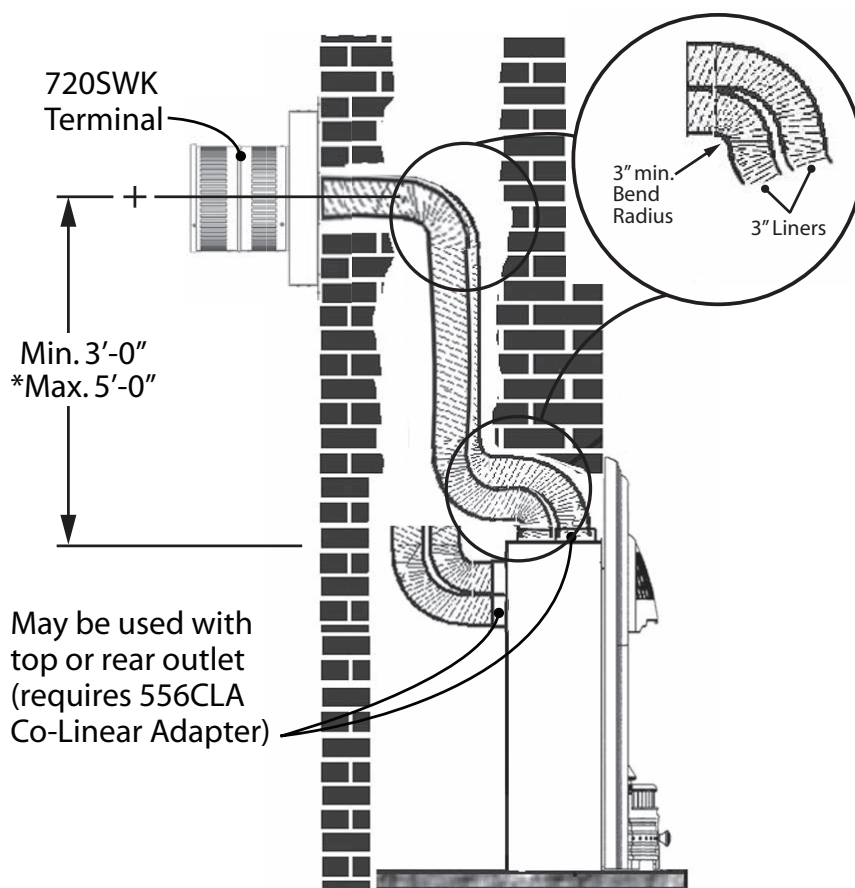

* May be extended beyond 5'-0". Refer to 720SWK installation instructions.

Venting

Co-Linear

Partial Installation Into an Existing Fireplace

The appliance can be partially inserted into the non-combustible cavity as illustrated below.

In this case, the appliance must be completely framed and maintain clearances to combustibles as shown in this manual.

Required venting components:


- Co-axial to co-linear adapter at appliance Valor 556CLA, 46DVA-GCL33 or equivalent;
- 2 lengths of 2-ply, flexible chimney liner approved for venting gas appliances:
 - 1 x 3-inch diameter for air inlet and
 - 1 x 3-inch diameter for exhaust;
- Co-linear termination kit 3 x 3 and flashing or co-linear to co-axial adapter and either high wind vertical vent terminal cap or a low profile vertical termination.
- Restrictors: refer to chart on page 19.

NOTE

Standoffs are required to maintain clearances to combustibles for the part of the appliance outside a non-combustible cavity.

NOTE

This appliance must be completely framed and maintain clearances to combustibles as shown in this manual.

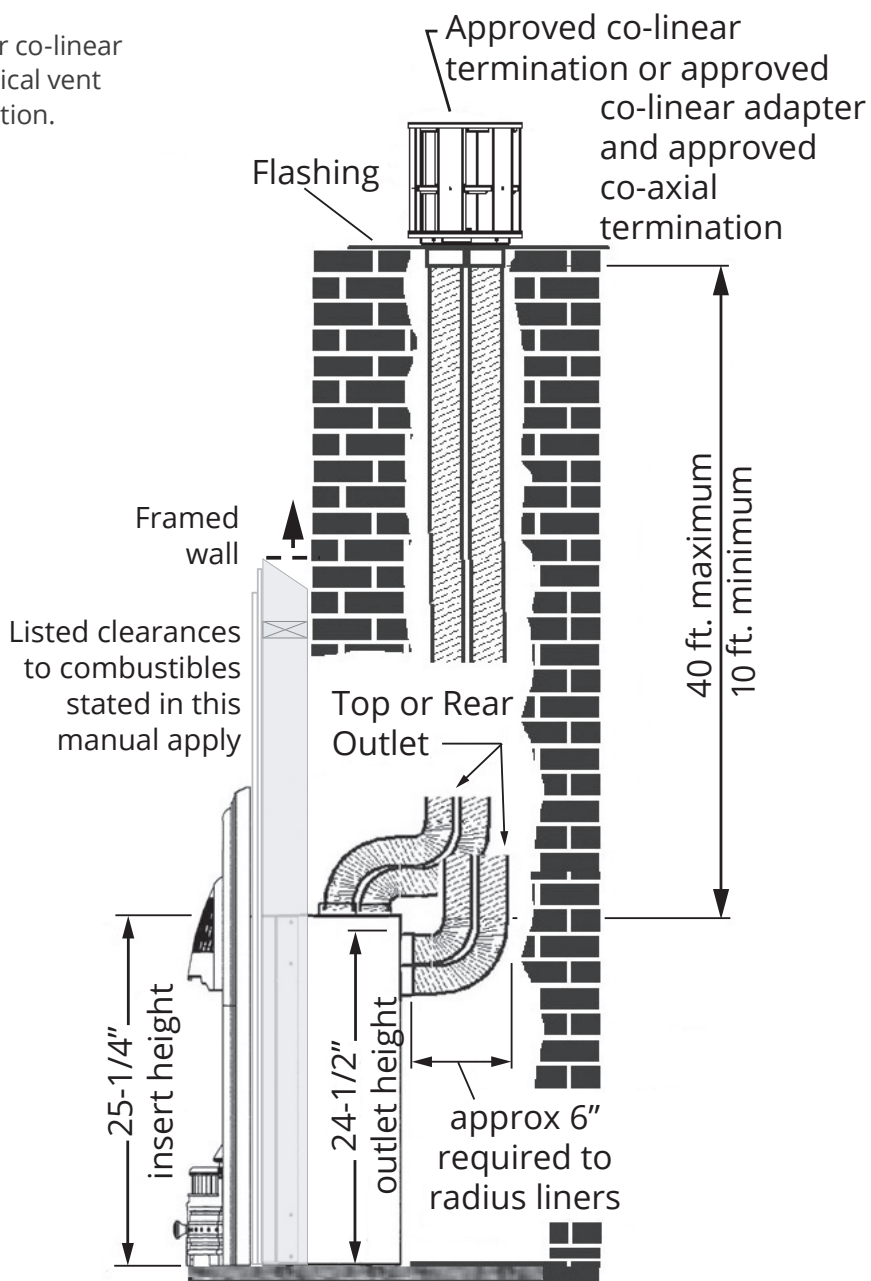

Installation Into an Adjacent Chimney

The appliance's venting system can be partially inserted into the non-combustible adjacent chimney as illustrated below.

In this case, the appliance must be completely framed and maintain clearances to combustibles as shown in this manual.

Required venting components:


- Co-axial to co-linear adapter at appliance 46DVA-33CLAA, 46DVA-GCL33 or equivalent;
- 2 lengths of 2-ply, flexible chimney liner approved for venting gas appliances:
 - 1 x 3-inch diameter for air inlet and
 - 1 x 3-inch diameter for exhaust;
- Co-linear termination kit 3 x 3 and flashing or co-linear to co-axial adapter and either high wind vertical vent terminal cap or a low profile vertical termination.
- Restrictors: refer to chart on page 19.

NOTE

Standoffs are required to maintain clearances to combustible for the part of the appliance outside a non-combustible cavity.

NOTE

This appliance must be completely framed and maintain clearances to combustibles as shown in this manual.

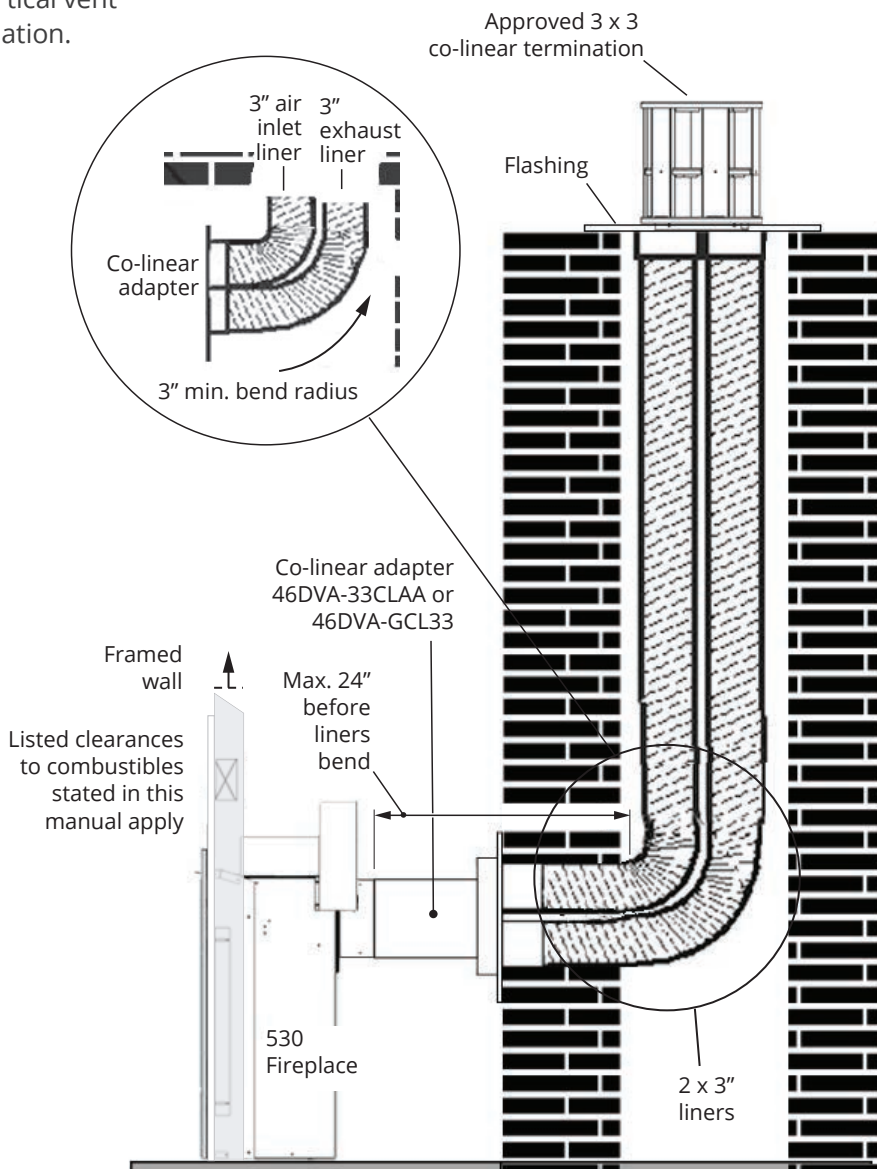


Co-axial to Co-linear Appliance Adapters



46DVA-GCL



46DVA-CLAA

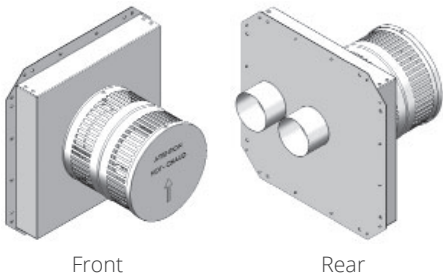


720SWK Sidewall Horizontal Terminal


Co-linear Terminal Configurations



Co-linear Kits

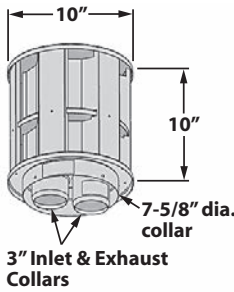


559CLT Co-linear Termination

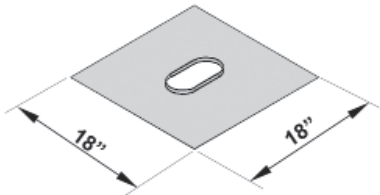

559FSK Flashing

Alternate Co-linear to Co-axial Conversion at Terminal

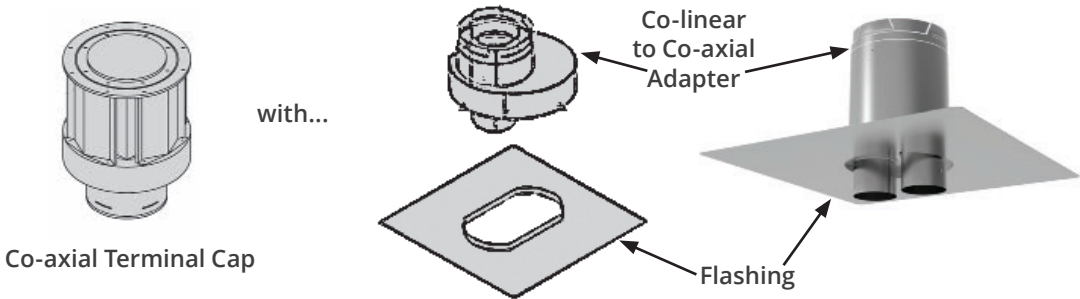

Venting

Co-Axial Flex with 590CFA & 590FVK2

Co-Axial Flex Into Existing Solid-Fuel Fireplace

The appliance can be adapted to flexible co-axial applications using an existing fireplace and cavity.

The appliance can be installed completely inserted into the non-combustible cavity as illustrated below.

In this case, the firebox zero clearance standoffs supplied with the heater are not required.

Required venting kits:

- Valor 590CFA Co-Axial Flex Adapter;
- Valor 590FVK2 Flex Vent Kit
- High wind vertical co-axial vent terminal cap or low profile co-axial vertical termination

Restrictors



See *Restrictors* page 19 of this manual.

NOTE

See 590CFA and 590FVK2 installation manuals for complete instructions.

NOTE

Flex liners must only be installed within a solid-fuel burning fireplace and chimney.

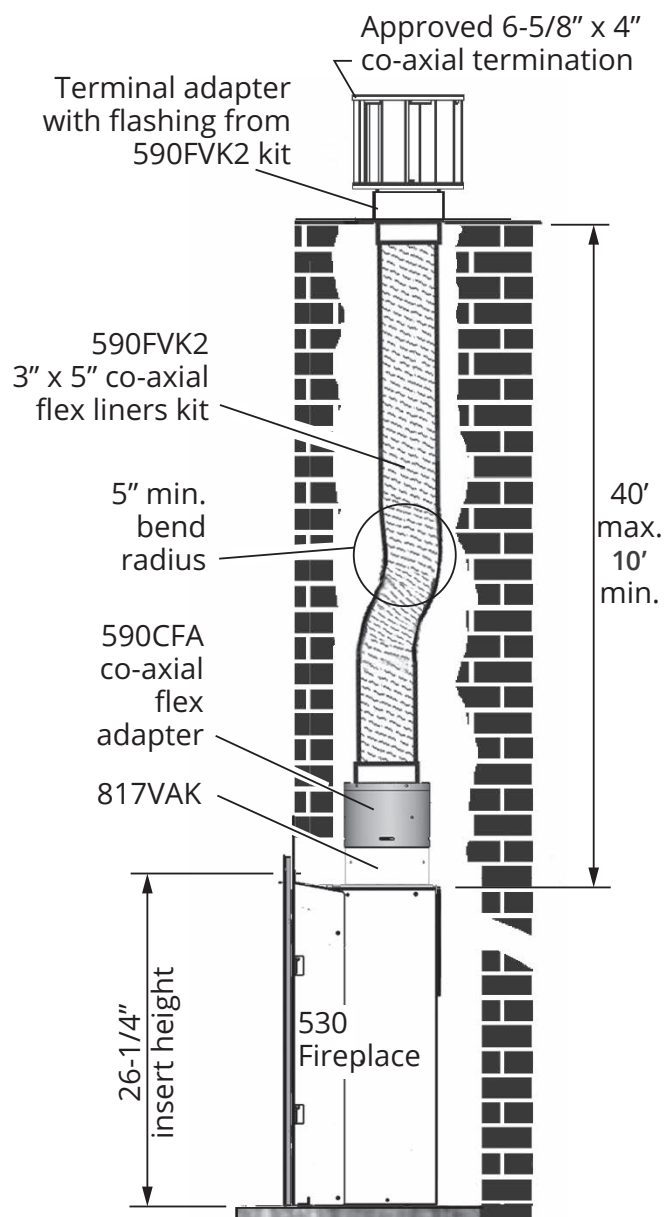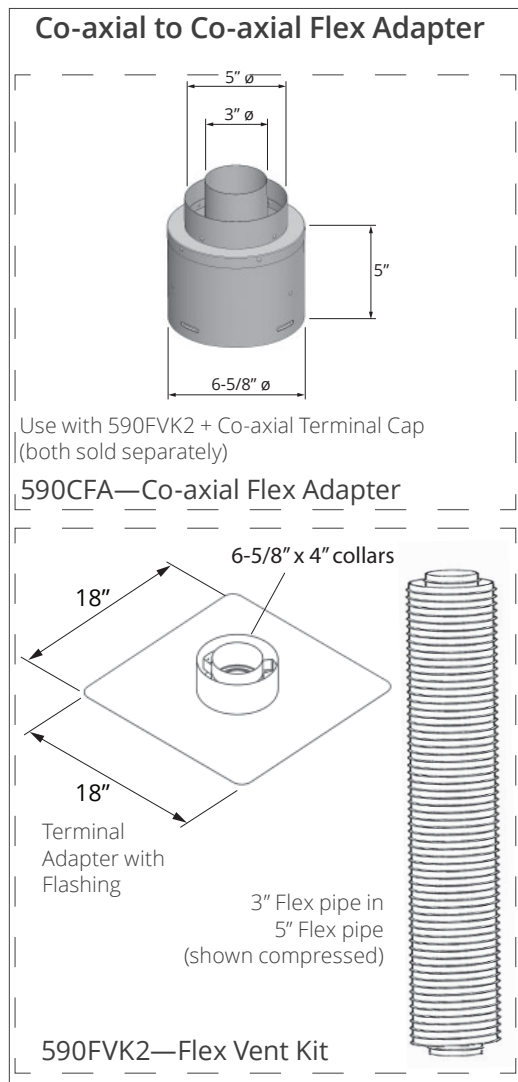

Venting

Co-Axial Flex with 590CFA & 590FVKV2

Co-Axial Flex Into an Adjacent Chimney

The appliance can be adapted to flexible co-axial applications using an existing fireplace and cavity. The appliance can be vented through an adjacent existing non-combustible chimney as illustrated below. In this case, the appliance must be completely framed and maintain clearances to combustibles.

Required venting components:

- Valor 590CFA—Co-axial vent adapter 4 x 6-5/8 to 3 x 5;
- Valor 590FVK2—Flex Vent Kit;
- High wind vertical co-axial vent terminal cap or low profile co-axial vertical termination.

Restrictors

See *Restrictors* page 19 of this manual.

NOTE



Flex liners must only be installed within a solid-fuel burning fireplace and chimney.

NOTE

This appliance must be completely framed and maintain clearances to combustibles as shown in this manual.

NOTE

See 590CFA and 590FVK2 installation manuals for complete instructions.

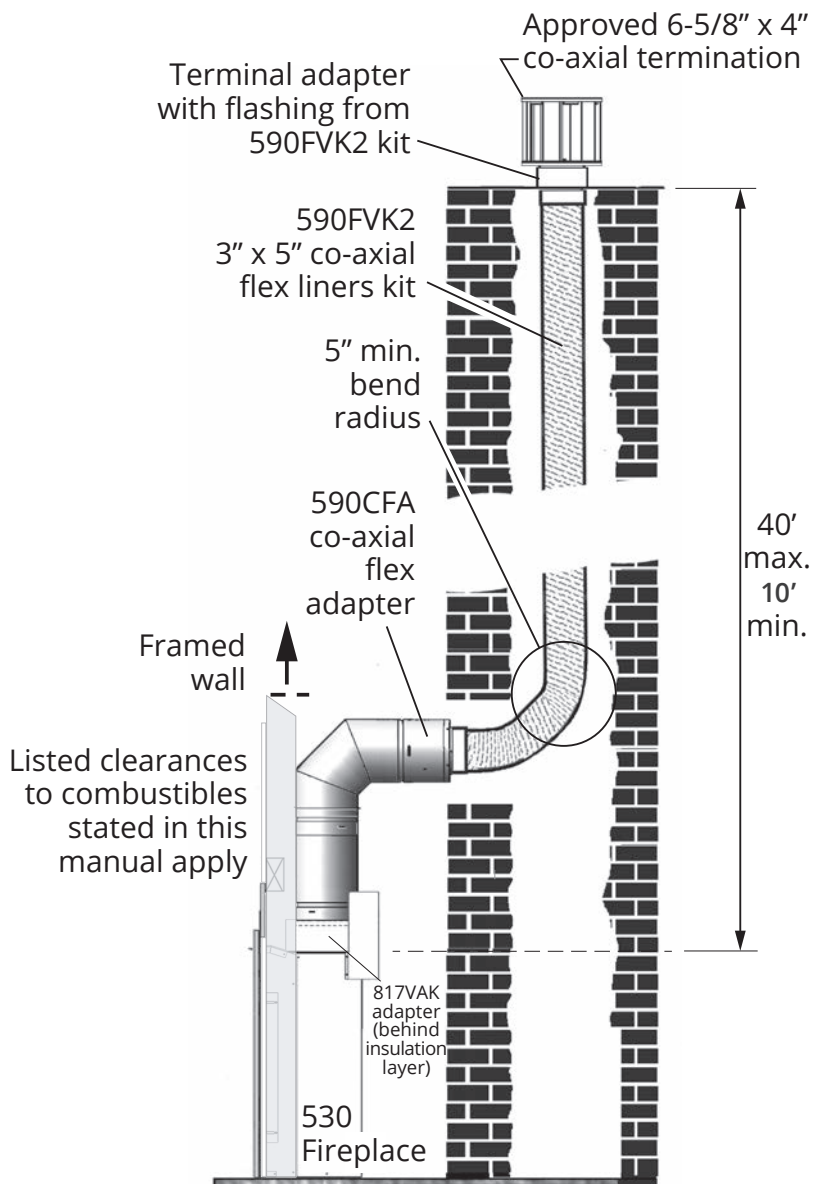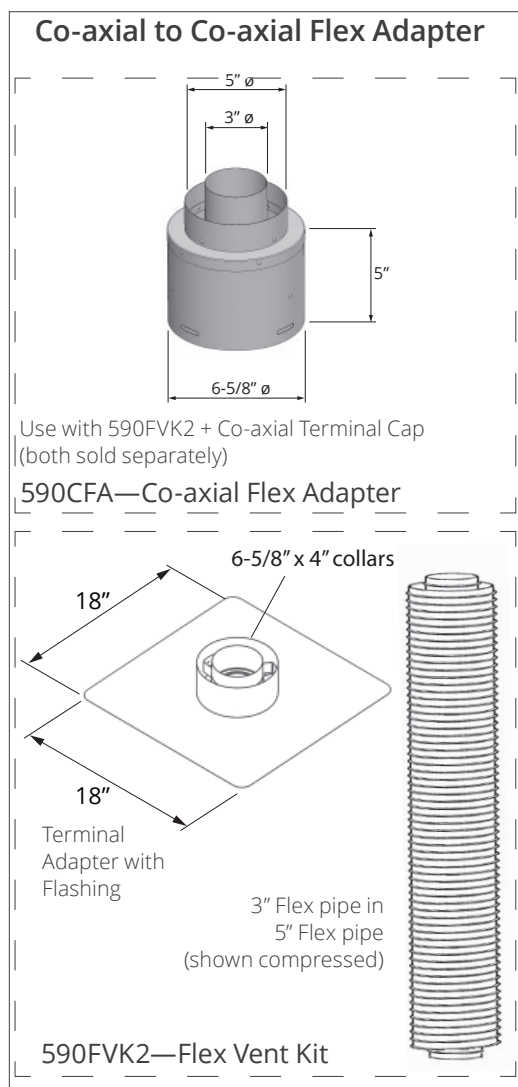



Attention

ONLY qualified licensed or trained personnel should install this appliance.

1. **BEFORE YOUR START, YOU NEED TO KNOW FROM THE HOMEOWNER:**
 - Required accessories to install with fireplace (liners, fuel bed, front, trim);
 - Height of appliance and hearth, if used;
 - Thickness and type of wall finish around appliance's opening;
 - Venting configuration;
 - Optional accessories, if used.
2. Unpack the appliance, removing all items packed inside and around it. Recycle packaging.
3. Check that you have everything required for the installation, using the Pack Content sheet. Also, check that you have:
 - Fuel bed/liner panels (packed separately);
 - Front/trim/stove casing with barrier screen;
 - Venting accessories;
 - Gas conversion kit, if necessary;
 - Optional accessories;
 - Electrical accessories, if necessary.
4. **Carefully read the Installer's Checklist included with the fireplace for the installation sequence. Read also this manual and the fronts/trims manuals to have all information necessary for the installation.**




WARNING

Optional electrical accessories ARE NOT ALLOWED when adapting appliance for outdoor use.

Preparation

Remove Window

1. Release the top of the window by pulling forward the two levers at the top corners.
2. Unscrew the two spring-loaded bolts securing the bottom of the window.
3. Carefully lift the window away. Keep the window and bolts in a safe place.

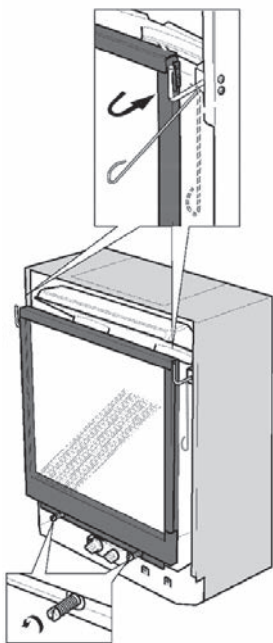


Window & Burner Removal


Remove Burner Module

It may be desirable to remove the burner module to gain access for gas fitting, to install a fan kit or to fasten the appliance to the floor or plinth supplied with the zero clearance fronts.


1. Remove the burner cover (2 screws).

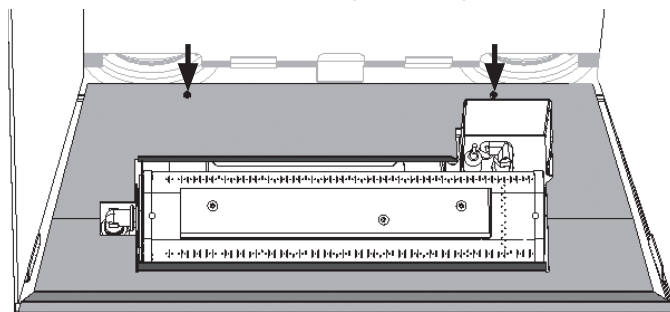

2. Remove the platform support bracket (2 screws).

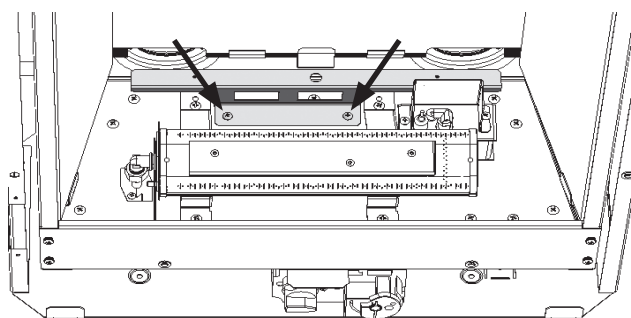

3. Detach the burner module (11 screws) and pull it straight out of the firebox, as it is necessary to access the by-pass screw on the valve.
If the appliance has been burned previously, it may be necessary to pry the burner module gaskets as they tend to adhere when removed the first time.

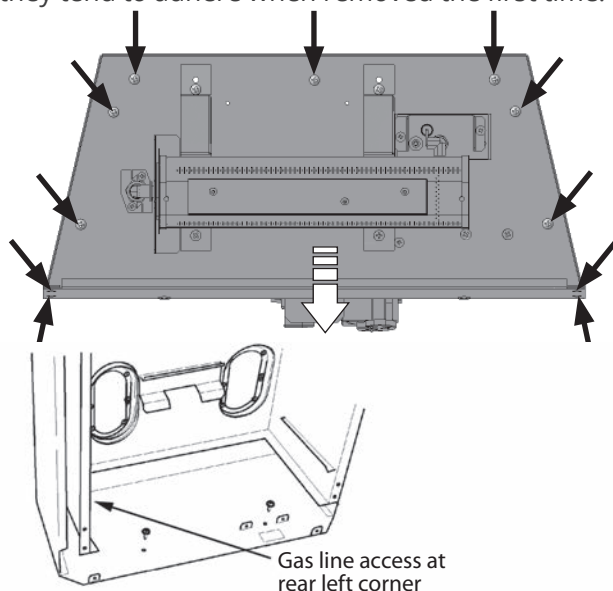


Preparation

Vent Outlet

Convert from Rear Facing to Top Facing Vent Outlet (co-axial venting)


If installing with rear facing vent outlet, ignore this stage.

1. Remove the top plate and seal by unscrewing 12 screws. Keep the seal, plate and screws for fitting to the back.
2. Remove the rear outer vent collar and seal by unscrewing 12 screws.
3. Remove the rear inner vent collar and seal by unscrewing 8 screws.

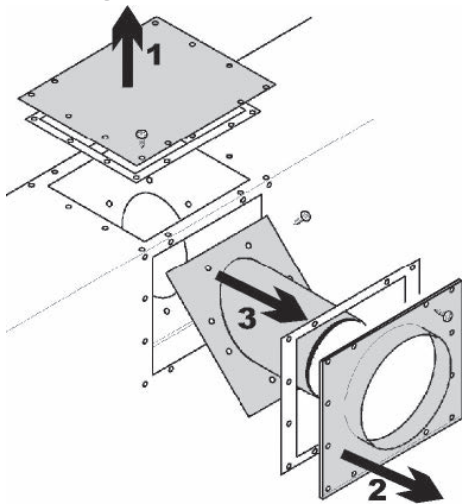

4. To make sure that the collars are axially aligned, fit the adapter 817VAK over the outer vent collar.
5. Position the inner collar and seal vertically inside the top of the appliance. Drop the outer collar with adapter over the inner collar to ensure alignment. Secure the inner collar with 8 screws and the outer collar with 12 screws.

6. Fit the plate and seal (which was previously removed from the top) to the back of the appliance with 12 screws.

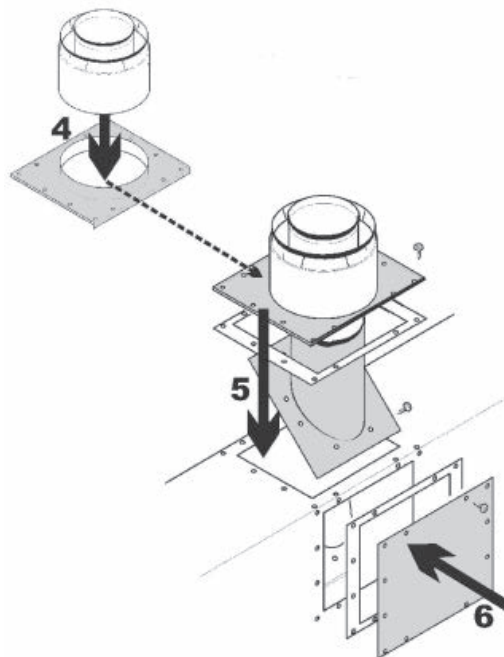


Prepare Vent Outlet

Co-axial Installations

817VAK Adapter required

1. Fit the adapter 817VAK over the appliance vent collars pushing on firmly. Align the adapter so that the seam on horizontal pipes is not at the bottom—check by temporarily fitting a pipe.
2. Drill through the adapter outer tube and appliance outer collar for #6 screws.
Make sure that the drill does not penetrate the inner tubes.
3. Secure the adapter to the outer collar with two #6 thread cutting screws supplied.

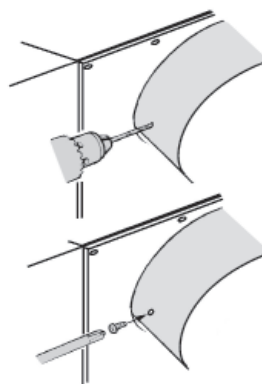

Preparation

Vent Outlet


Co-linear Installations

With 556CLA Co-Linear Adapter

See installation instructions provided with the adapter for all details.


Listed Generic Adapter Box / 817VAK Adapter

1. Fit the adapter 817VAK over the appliance vent collars pushing on firmly.
2. Fit and fully twist-lock the co-axial-to-co-linear adapter box to the 817VAK adapter.
3. Keeping the 817VAK and co-linear adapter fully twist-locked, rotate them so that the air inlet collar on the co-linear adapter is at the bottom.
4. Drill through the 817VAK adapter outer tube and appliance outer collar for no. 6 screws.
Make sure the drill does not penetrate the inner tubes.
5. Secure the 817VAK adapter to the appliance's outer collar with two no. 6 thread cutting screws supplied.

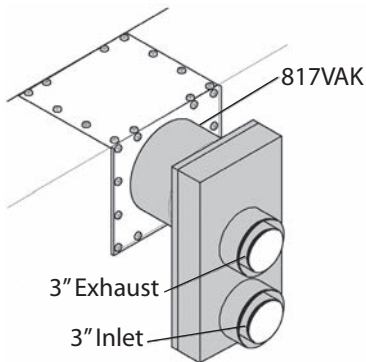

NOTE

We recommend using hose clamps in addition to screws to secure the liners to the fireplace.

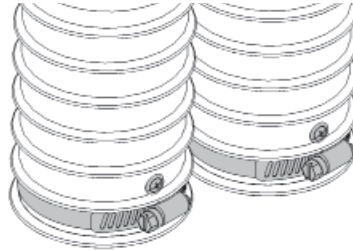

6. Continue with the installation as indicated in the co-linear adapter' installation guide.


Installation

Gas Supply

Connect Gas Supply

It is preferable to rough-in the gas line at this point before proceeding with the firebox installation.

The appliance is supplied for supply gas connection at the control valve. Supply line connection to the control valve as the appliance is 3/8" NPT female. Take care not to apply torque to the valve. An isolation valve may be fitted within the appliance case. Be aware that the supply pipe should follow routing to clear the remote receiver or optional fan.

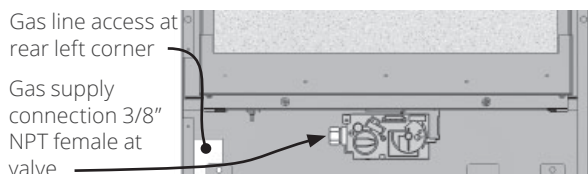

Use only new black iron or steel pipes, CSST, or copper tubing if acceptable—check local codes. **Note that in USA, copper tubing must be internally tinned for protection against sulfur compounds.**

Union in gas lines should be of ground joint type.

The gas supply line must be sized and installed to provide a supply of gas sufficient to meet the maximum demand of the appliance without undue loss of pressure.

Sealant used must be resistant to the action of all gas constituents including propane gas. Sealant should be applied lightly to male threads to ensure excess sealant does not enter gas lines.

The supply line should include a manual shut-off valve and union to allow the appliance to be disconnected for servicing.

Pressure test the supply line for leaks.

The appliance and its individual shut-off valve must be disconnected from the gas supply piping system during any pressure testing of that system at test pressures in excess of 1/2 psig (3.5kPa).

The appliance must be isolated from the gas supply piping system by closing its individual manual shut-off valve during any pressure testing of the gas supply piping system at test pressures equal to or less than 1/2 psig (3.5kPa).

Failure to either disconnect or isolate the appliance during pressure testing may result in regulator or valve damage. Consult your dealer in this case.

The minimum supply pressure is given on page 6 of this manual.

All piping and connections must be tested for leaks after installation or servicing. All leaks must be corrected immediately.

When testing for leaks:



- Make sure that the appliance is turned off.
- Open the manual shut-off valve.
- Test for leaks by applying a liquid detergent or soap solution to all joints. Bubbles forming indicate a gas leak.



WARNING

NEVER USE OPEN FLAME to check for leaks. Correct any leak detected immediately.

The pressure test tapping locations are shown below. A built-in non-adjustable regulator controls the burner manifold pressure. The correct pressure range is shown page 6 of this manual. The pressure check should be made with the burner alight and at its highest setting. See *Appendix A – Lighting Instructions Plate* page 52 for full operating details.

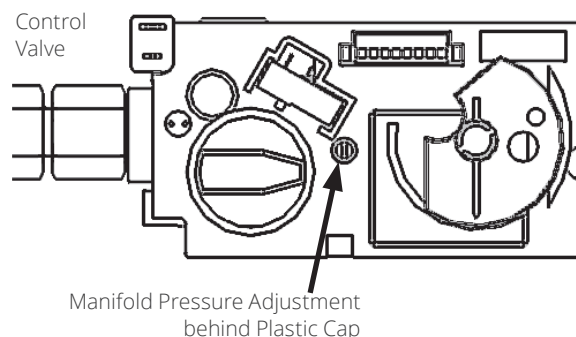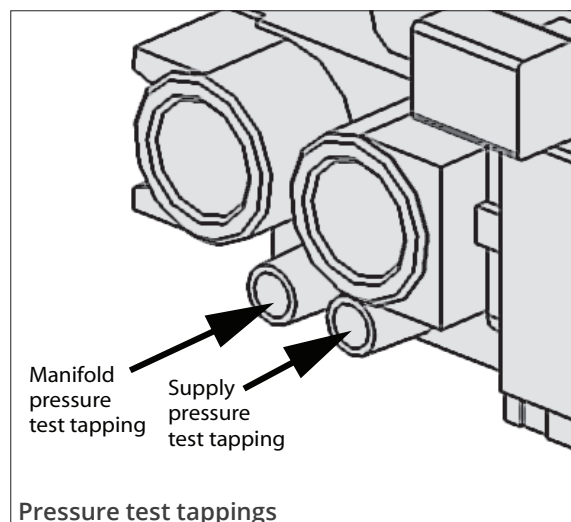


Installation

Liner Panels


Install Ceramic Liners

These instructions show how to install the reversible ceramic panels. For glass panels installation, see the instructions provided with the **580RGLV2 Reflective Glass Liner Set**.


1. Place the rear ceramic panel flat against the rear wall of the firebox, resting behind the panel support's holding tabs.

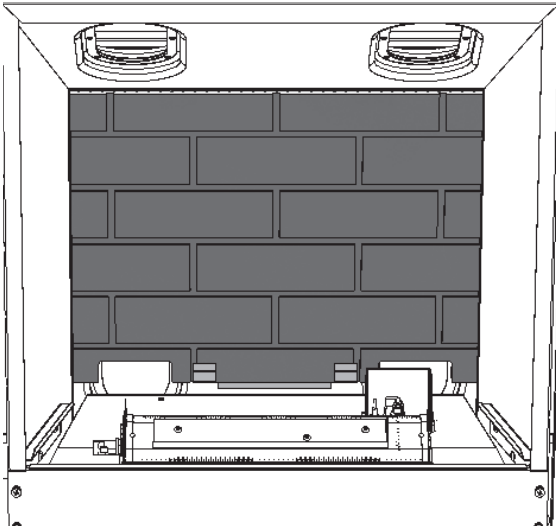



2. Place one of the side panels inserting it in the bottom railing on its side of the firebox. Push the panel back against the rear panel.

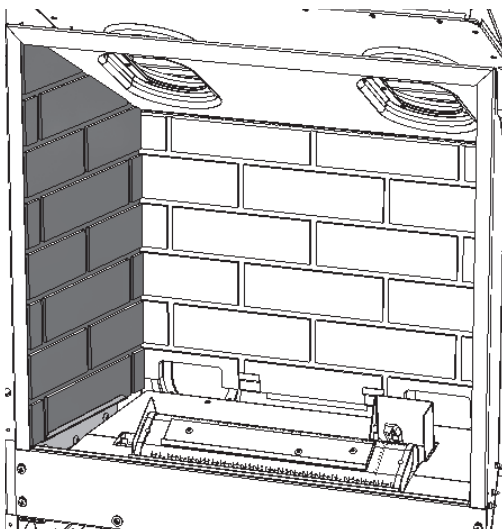

3. Repeat with the other side panel.

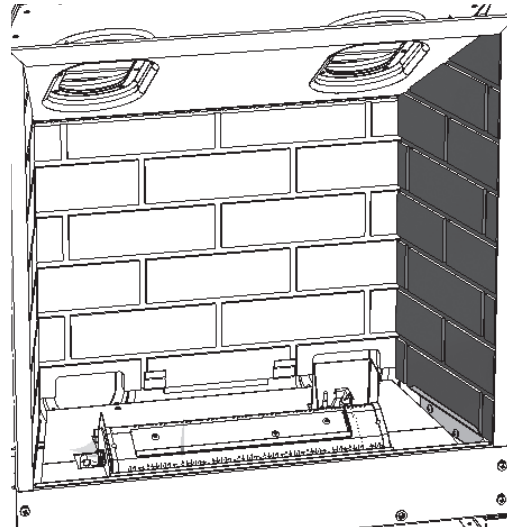

4. If installing the optional **567FGP Top Grille**, install it now —see instructions supplied with the grille.
5. Remove two screws from under the top front of the firebox. Place the brick retainer and secure it with the two screws.

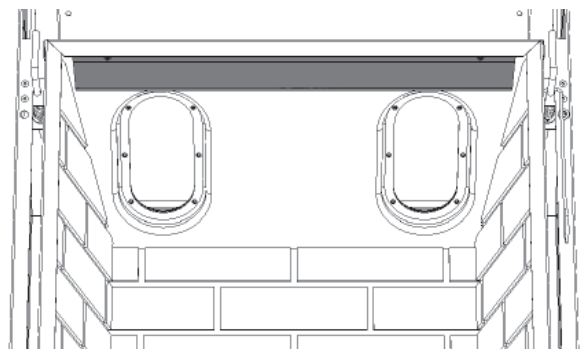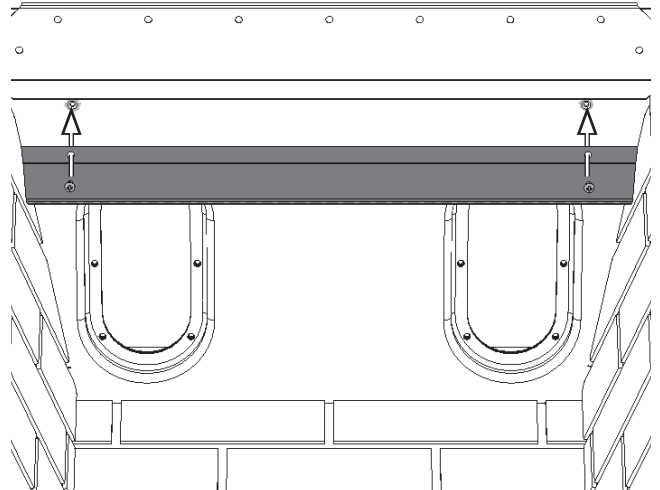

Installation

Fuel Beds

Birch Logs Set 530VBLK

Material required



- Birch Log Set containing:
 - 7 logs
 - Embers (small pieces)
- Gloves, if desired (not included)





Installation

Unpack the ceramic logs very carefully to avoid damaging their fragile material. Install the logs as shown below. **Please note that the position of the logs is critical to ensure the good performance of the appliance.**

1. Place log 2 on the burner, locating its groove underneath on the burner vertical flange. Slide to the right until it stops. If the log can slide freely past the right end of the burner, it is not properly located.

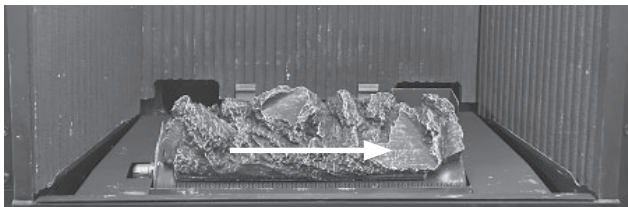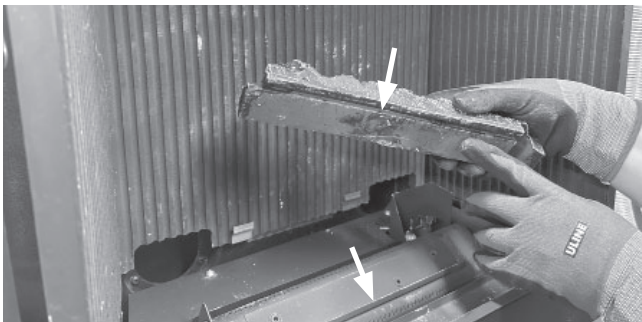

2. Log 1 has a notch on the bottom to sit against the burner cover flange behind the burner and a notch on the right side to go around the pilot area. Place log 1 behind the burner and pull it forward then slide it right so its lower right corner surrounds the pilot area.

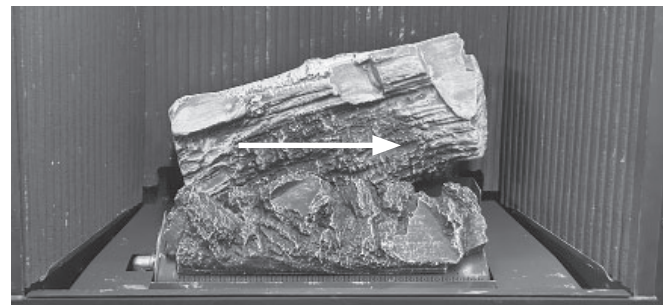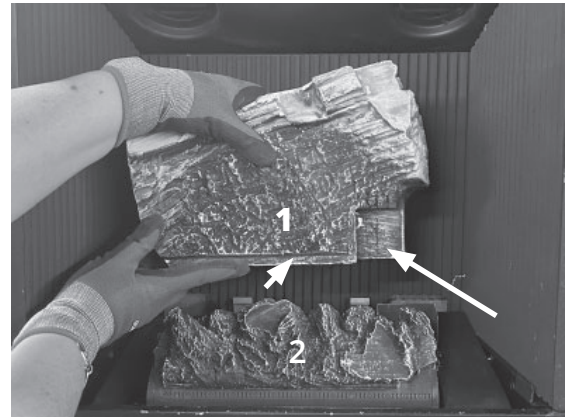

3. The front of the burner cover is slanted upwards and the logs installed in front of the burner rest on the slanted space. Place log 6 on the right, bottom first on the slanted front part of the burner cover, **touching the side wall**, then resting it on the notch of log 1.



Installation

Fuel Beds




Log MUST touch wall

4. Place log 7 on the left, bottom first against the slanted front part of the burner cover then rest it on the notches of logs 2 and 1.



5. Place log 5 left of log 6, bottom first against the slanted front part of the burner cover then rest it on the notches of logs 2 and 1.

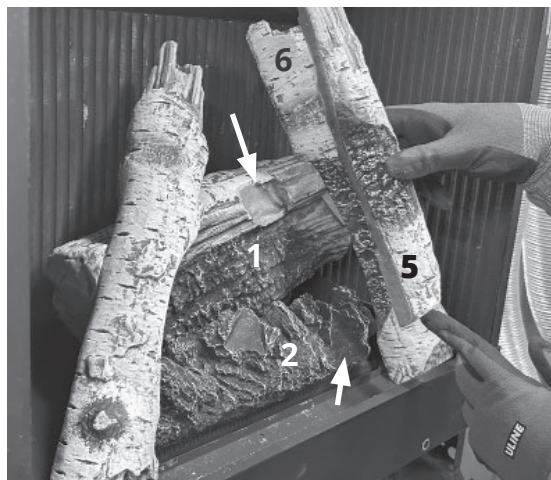

6. Place log 3 in front of the burner, between logs 7 and 5, its slanted part against the burner cover and the little key knob on top on the left side. Ensure to leave space between the bottom of logs 7 and 5.



Installation

Fuel Beds

7. Place log 4 on top of log 3 its wider part keying onto knob of log 3, its narrow part resting in the notch of log 2.

8. If desired, place small embers between the front logs to hide the edge of the sheet metal.




Installation

Fuel Beds

Traditional Logs Set 530VLSK

Material required



- Traditional Log Set containing:
 - 7 logs
 - Ember (small pieces)
- Gloves, if desired (not included)

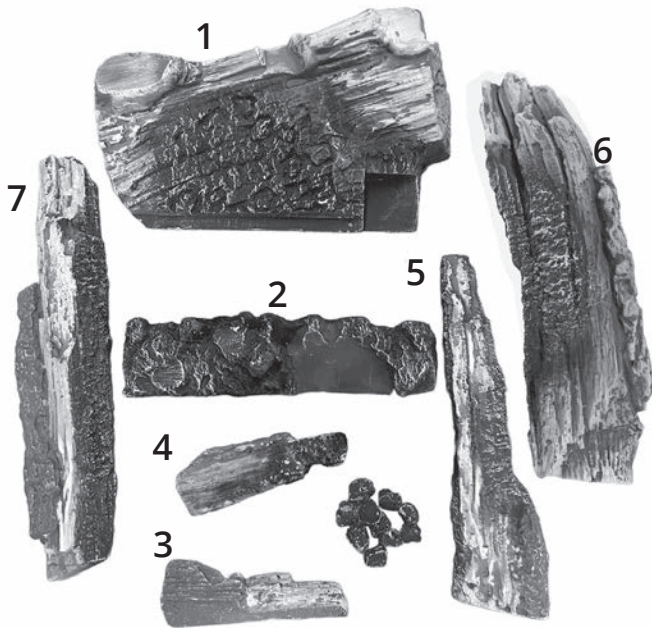



Installation

Unpack the ceramic logs very carefully to avoid damaging their fragile material. Install the logs as shown below. **Please note that the position of the logs is critical to ensure the good performance of the appliance.**

1. Place log 2 on the burner, its groove underneath on the burner vertical flange. Slide to the right until it stops. If the log can slide freely past the right end of the burner, it is not properly located.

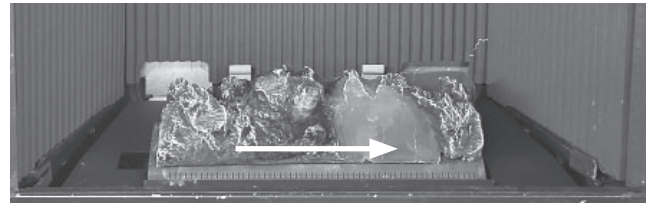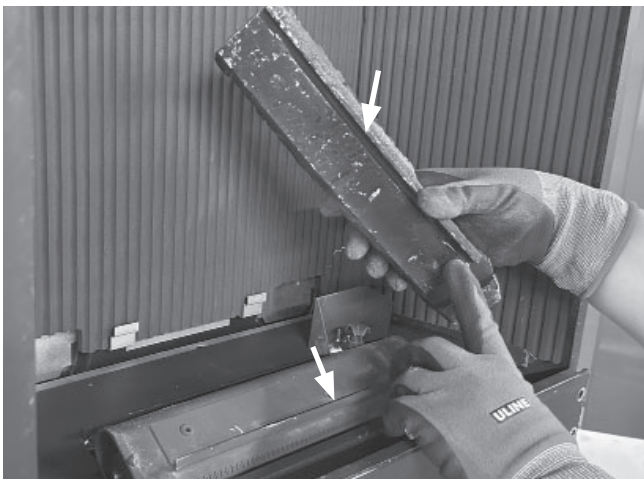

2. Log 1 has a notch on the bottom to sit against the burner cover flange behind the burner and a notch on the right side to go around the pilot area. Place log 1 behind the burner and pull it forward then slide it right so its lower right corner surrounds the pilot area.

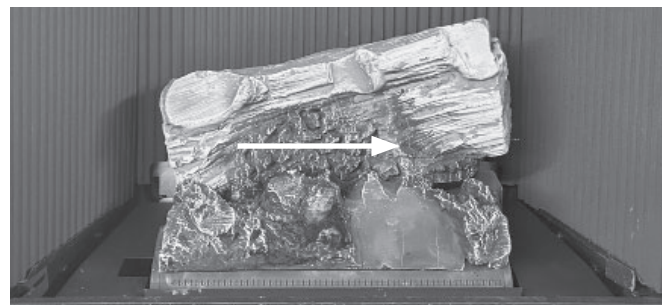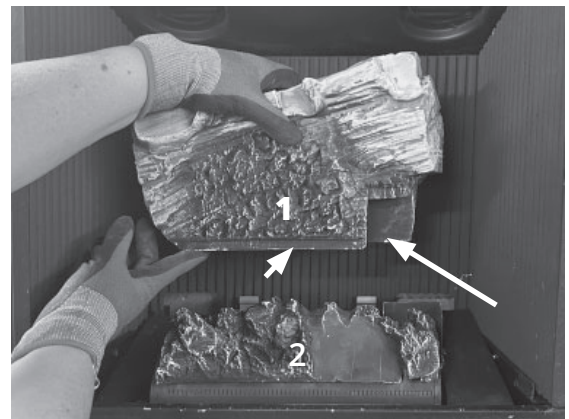

Installation

Fuel Beds

3. The front of the burner cover is slanted upwards and the logs installed in front of the burners rest on the slanted space.

Place log 6 on the right, bottom first on the slanted front part of the burner cover, **touching the side wall**, then resting it on the notch of log 1.



Log MUST touch wall

4. Place log 7 on the left, bottom first against the slanted front part of the burner cover then rest it on the notches of logs 2 and 1.



5. Place log 5 left of log 6, bottom first against the slanted front part of the burner cover then rest it on the notches of logs 2 and 1.



Installation

Fuel Beds


6. Place log 3 in front of the burner, between logs 7 and 5, its slanted part against the burner cover, its narrow part on the right. Ensure to leave space between the bottom of logs 7 and 5.



7. Place log 4 on top of log 3 its wider part on the notch on top of log 3, its narrow part resting in the notch of log 2.



8. If desired, place small embers between the logs in front of the burner to hide the edge of the sheet metal.

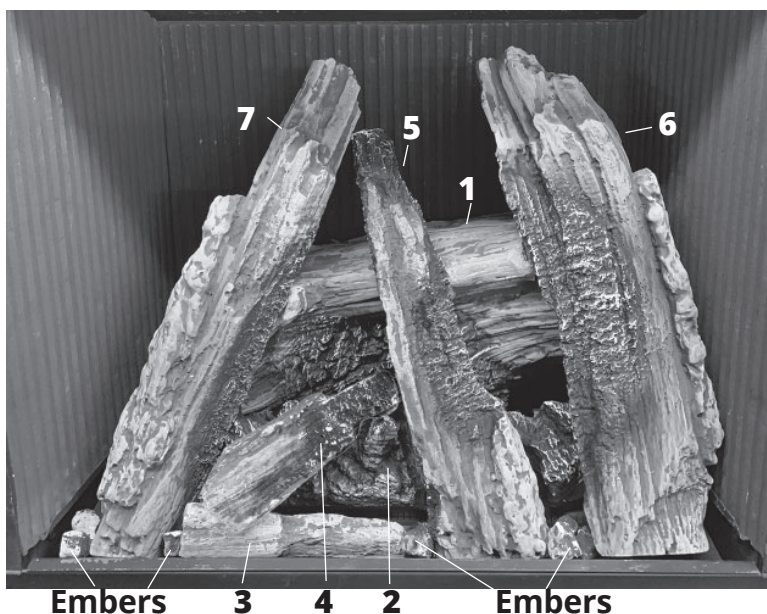


Installation

Fuel Beds

Driftwood Log Set 530VDWK

Material required


- Driftwood Log Set containing:
 - 7 logs
 - Embers (small pieces)
- Gloves, if desired (not included)

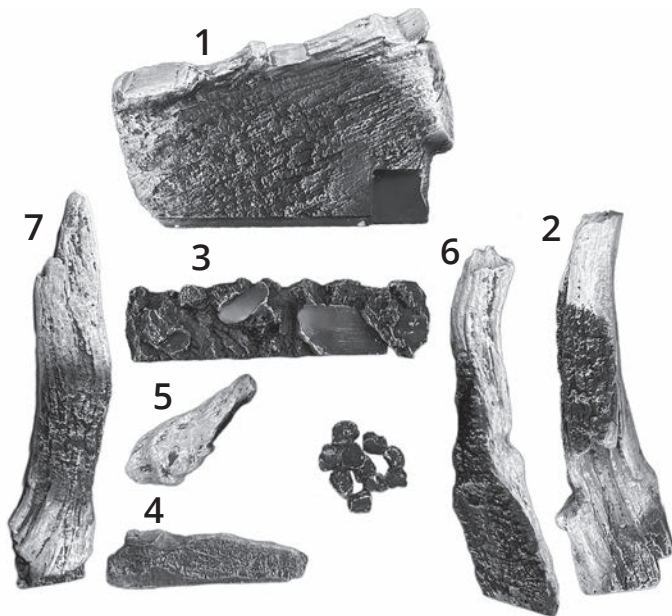



Installation

Unpack the ceramic logs very carefully to avoid damaging their fragile material. Install the logs as shown below. **Please note that the position of the logs is critical to ensure the good performance of the appliance.**

1. Place log 3 on the burner, its groove underneath on the burner vertical flange. Slide to the right until it stops. If the log can slide freely past the right end of the burner, it is not properly located.

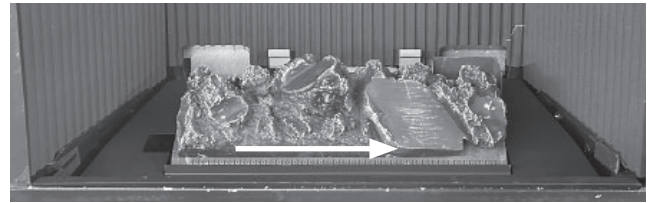

2. Log 1 has a notch on the bottom to sit against the burner cover flange behind the burner and a notch on the right side to go around the pilot area. Place log 1 behind the burner and pull it forward then slide it right so its lower right corner surrounds the pilot area.

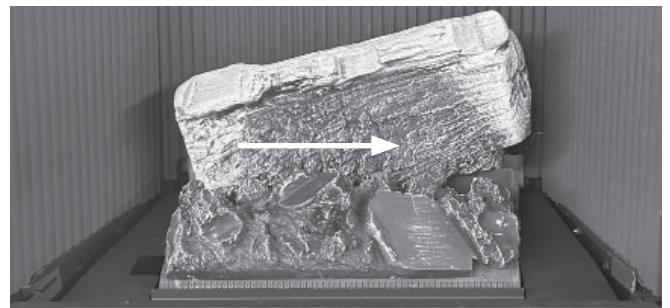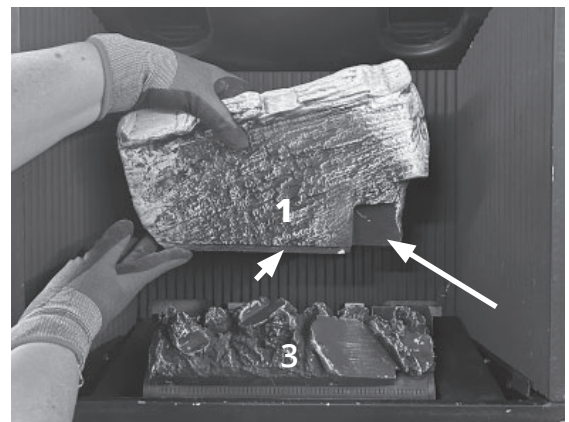

Installation

Fuel Beds


3. The front of the burner cover is slanted upwards and the logs installed in front of the burners rest on the slanted space.

Place log 2 on the right, bottom first on the slanted front part of the burner cover, **touching the side wall**, then resting it on the notch of log 1.



Log MUST touch wall

4. Place log 7 on the left, bottom first against the slanted front part of the burner cover then rest it on the notches of logs 3 and 1.

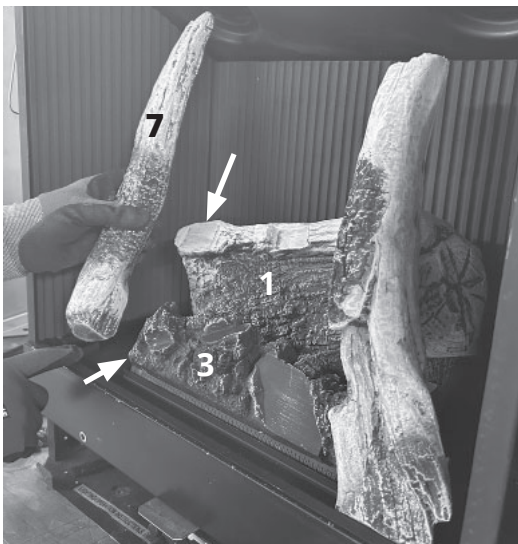


5. Place log 6 left of log 2, bottom first against the slanted front part of the burner cover then rest it on the notches of logs 3 and 1.



Installation

Fuel Beds


6. Place log 4 in front of the burner, between logs 7 and 6, its slanted part against the burner cover, its narrow part on the right. Ensure to leave space between the bottom of logs 7 and 6.

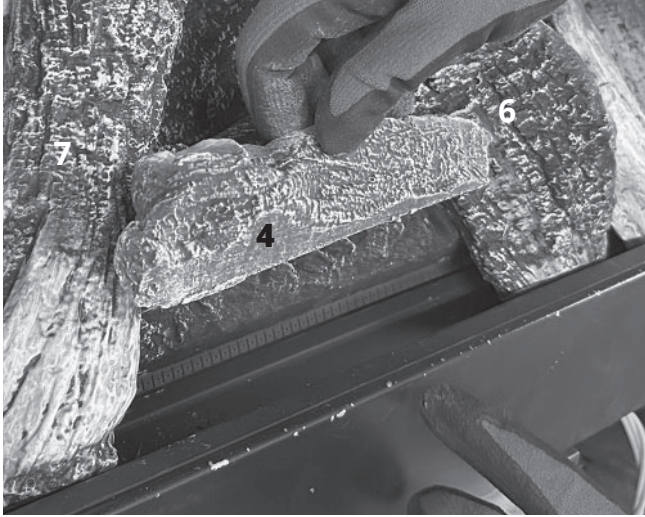

7. Place log 5 on top of log 4, its wide part on the notch on top of log 4, its narrow part resting in the notch of log 3.



8. If desired, place small embers between the logs in front of the burner to hide the edge of the sheet metal.

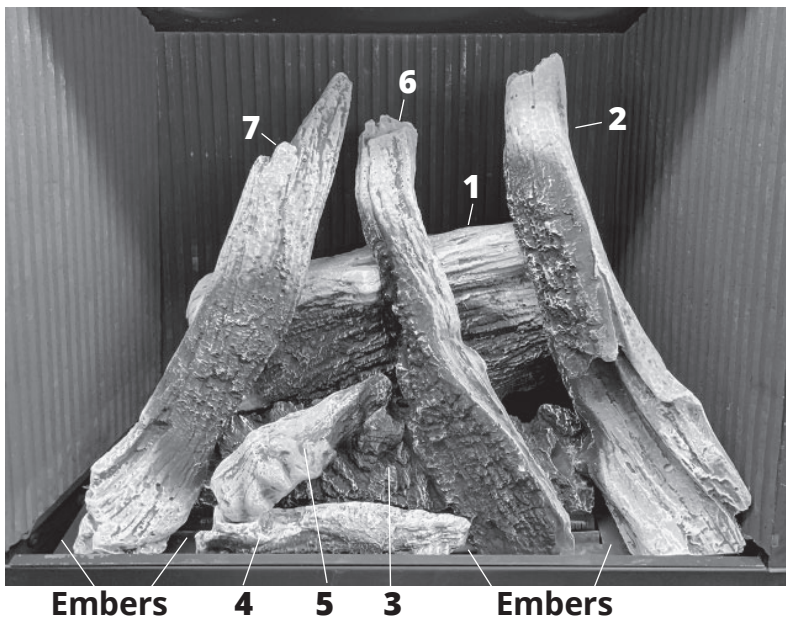

Installation

Fuel Beds

Coal Set 530VCSK

Material required



- Coal Set containing:
 - 3 coal arrangement pieces
- Gloves, if desired (not included)




Installation

Unpack the ceramic coals very carefully to avoid damaging their fragile material. Install the coals as shown below.

1. Place coal piece 3 on the burner, its notch underneath against the burner vertical flange. Slide to the right until it stops. If the log can slide freely past the right end of the burner, it is not properly located.

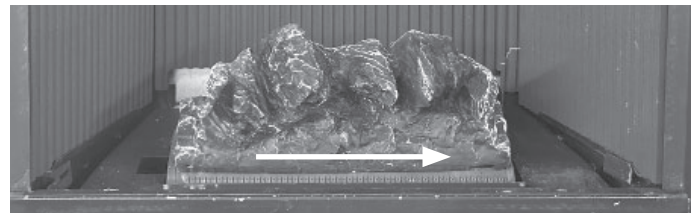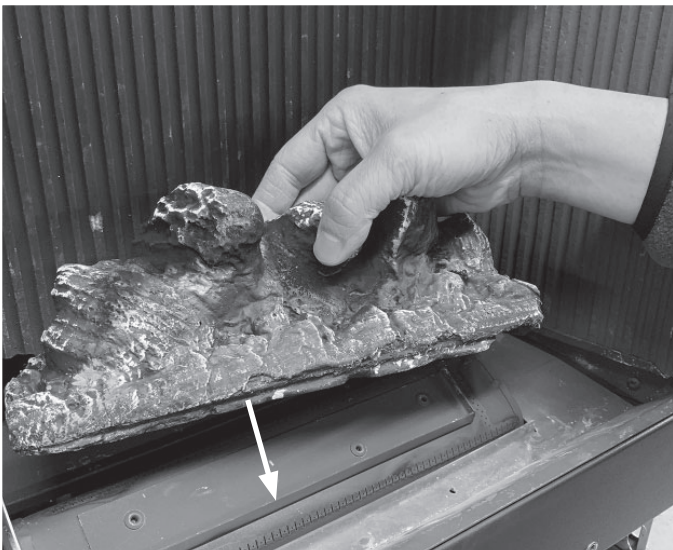


2. The front of the burner cover is slanted upwards and the coal piece installed in front of the burner rest on the slanted space. Place coal piece 2 in front of the burner. Its front overhangs slightly on the edge of the firebox.

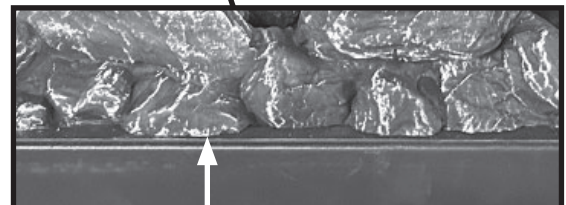

Installation

Fuel Beds

3. Place coal piece 1 behind the burner pulling it forward to merge with piece 3 and 2 on each side.


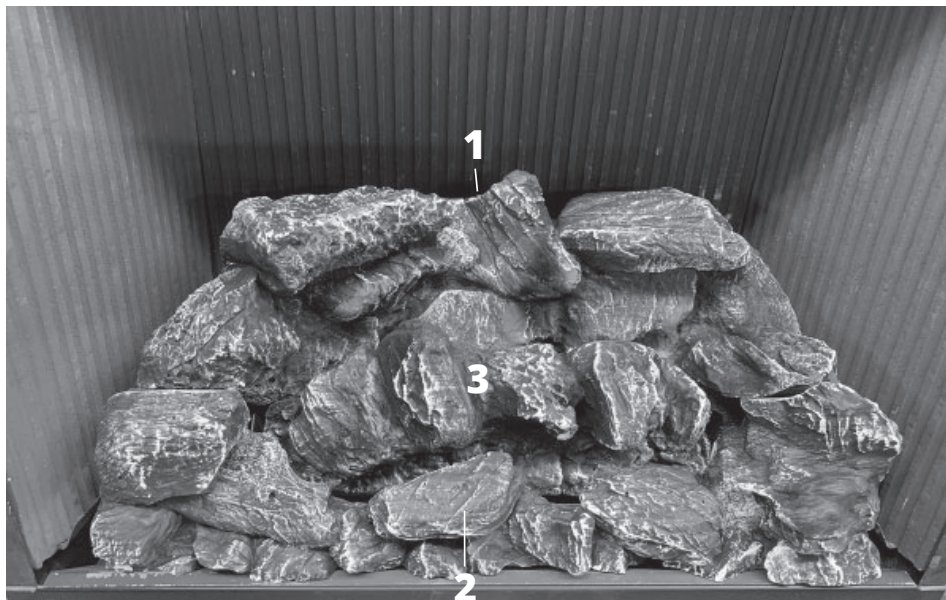


Installation

Refit & Check Window

Refit and Check Window

1. Rest the window on the support at the base of the firebox and center it on the width.
2. While pressing the window against the firebox, pull the clamping bars levers forward and rotate them inwards to secure the top of the window.
3. Fit the two spring-loaded bolts through the bottom of the window and tighten to secure the window.
4. Pull the top of the window forward and release to check that it opens slightly and returns confirming the good function of the spring-loaded mechanism.

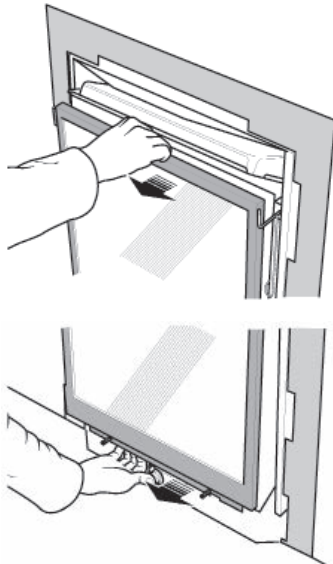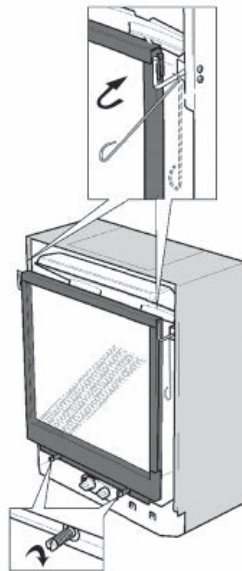

5. Similarly, check the bottom of the window by pulling it forward and releasing it.
6. Apply firm pressure around the window frame to ensure the window is sealed tight against the firebox.
7. If the Hot Glass Warning plate has been removed from the front lower corner of the window, re-install it by sliding it between the glass and the frame as indicated.

WARNING

The window unit must be correctly installed, fastened and sealed after servicing or serious bodily injury and/or damage to the appliance may result.

To ensure a safe operation:


- Double-check that the window frame is correctly installed;
- Verify that the levers and spring-loaded bolts are hooked properly to the window tabs then;
- Pull out the top of the window and release it to ensure the springs return it; repeat with the bottom of the window;
- Ensure the window is sealed before operation.

WARNING

Failure to install the window correctly can:

- Leak carbon monoxide;
- Affect the performance of the fireplace;
- Damage components;
- Cause overheating resulting in dangerous conditions.

Damages caused by incorrect window installation is not covered by the Valor warranty.

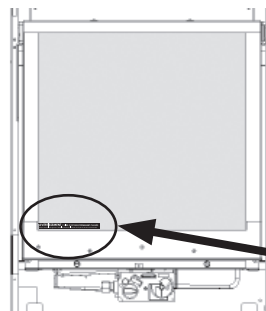

! WARNING; EXTREMELY HOT GLASS AND FIREPLACE
Risk of severe burns. Keep Children away from fireplace & controls.
AVERTISSEMENT : VITRE ET FOYER EXTREMEMENT CHAUDS
Risque de brûlures graves. Tenir les enfants à l'écart du foyer et des commandes.
Hot Glass Warning plate



Installation

Battery Holder


Install Battery Holder

The batteries that power the receiver and handset need to be installed prior to pairing and use.


1. Take the receiver out from under the firebox.
2. Insert four 1.5 V high quality **alkaline** batteries in the battery holder and one high quality **alkaline** 9 V battery in the remote handset. The battery holder and cable are supplied with the appliance.




3. Connect the cable to the receiver as shown.

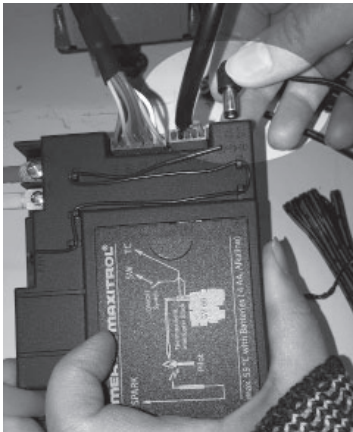

4. Connect the other end of the cable to the battery holder.

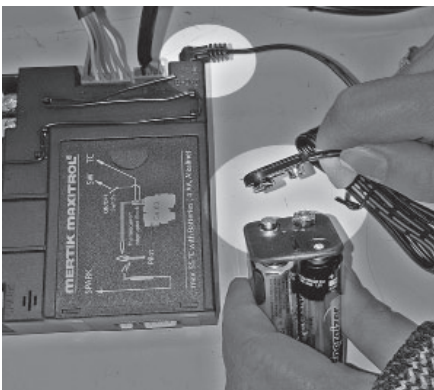

5. Place the receiver and battery holder as shown below (placement may vary with installed options).

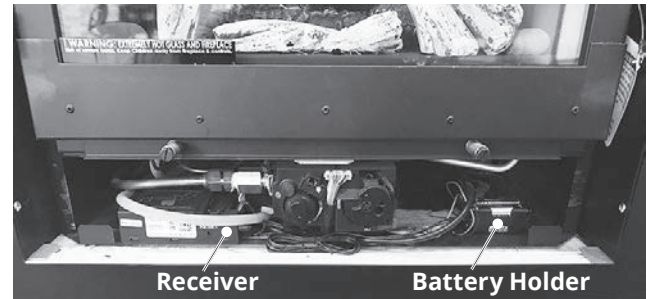

6. Use a heat-resistant tie to gather any extra cable between the receiver and the holder.



Caution

DO NOT let the cable touch the burner plate above, it will melt during operation.

Installation


Synchronize Receiver and Handset

The receiver and handset of the remote control system must be initially paired before the first use.

1. If not already done, place a 9 V **alkaline** battery in the handset.
2. Identify the RESET button on the front of the receiver.
3. With a thin object, press and hold the receiver's reset button until you hear one short and one long beeps. Release the button after the second beep.
4. Within the next 20 seconds, press the small flame button (🔥) on the handset until you hear two short beeps confirming the pairing is set.
If you hear a long beep, the pairing has not been done or the wires are not connected correctly.

This is a one time setting only and is not required when changing the batteries in the remote handset. The remote control system is now ready to use.

Remote Control Pairing

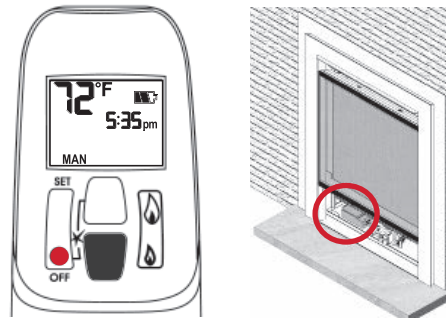

Installation

Operation Check & Burner aeration

Check Operation

Turn the fireplace flame up and down using the remote control to confirm that the full range of inputs is achieved—see *Appendix B – Remote Control Operation* pages 53–56 for details.

Adjust Aeration (if needed)

Light the fire and allow the unit to warm up for 10–15 minutes to evaluate the flame picture. Burners are equipped with an adjustable shutter to control primary aeration. See figures below. The shutter is factory-set to an aeration gap which will give optimum performance for the vast majority of installations.

In some installations, depending of the fuel bed used, the altitude and other considerations, the flame picture may be improved by adjusting the aeration. The need for adjustment should be determined only by operating the appliance with the fuel bed and window installed and evaluating the flame picture after a 15-minute warm-up.


Increasing aeration (open) will cause the flames to appear more transparent and blue showing more ceramic effects glow.

Decreasing aeration (close) will cause flames to appear more yellow or orange showing less ceramic effects glow.

Too little aeration may result in black carbon forming on the logs or roof panel and dropping into the firebox. May also result in carbon or soot stains on the vent termination and exterior wall around the termination! The Manufacturer is not responsible for any damage caused by an air shutter setting with too little aeration.

The aeration lever is located under the firebox above the gas pipe.

To access it, remove the barrier screen, front or bottom panel and adjust it according to the image below.

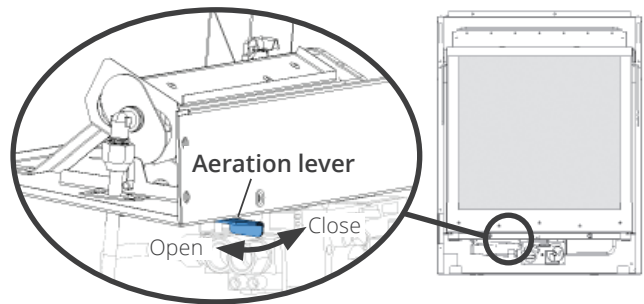

Front and Barrier Screen

Install the front chosen by the customer for the fireplace. Install as well the barrier screen which is provided with the front.

Show the customer how to access the controls when the front is installed and how to remove it.


Follow the instructions provided with the front and leave those instructions behind for the customer's further reference.

Handset Wall Holder


The remote control kit for this fireplace comes complete with a wall-mounted holder. This holder is not required in all installations but is provided as an optional feature for those customers who wish to mount the remote handset to the wall.

To install the holder to the wall, find a convenient location and use the hardware provided with the kit. See the diagram below for required hardware and configurations. Note that the holder can be installed at the base of a light switch plate.

IMPORTANT. The location of the remote control handset is important to insure proper temperature regulation. To obtain a constant temperature, we recommend that the handset should be between 3 and 15 feet away from the appliance but not directly above it. We also advise that the handset should be located away from any other heat source and not in direct sunlight as this may affect the temperature sensor located in the remote handset.

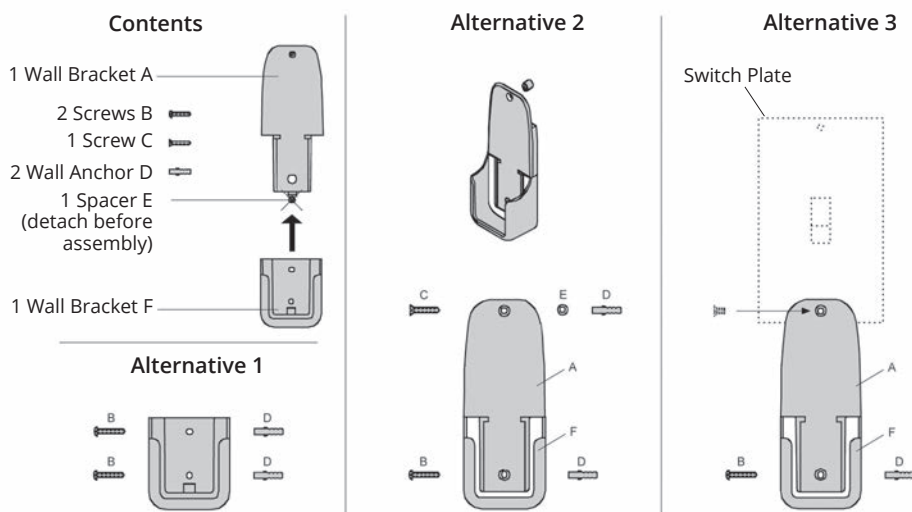

Wiring Diagram

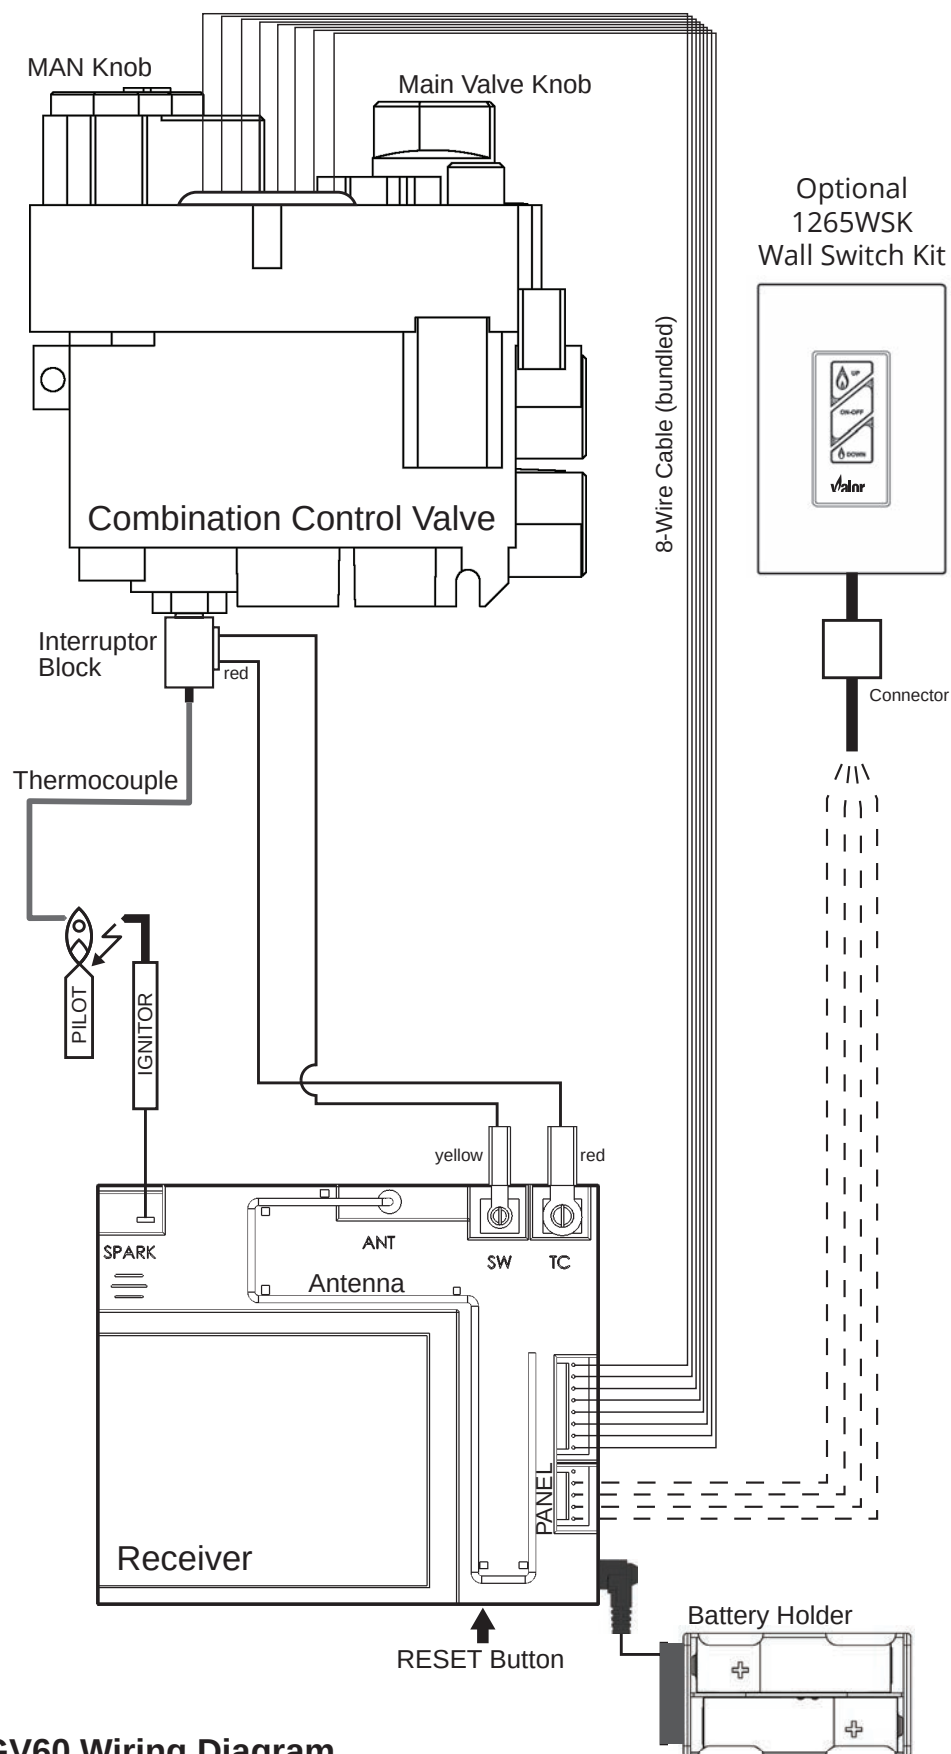

GV60 Wiring Diagram

Commonwealth of Massachusetts

State of Massachusetts Carbon Monoxide Detector/Vent Terminal Signage Requirements

For all side wall horizontally vented gas fueled equipment installed in every dwelling, building or structure used in whole or in part for residential purposes, including those owned or operated by the Commonwealth and where the side wall exhaust vent termination is less than seven (7) feet above finished grade in the area of the venting, including but not limited to decks and porches, the following requirements shall be satisfied:

1. **INSTALLATION OF CARBON MONOXIDE DETECTORS.** At the time of installation of the side wall horizontal vented gas fueled equipment, the installing plumber or gas fitter shall observe that a hard wired carbon monoxide detector with an alarm and battery back-up is installed on the floor level where the gas equipment is to be installed. In addition, the installing plumber or gas fitter shall observe that a battery operated or hard wired carbon monoxide detector with an alarm is installed on each additional level of the dwelling, building or structure served by the side wall horizontal vented gas fueled equipment. It shall be the responsibility of the property owner to secure the services of qualified licensed professionals for the installation of hard wired carbon monoxide detectors.

a. In the event that the side wall horizontally vented gas fueled equipment is installed in a crawl space or an attic, the hard wired carbon monoxide detector with alarm and battery back-up may be installed on the next adjacent floor level.

b. In the event that the requirements of this subdivision can not be met at the time of completion of installation, the owner shall have a period of thirty (30) days to comply with the above requirements; provided, however, that during said thirty (30) day period, a battery operated carbon monoxide detector with an alarm shall be installed.

2. **APPROVED CARBON MONOXIDE DETECTORS.** Each carbon monoxide detector as required in accordance with the above provisions shall comply with NFPA 720 and be ANSI/UL 2034 listed and IAS certified.

3. **SIGNAGE.** A metal or plastic identification plate shall be permanently mounted to the exterior of the building at a minimum height of eight (8) feet above grade directly in line with the exhaust vent terminal for the horizontally vented gas fueled heating appliance or equipment. The sign shall read, in print size no less than one-half (1/2) inch in size, "GAS VENT DIRECTLY BELOW. KEEP CLEAR OF ALL OBSTRUCTIONS".

4. **INSPECTION.** The state or local gas inspector of the side wall horizontally vented gas fueled equipment shall not approve the installation unless, upon inspection, the inspector observes carbon monoxide detectors and signage installed in accordance with the provisions of 248 CMR 5.08(2)(a)1 through 4.

(b) **EXEMPTIONS:** The following equipment is exempt from 248 CMR 5.08(2)(a)1 through 4:

1. The equipment listed in Chapter 10 entitled "Equipment Not Required To Be Vented" in the most current edition of NFPA 54 as adopted by the Board; and

2. Product Approved side wall horizontally vented gas fueled equipment installed in a room or structure separate from the dwelling, building or structure used in whole or in part for residential purposes.

(c) **MANUFACTURER REQUIREMENTS - GAS EQUIPMENT VENTING SYSTEM PROVIDED.** When the manufacturer of Product Approved side wall horizontally vented gas equipment provides a venting system design or venting system components with the equipment, the instructions provided by the manufacturer for installation of the equipment and the venting system shall include:

1. Detailed instructions for the installation of the venting system design or the venting system components; and
2. A complete parts list for the venting system design or venting system.

(d) **MANUFACTURER REQUIREMENTS - GAS EQUIPMENT VENTING SYSTEM NOT PROVIDED.** When the manufacturer of a Product Approved side wall horizontally vented gas fueled equipment does not provide the parts for venting the flue gases, but identifies "special venting systems", the following requirements shall be satisfied by the manufacturer:

1. The referenced "special venting system" instructions shall be included with the appliance or equipment installation instructions; and
2. The "special venting systems" shall be Product Approved by the Board, and the instructions for that system shall include a parts list and detailed installation instructions.

(e) A copy of all installation instructions for all Product Approved side wall horizontally vented gas fueled equipment, all venting instructions, all parts lists for venting instructions, and/or all venting design instructions shall remain with the appliance or equipment at the completion of the installation.

Appendix A – Lighting Instructions Plate




 
 

FOR YOUR SAFETY, READ BEFORE LIGHTING

WARNING: If you do not follow these instructions exactly a fire or explosion may result causing property damage, personal injury or loss of life.

- A. This appliance has a pilot which must be lighted by hand or by remote control. Follow these instructions exactly. To save gas, turn the pilot off when not using the appliance for a prolonged period of time.
- B. BEFORE LIGHTING, smell all around the appliance area for gas. Be sure to smell next to the floor because some gas are heavier than air and will settle on the floor.
- WHAT TO DO IF YOU SMELL GAS**
- Do not try to light any appliance.
 - Do not touch any electric switch; do not use any phone in your building.
 - Immediately call your gas supplier from a neighbor's phone. Follow the gas supplier's instructions.
 - If you cannot reach your gas supplier, call the fire department.
- C. Do not use this appliance if any part has been under water. Immediately call a qualified service technician to inspect the appliance and to replace any part of the control system and any gas control, which has been under water.
- D. Use only your hand to push in or turn the control knobs. Never use tools. If the knobs will not push in or turn by hand, don't try to repair them; call a qualified service technician. Force or attempted repair may result in a fire or explosion.

OPERATING INSTRUCTIONS

1. STOP! Read the safety information above.
2. This appliance is equipped with an on-demand pilot that shuts off after 7 days of inactivity.
3. TO CLEAR ANY GAS, turn main valve off by momentarily pressing OFF button (●) (1a) or (⏻) button (1b) on remote control handset.
 - Wait five (5) minutes to clear out any gas, then smell for gas, including near the floor. If you smell gas, STOP! Follow "B" in the safety information above on this label. If you don't smell gas, go to the next step.
4. AUTOMATIC IGNITION: MAN-knob in ON position (Fig. 2, A). (Ensure gas control knob is set to OFF (full clockwise ⤵) (Fig. 2, B). Locate the pilot inside firebox (Fig. 4).
 - On the remote control handset, press and hold simultaneously the OFF (●) and large flame (⬆) buttons (1a) OR, press and hold (⏻) button (1b); a short acoustic signal confirms the start has begun.
 - Further short acoustic signals indicate the ignition process is in progress.
 - When the pilot is lit, the gas control knob (Fig. 2, B) will automatically rotate to the highest setting. Press the small flame button (⬇) (1a) or down arrow (⬇) (1b) on the remote to reduce flames.
5. MANUAL IGNITION: MAN-knob in MAN position (Fig. 3, A).
 - With the window off, locate the pilot inside firebox (Fig. 4).
 - Set gas control knob to OFF (full clockwise ⤵) (Fig. 3, B).
 - Push down the manual pilot plunger with a small screwdriver or similar instrument (Fig. 3, C); this will establish the pilot gas flow.
 - Light gas at the pilot with a match (Fig. 4, 5).
 - Continue holding down manual pilot plunger for about 10 seconds (Fig. 3, C); after release, pilot should remain lit.
 - If the pilot will not stay lit after several tries, turn the gas control knob to OFF (full clockwise ⤵) (Fig. 3, B) and call your local service technician or gas supplier.
 - Once the pilot is lit, reinstall the window and set the MAN-knob to ON (full counter-clockwise ⤴) (Fig. 2, A); turn gas control knob up (⬆) or down (⬇) manually (Fig. 2, B) or use the flame buttons (⬆) (⬇) (1a) or arrow buttons (⬆) (⬇) (1b) on the remote control handset to adjust the flame height.

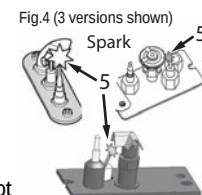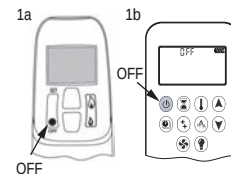

TO TURN OFF GAS TO APPLIANCE

AUTOMATIC SHUT-OFF (using the remote control handset):

Press and hold the small flame button (1a) or (⬇) button (1b) to shut-off the main burner gas flow.

Momentarily press the "OFF" ● button (1a) or (⏻) button (1b) on remote handset to shut-off the appliance, including pilot flame.

DO NOT REMOVE FROM FIREPLACE

4009565-01

Appendix B – Remote Control Operation

Radio Frequency

315 MHz for USA and Canada.

This device complies with Part 15 of the FCC Rules and with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.


NOTE: Before using the remote control system for the first time, the receiver and the handset must be synchronized. See *Remote Control Pairing* in this manual.

IMPORTANT: BEFORE YOU BEGIN, please note that on this system, the settings of time, temperature and automatic ON/OFF **can only be programmed when the function display is flashing.** Be patient when programming as it can take a few seconds to set.

Note: In the TEMP or TIMER modes, the remote handset senses the room temperature and adjusts the flame accordingly.

To communicate, the handset should be within 15 feet (4.5 meters) of the fireplace.

Do not leave the handset on the mantel or hearth.

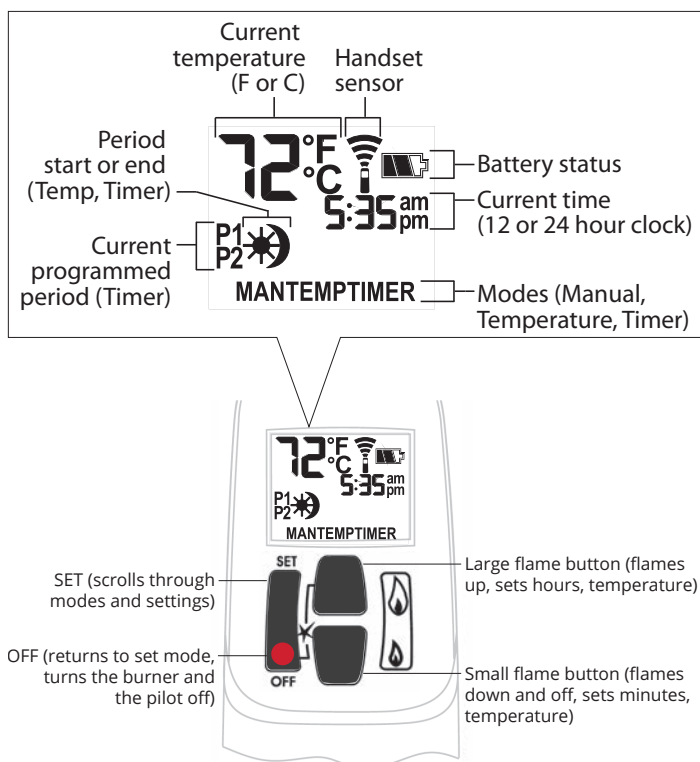

Turn Fireplace ON


Press ● + 🔥 buttons until you hear a short beep; release buttons.

Beeping continues until pilot is lit.

Burner lights to maximum flame height and handset goes automatically to manual (MAN) mode.

NOTES:

On the valve, MAN button must be at ON, in full counter-clockwise position ↺.

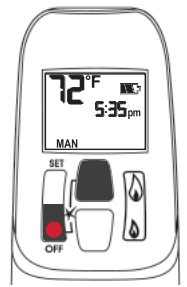


Turn Fireplace OFF

Press ● button.

When pilot is just turned off, wait 2 minutes to light it again.

Standby Mode (Pilot Flame)

Press and hold 🔥 to set fireplace to pilot.

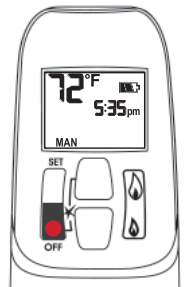


Adjust Flames Height

With pilot lit, press and hold buttons:

🔥 = increase flame height

🔥 = decrease flame height or set to pilot

For fine adjustment, tap buttons.

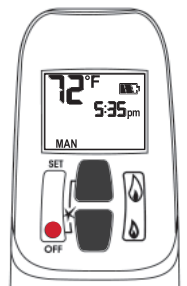



Express Low and High Fire

Double-click buttons:

🔥 = increase flame to maximum height "HI"

🔥 = decrease flame minimum height "LO"

NOTE: Flame goes to high fire first before going to designated low fire.

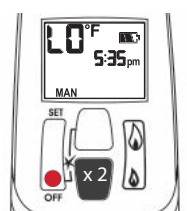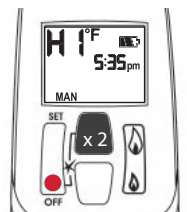


Appendix B – Remote Control Operation

Setting °C/24-hr or °F/12-hr clock

In MAN mode, press and hold ● + 🔥 buttons until temperature / clock display changes from

°F / 12-hour ↔ °C / 24-hour

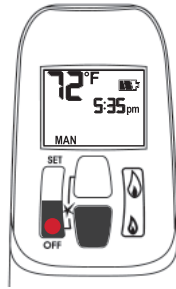

Setting Time

The time display will flash after either:


- installing the battery, or
- pressing 🔥 + 🔥

To set the time, press buttons:

🔥 = hour

🔥 = minutes

Press ● briefly or wait to go back to MAN.

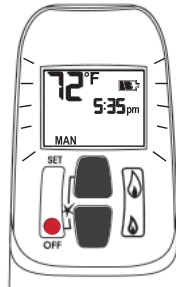


Modes of Operation

Briefly pressing SET cycles through modes of operation.

MAN > ⚙️ TEMP > 🌙 TEMP > TIMER > MAN

NOTE: Press 🔥 or 🔥 to reach MAN mode.

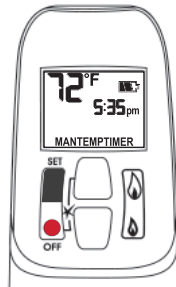

MAN Manual Mode

Manual flame height adjustment.




⚙️ TEMP Daytime Temperature Mode

When pilot is lit, room temperature is measured and compared to set temperature. Flame height automatically adjusts to reach Daytime Set Temperature.



🌙 TEMP Night time Setback Temperature Mode


When pilot is lit, room temperature is measured and compared to set temperature. Flame height automatically adjusts to reach Night Time Setback Temperature.

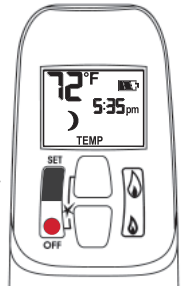

TIMER Timer Mode

When pilot is lit, two periods of time (P1 and P2) can be programmed to use Daytime and Night time temperatures at specific times.

Note: Display shows set temperature every 30 seconds.

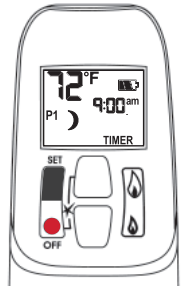

Set the different parameters when they are flashing.

Appendix B – Remote Control Operation

Setting high / low Temperatures

Setting “DAYTIME” high temperature.

Default Settings:  TEMP 23 °C/74 °F

Press SET to scroll to  TEMP


Hold SET button until TEMP flashes.

To set  Daytime Temperature:

 = increases temperature.

 = decreases temperature.

Press  briefly or wait to complete setting.

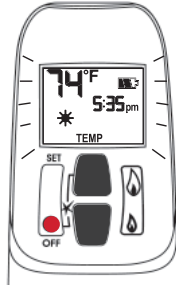

Setting “NIGHT TIME SETBACK” low temperature.

Default Settings:  TEMP “--” (OFF)

Press SET to scroll to  TEMP


Hold SET button until TEMP flashes.

To set  Night Time Temperature:

 = increases temperature.

 = decreases temperature.

Press  briefly or wait to complete setting.

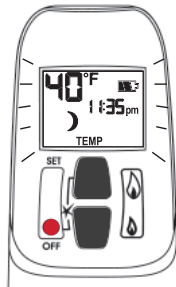

Setting Program Timers

You can program two periods of time between 12 am and 11:50 pm in each 24-hour cycle.

Programs P1 and P2 must be set in the following order during a 24-hour cycle: **P1** , **P1** , **P2**  and **P2** .

 = Day Time temperature (high) program period

 = Night Time temperature (low) program period

Default Settings:

Program 1: **P1**  06:00 am **P1**  08:00 am

Program 2: **P2**  11:50 pm **P2**  11:50 pm

Press SET to scroll to **TIMER**.



If **P1**  = **P1**  or **P2**  = **P2** , programming is cancelled.

To keep fireplace ON all night, set **P2**  at 11:50 am and **P1**  at 12:00 am.

If you want to program only one period, program **P1**  and **P1**  with desired times then **P2**  and **P2**  with the same time as **P1** .

Setting P1 time—high temperature.


Hold SET button until **P1**  is displayed and time flashes.

To set time:

 = hour

 = minutes

Press  briefly or wait to complete setting.

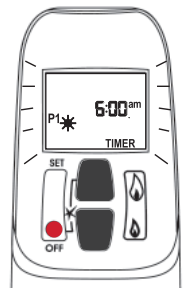

Setting P1 time—low temperature.

Hold SET button until **P1**  is displayed and time flashes.

To set time:

 = hour

 = minutes

Press  briefly or wait to complete setting.

Appendix B – Remote Control Operation

Setting P2 high and low temperature times.


Repeat same steps as Setting P1.

When all settings are complete, press ● to save them.



The pilot has to be lit for the system to respond to the program Temp or Timer settings.

Timer Programming Example (default temperatures shown)

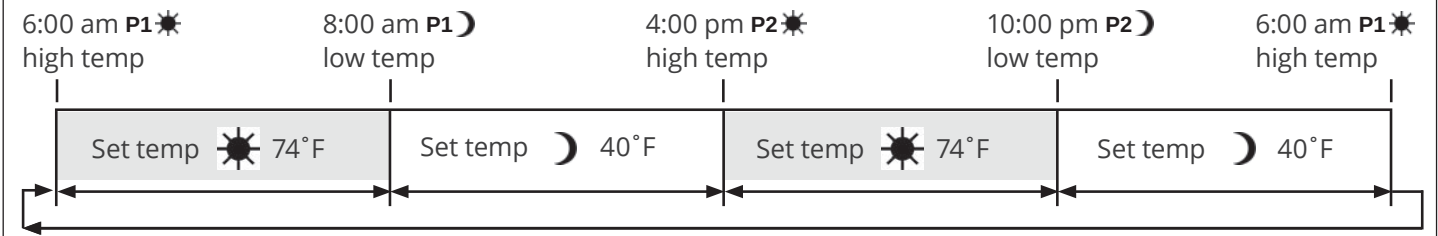

Automatic Turn Down

8-Hour no Motor Movement

The valve will turn to pilot flame if there is no motor movement for an 8-hour period.

Automatic Shut-Off

Low Batteries Receiver. With low battery power in the battery holder the system shuts off the fire completely. This does not apply when the power supply is interrupted.

On-Demand Pilot (7 Day Shut-Off). This green feature eliminates gas energy consumption during extended appliance inactivity. When the appliance is inactive for an extended period of time the system automatically extinguishes the pilot. This feature helps the consumer realize cost benefits by automatically eliminating energy consumption during non-heating months and limited use.

The programmed length of inactivity to activate the system is specified by the appliance manufacturer and cannot be altered in the field.

Low Battery Indication



Caution

DO NOT USE a screwdriver or other metallic object to remove batteries from holder. This could cause a short-circuit.

Handset: The battery icon  will show when the battery needs to be replaced. Replace with one 9 V **alkaline** battery.

Battery holder: Frequent 'beeps' for 3 seconds when the valve motor turns indicate the batteries need to be replaced in battery holder. Replace with four 1.5 V **alkaline** batteries.

Handset / Receiver Match


The remote control handset and receiver are programmed to function together. In case of a replacement of the handset or the receiver, you will need to reset the receiver to allow them to function together. Contact your dealer for details.

Appendix C – Spare Parts


	Description	Part no.
1	Outer vent collar	330A888
2	Outer vent collar seal	568399
3	Inner vent collar	340B174
4	Inner vent collar seal	620B973
5	Top vent cover plate	330A902
6	Top vent collar seal	568399
7	4 x 6-5/8" Vent Adapter	817VAK
8	Adjustable plates (2)	4002896
9	Restrictor plates (2)	4002895
10	Brick retainer	4000828AH
11	Burner cover	4011714
11a	Platform fixing bracket	4011721
12	Rear brick support	4012354
13	Gasket sealing, left hand	620B981
14	Gasket burner module, rear	620B791
15	Gasket sealing, right hand	620B982
16	Window unit	050A216S
17	Window screw assy (2)	000B214S
18	Hot glass warning plate	4003093
19	Burner module (natural gas)	4011593S
	Burner module (propane gas)	4011910S
20	#44 Orifice elbow assembly (natural gas)	4012558
	#55 Orifice elbow assembly (propane)	4012559
21	Steel flat washer 0.37 inch	4007461
22	Spring tension washer 10 mm double wave	4007460
23	Air shutter Ver. H (natural gas)	4011918
	Air shutter (propane gas)	4012151
24	Anti-flashback shield	4007629
25	Burner dual ports P2	4008519
26	Burner mounts (2)	4008431
27	Pilot shield	4010812
28	PSE Pilot assy 36" (natural gas)	4008484S
	PSE Pilot assy 36" (propane gas)	4008485S
29	Pilot injector PSE-730 (natural gas)	4008493
	Pilot injector PSE-727 (propane gas)	4008494
30	Thermocouple	4008490
31	Pilot tube	4008486
	Electrode: included with no. 28	
	Ignition wire: included with no. 28	
32	Pilot gaskets (2)	4000715
33	Pilot stand	4007751
35	Burner module plate	4011592
36	Module plate end gaskets (2)	620B972
37	Link bracket	4011915
38	Pipe sealing plates (2)	4011394
39	Aeration lever	4008698
40	Washers #10 x 0.562 plated (3)	4006692

	Description	Part no.
41	Spring washers 3/16 x 9/16 (3)	4006691
42	#10-24 zinc finish steel reverse nut (3)	4007890
43	Valve mount	4000275
44	Window support	4012620
46	Pipe, valve to injector elbow	4012260
47	Interrupter block	4001037
48	GV60 Valve, no fittings	4000873
48a	Straight connector	4002564
48b	Connector inlet steel ZP	4000746
48c	By-pass screw #175 (natural gas)	4007532
	By-pass screw #105 (propane gas)	4000824
49	Receiver 'PLUS' version	4001911
50	Wiring harness	4001187
51	Cable interrupter/receiver	4001035
52	Cable interrupter, yellow	4002096
53	'PLUS' Handset GV60 with holder	4001910
54	Wall mount holder	9000008
55	Battery holder	4006553
56	Battery box cable 1500 mm	4006552
57	GV60 Valve repair kit (not included)	4004544
58	Reversible Liner Set	526RL
59	Reversible LH brick panel	4001162
60	Reversible rear brick panel	4012467
61	Reversible RH brick panel	4001163
62	Ceramic coals	530VCSK
	Rear coal— #1	4009745
	Front coal— #2	4009747
	Center Ember— #3	4009746
63	Traditional logs set	530VLSK
	Log #1—rear log	4009656
	Log #2—emberbed	4009662
	Log #3—twig bottom left	4009661
	Log #4—twig top left	4009660
	Log #5—center log	4009658
	Log #6—right log	4009657
	Log #7—left log	4009659
	Ember pieces (bagged)	4009407
64	Birch logs set	530VBLK
	Log #1—rear log	4009647
	Log #2—emberbed	4009653
	Log #3—left bottom twig	4009648
	Log #4—left top twig	4009652
	Log #5—center log	4009651
	Log #6—right log	4009650
	Log #7—left log	4009649
	Ember pieces (bagged)	4009407

Appendix C – Spare Parts

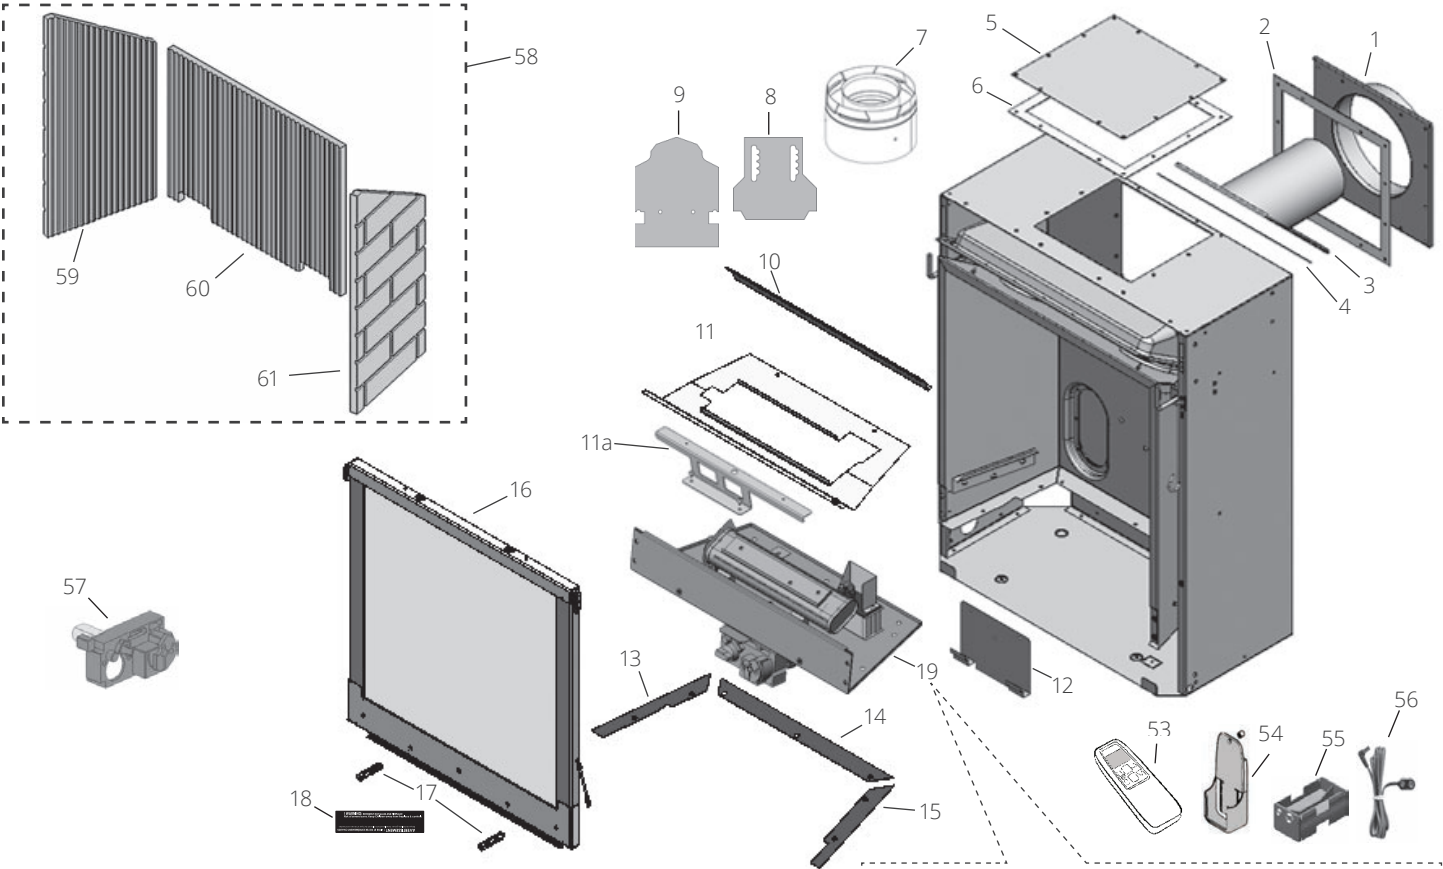

	Description	Part no.
65	Driftwood Kit	530VDWK
	Log #1—rear log	4009667
	Log #2—right log	4009669
	Log #3—emberbed	4009673
	Log #4—left bottom twig	4009672
	Log #5—left top twig	4009671
	Log #6—center log	4009670
	Log #7—left log	4009668
	Ember pieces (bagged)	4009407

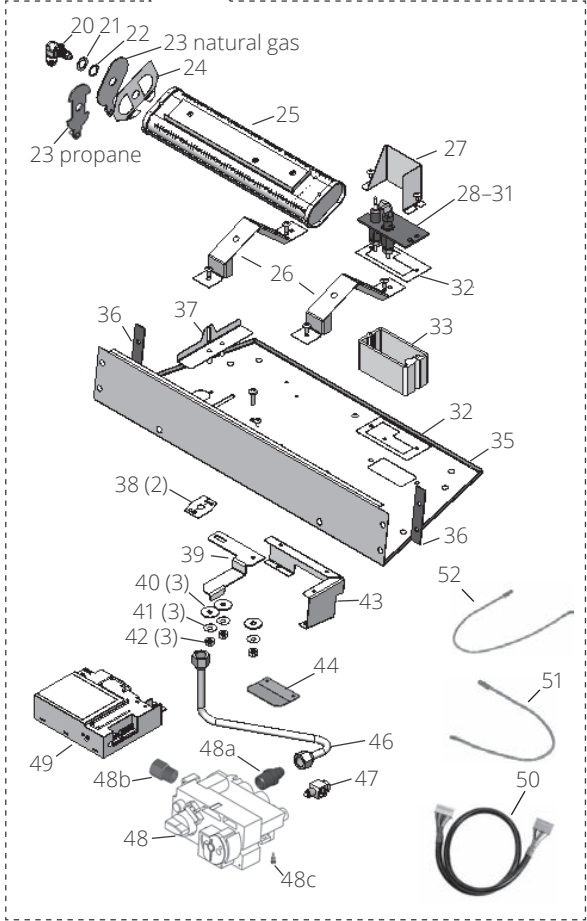

Appendix C – Spare Parts

