



LEGEND G3



BSK741 Barrier Screen Kit

CSA approved for use **ONLY** with Valor Contemporary Fronts 741

Installation Instructions

! WARNING



**HOT GLASS WILL
CAUSE BURNS.**

**DO NOT TOUCH GLASS
UNTIL COOLED.**

**NEVER ALLOW CHILDREN
TO TOUCH GLASS.**

INSTALLER
Leave this manual
with the appliance.

CONSUMER
Retain this manual
for future reference.



A barrier designed to reduce the risk of burns from the hot viewing glass is provided with this appliance and shall be installed for the protection of children and other at-risk individuals.

Barrier Screen

A Barrier Screen is being provided to you to install on your Contemporary Front 741SFB or 741SVI. The barrier screen is designed specifically to prevent any contact with the glass of the fireplace which becomes hot during operation and remains hot when cooling.


Installation of the barrier screen

1. Unhook the Contemporary front from the fireplace.
2. Identify the front, rear, top and bottom of the barrier screen by looking for the label which will be on the rear of the screen.
3. There are two tabs at the top of the screen. Bend them to an angle of 90 degrees towards the rear.

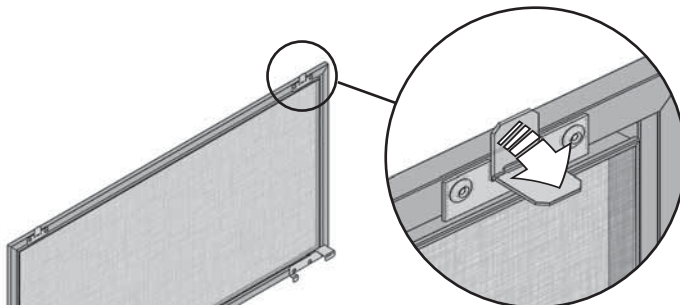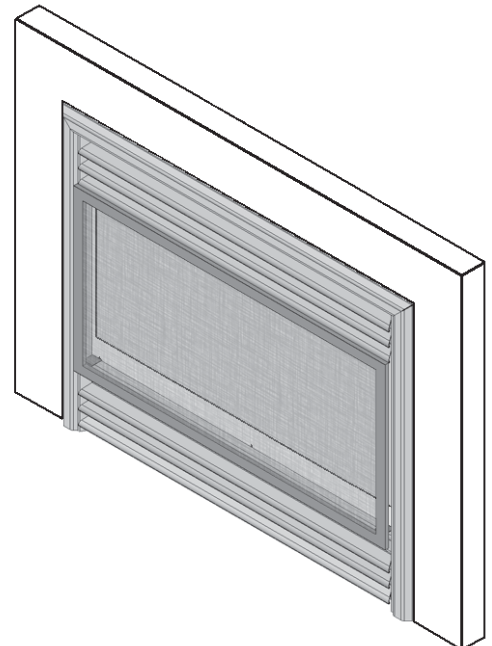


Barrier screen—rear view

4. On the Contemporary front, hook the bottom of the screen to the lower edge of the front opening as indicated.

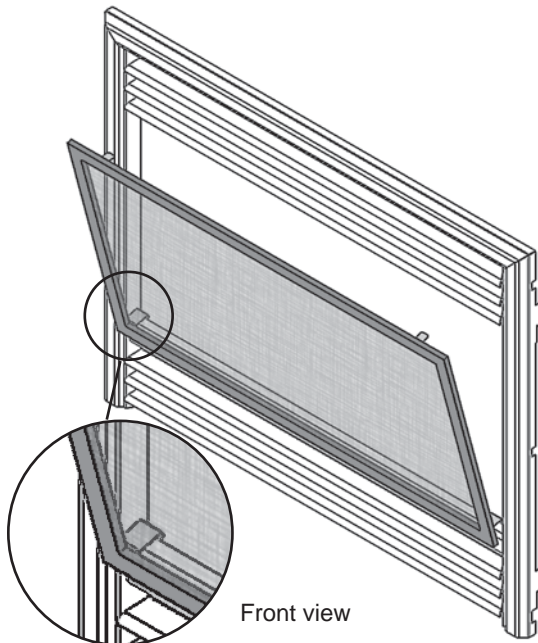

5. Put the top of the screen against the front. From the rear, bend the top tabs back up to secure the screen to the front.

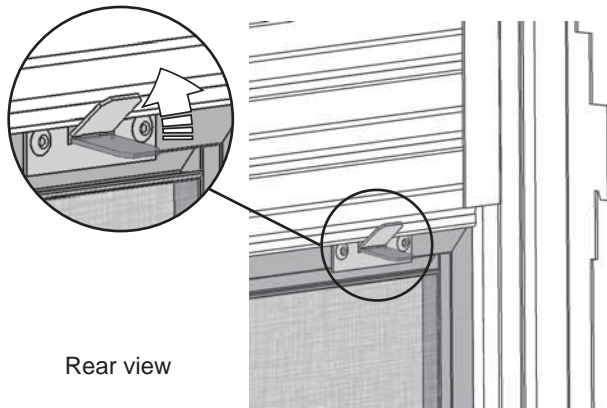

6. Hook the front back to the fireplace.

Maintenance

! WARNING

DO NOT TOUCH THE BARRIER SCREEN OR FIREPLACE WHILE THEY ARE HOT! Let the fireplace cool first before cleaning it.

FOR SAFETY PURPOSE, ensure the barrier screen is re-installed on the fireplace front after maintenance if it has been removed.

To clean the front, use mild soap and water. You can dust the screen with a soft brush. To brush the back of the screen, simply unhook the front trim.

If the barrier becomes damaged, the barrier shall be replaced with the manufacturer's barrier for this appliance.

To clean the window and ceramics inside the firebox, consult the *Owner's Information* section of the *Installation and Owner's Manual* supplied with the fireplace.

DO NOT CLEAN THE GLASS WINDOW WITH AMMONIA!

Because our policy is one of constant development and improvement, details may vary slightly from those given in this publication.

Designed and Manufactured by / for
Miles Industries Ltd.

190 – 2255 Dollarton Highway, North Vancouver, B.C., CANADA V7H 3B1

Tel. 604-984-3496 Fax 604-984-0246

www.valorfireplaces.com

Grille de protection BSK741

Homologuée pour utilisation avec les Devantures Contemporaines Valor 741 **SEULEMENT**

Directives d'installation

! AVERTISSEMENT



UNE SURFACE VITRÉE CHAUDE PEUT
CAUSER DES BRÛLURES.

**LAISSEZ REFROIDIR LA SURFACE VITRÉE
AVANT D'Y TOUCHER.**

**NE PERMETTEZ JAMAIS À UN ENFANT
DE TOUCHER LA SURFACE VITRÉE.**

Une grille de protection conçue pour réduire les risques de brûlures sur la vitre chaude de la fenêtre est fournie avec cet appareil et doit être installée pour la protection des enfants et autres individus à risques.

INSTALLATEUR : Laissez cette notice avec l'appareil.


CONSOMMATEUR : Conservez cette notice pour consultation ultérieure.

Grille de protection


La Grille de protection BSK741 vous est fournie pour installer sur votre Devanture Contemporaine 741SFB ou 741SVI. La grille de protection est conçue particulièrement pour prévenir tout contact avec la vitre du foyer qui devient très chaude lorsque le foyer est allumé et qui demeure chaude pour une période de temps après que le foyer soit éteint.

Installation de la grille


1. Débranchez la Devanture contemporaine du foyer.
2. Identifiez l'arrière et le bas de la grille en repérant l'étiquette située à l'arrière au bas.
3. Il y a deux onglets de fixation au haut de la grille. Pliez-les à un angle de 90 degrés vers l'arrière.

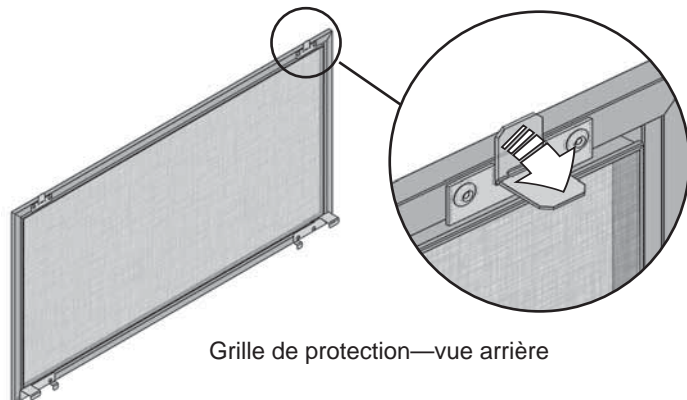

Grille de protection—vue arrière

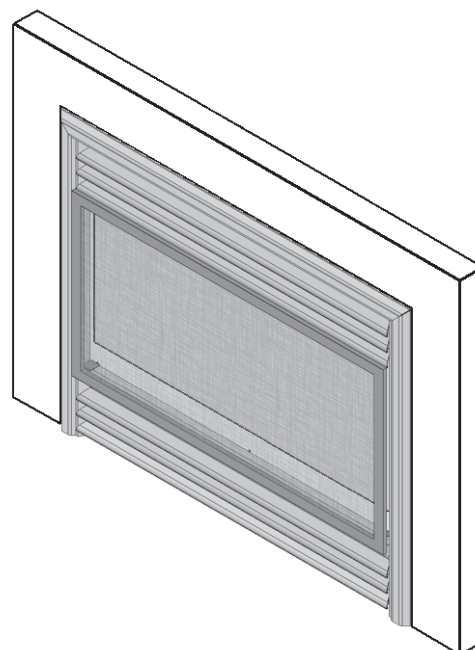


4. Sur la Devanture contemporaine, accrochez le bas de la grille sur le bord du bas de l'ouverture tel qu'indiqué.

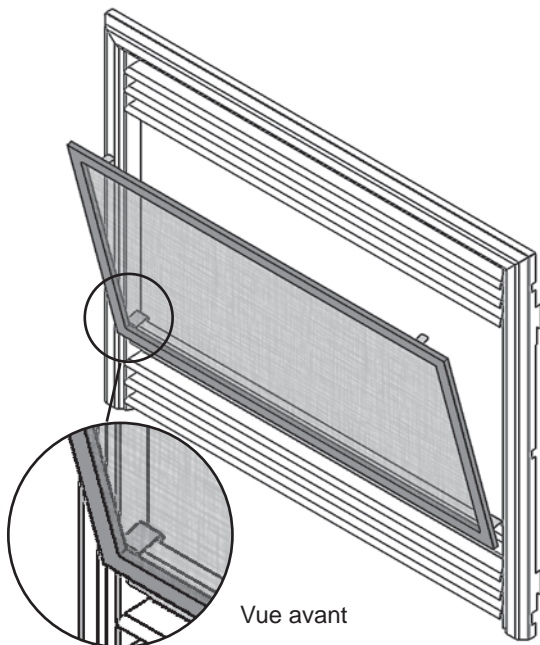

Vue avant

5. Placez le haut de la grille contre la devanture. De l'arrière repliez les onglets de fixation vers le haut pour fixer la grille.

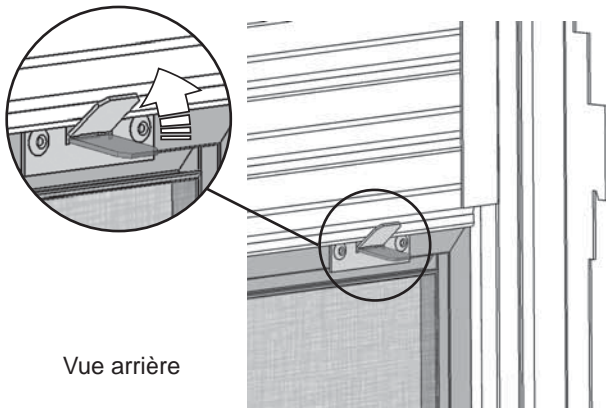

Vue arrière

6. Accrochez la devanture munie de la grille au foyer.

Entretien

⚠ AVERTISSEMENT

NE TOUCHEZ PAS LA GRILLE DE PROTECTION OU LE FOYER LORSQU'ILS SONT CHAUDS!

Laissez le foyer refroidir avant de le nettoyer.

POUR DES RAISONS DE SÉCURITÉ, assurez-vous que la grille de protection est réinstallée sur la bordure après l'entretien si elle a été enlevée.

Pour nettoyer la devanture, utilisez une solution d'eau et de savon doux. Époussetez la grille à l'aide d'une brosse à poils doux. Pour brossez l'arrière de la grille, décrochez simplement la devanture.

Si la grille est endommagée, elle doit être remplacée par la grille conçue par le fabricant pour cet appareil.

Pour nettoyer la fenêtre et l'intérieur de la boîte de foyer, consultez la section *Information à l'intention du consommateur* dans le *Guide de l'installation et du consommateur* fourni avec le foyer.

NE NETTOYEZ PAS LA VITRE DE LA FENÊTRE AVEC UN PRODUIT À BASE D'AMMONIAQUE!

Parce que nous favorisons une politique de développement continu, certains détails de la présente publication peuvent varier.

Conçue et fabriquée par / pour

Miles Industries Ltd.

190 – 2255 Dollarton Highway, North Vancouver, BC, CANADA V7H 3B1

Tél. 604-984-3496 Téléc. 604-984-0246

www.foyervalor.com