

INSTALLATION MANUAL

valor® H5/6-WPK

Power Kit J Box—for Valor fireplaces H5 and H6* (*H6 1400M fireplace is already supplied with this J box)


Description

The H5/6-WPK electrical housing with a snap-in socket installs in the Valor H5 and H6 fireplaces to provide power for the fan kit 1195CFK or WiFi kit.



Installation

1. Make sure supply power is disconnected before proceeding. See *Wiring Diagram* in the fireplace's installation manual for all details.
2. Thread the home's electrical wire inside the appliance casing on the left hand side using an approved wire clamp for the type of wire used (not included). Do not tighten the wire clamp just yet to allow for wire adjustment.



Electrical wiring enters through the left hand side of the appliance case (front round hole)

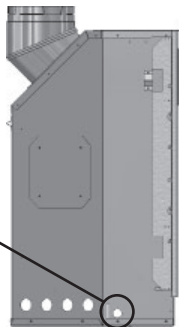

3. In the front left corner of the appliance case, slide the junction box tab into the slot of the appliance case located right behind the cable clamp. Ensure the wires are not pinched between the junction box and the appliance case..

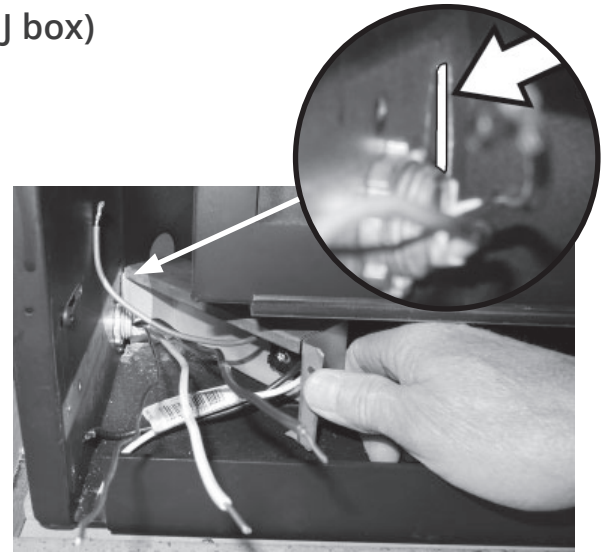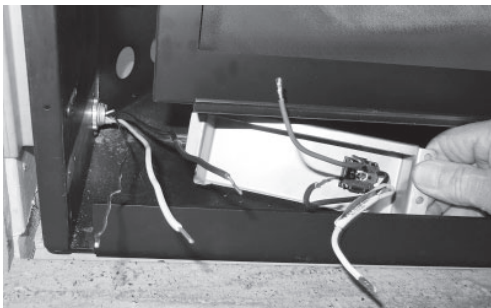

4. Connect the corresponding wires and cap them with wire nuts.
5. Tuck the wires inside the junction box and hold it against the appliance case while pushing any excess wire out through the wire clamp.
6. Tighten the wire clamp outside of appliance case.
7. Secure the junction box to the appliance (1 screw).

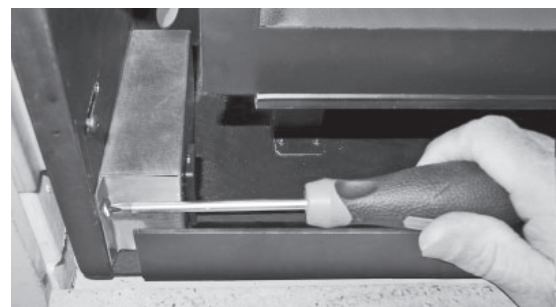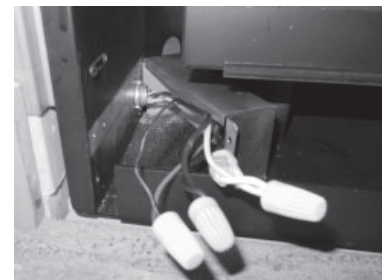

Designed and Manufactured for Miles Industries Ltd.
190 - 2255 Dollarton Highway
North Vancouver, B.C., CANADA V7H 3B1
Tel. 604-984-3496 Fax 604-984-0246
valorfireplaces.com

valor® H5/6-WPK

Boîte de jonction—pour foyers Valor H5 et H6*


(*H6 1400M fireplace is already supplied with this J box)

Description



La boîte de jonction avec prise H5/6-WPK s'installe dans les foyers Valor H5 et H6 pour fournir l'alimentation électrique au ventilateur ou au WiFi.

Installation



1. Débranchez le courant électrique alimentant le foyer. Voir le Schéma des connexions dans le guide d'installation du foyer pour tous les détails.
2. Insérez le câble électrique dans la caisse de l'appareil du côté gauche en utilisant une bague de serrage certifiée pour le type de câble utilisé. Ne serrez pas la bague tout de suite afin de permettre l'ajustement du câble.

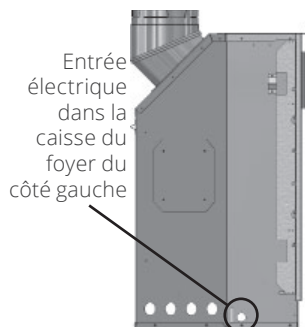

3. Placez la boîte de jonction dans la caisse de l'appareil sur le devant à gauche, puis insérez sa languette dans la fente située juste derrière la bague de serrage. Assurez-vous que les fils ne soient pas pincés entre la boîte de jonction et la paroi de l'appareil.

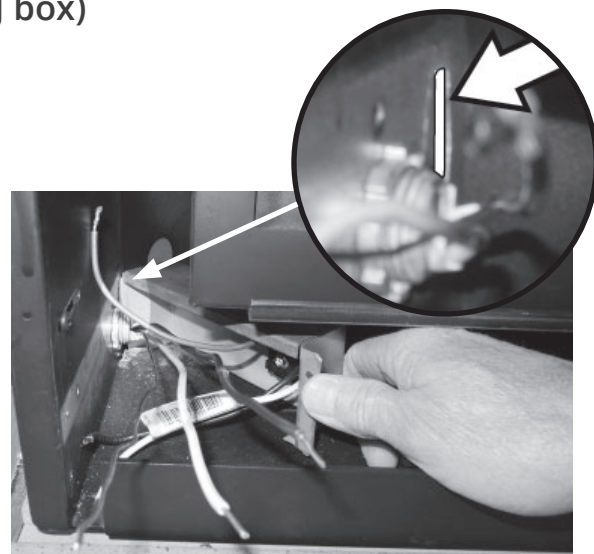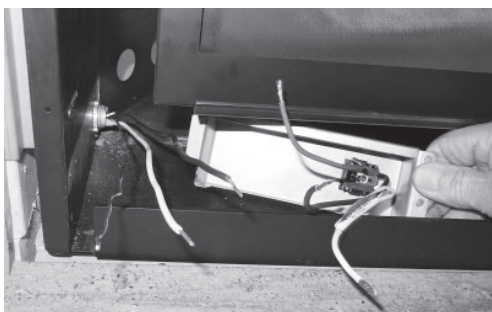

4. Branchez les fils correspondants et couvrez-les avec des connecteurs de fil.
5. Placez les fils dans la boîte de jonction et placez la boîte contre la paroi de gauche de la caisse de foyer tout en poussant vers l'extérieur le câblage en excès.
6. Serrez la bague de serrage.
7. Fixez la boîte de jonction à l'appareil (1 vis).

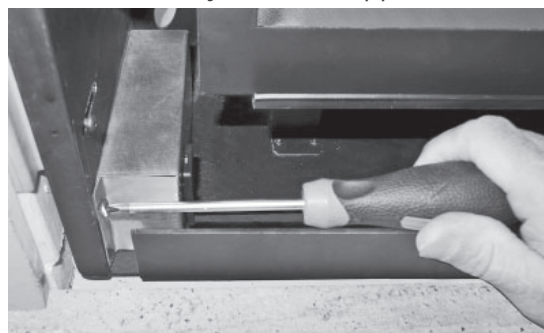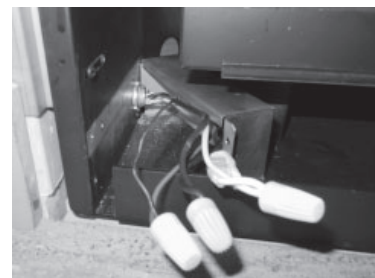

Conçue et fabriquée pour Miles Industries Ltd.
190 - 2255 Dollarton Highway
North Vancouver, BC, CANADA V7H 3B1
Tél. 604-984-3496 Téléc. 604-984-0246
www.foyervalor.com