


## 753 Oversize Trim Kit

Use with Valor heater models 738, 739 or RF24XB in the RA24ZC


### INSTALLATION INSTRUCTIONS

**Note:** This kit must be installed or serviced by a qualified installer, service agency or gas supplier. These instructions are to be used in conjunction with the main installation instructions for the above listed models.

#### Overall Dimensions

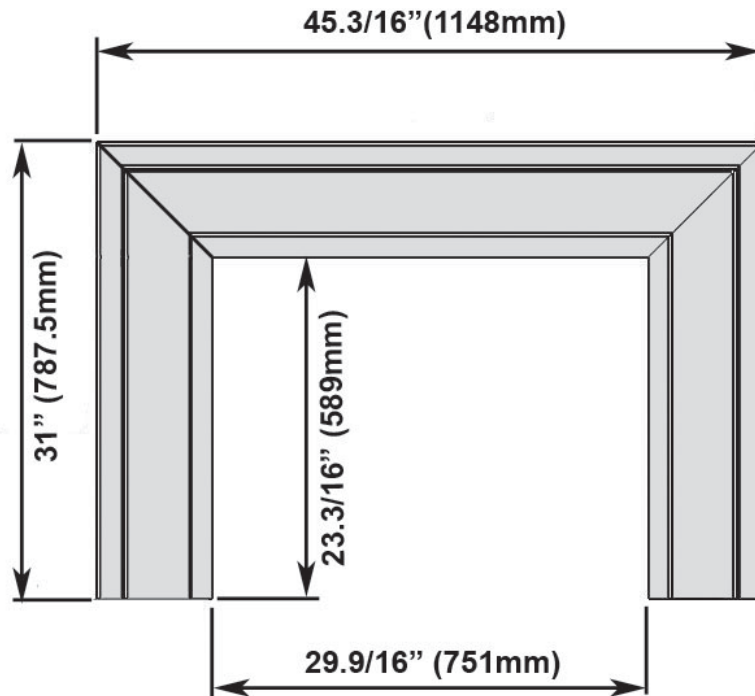


#### Kit contents

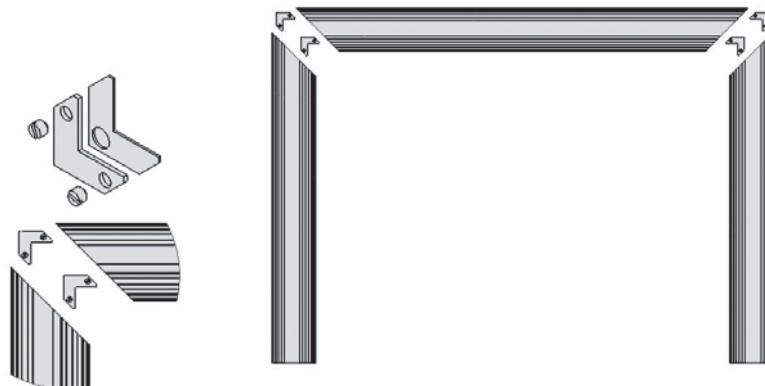


# Installation

## Side Trim Assembly

- 1) Slide the corner connection plates into channels in the top and side sections. Butt the 2 sections together, fit 4 grub screws and tighten to secure. Ensure joint looks presentable and tight.
- 2) Repeat for other corner.
- 3) Attach the 2 shroud mounting brackets to the side sections with 3 screws for each side. The brackets will mount flush to the bottom.
- 4) Attach the complete trim unit to the firebox with 4 screws.

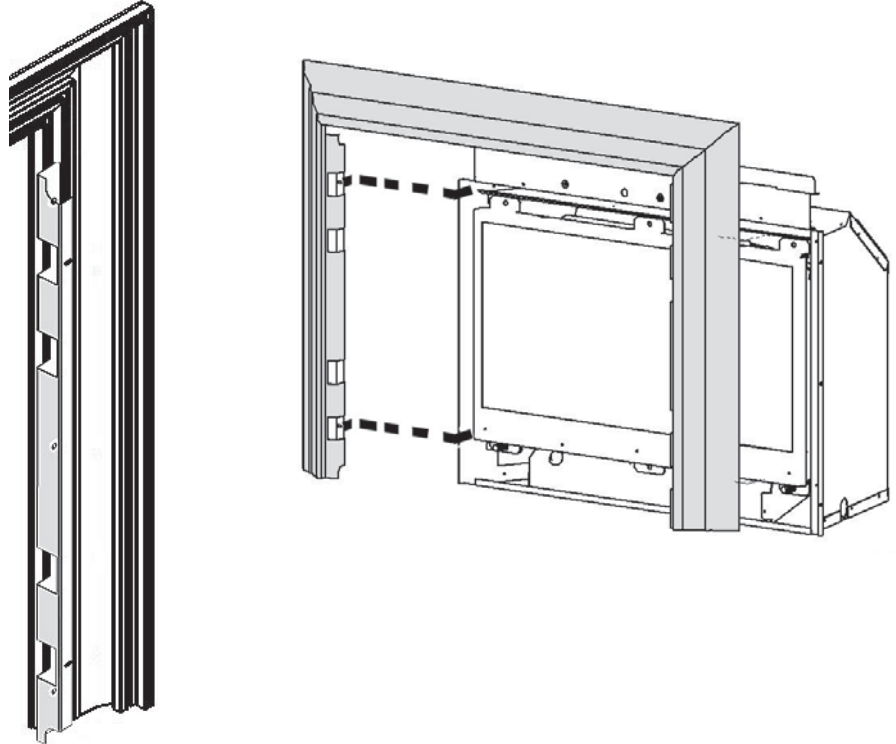

## Repair Parts Lists

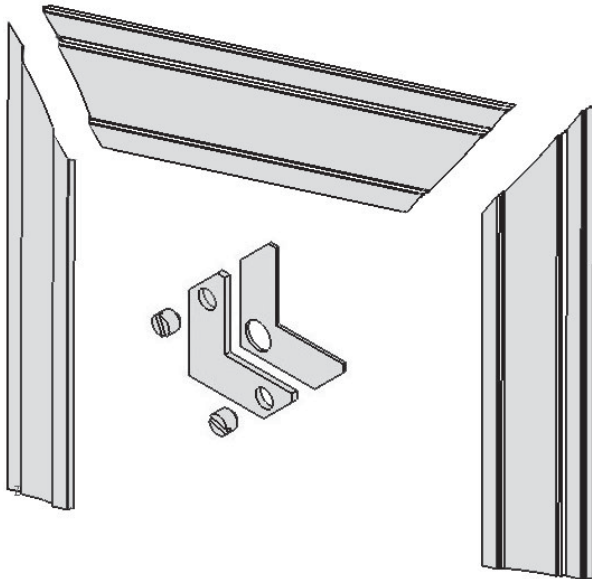

Description 753OTK	Part #
Top Extrusion	4001176AZ
RHS Extrusion	4001177AZ
LHS Extrusion	4001178AZ
Fixing Bracket (4 sets)	4000092

Description 753OVI	Part #
Top Extrusion	4001176VI
RHS Extrusion	4001177VI
LHS Extrusion	4001178VI
Fixing Bracket (4 sets)	4000092

Because our policy is one of constant development and improvement, details may vary slightly from those given in this publication.

Designed and Manufactured by / for

**Miles Industries Ltd.**

190 – 2255 Dollarton Highway, North Vancouver, B.C., CANADA V7H 3B1

Tel. 604-984-3496 Fax 604-984-0246

[www.valorfireplaces.com](http://www.valorfireplaces.com)


## Grande bordure à trois côtés 753

Utilisez avec les foyers Valor 738, 739 ou le RF24XB avec RA24ZC


### INSTALLATION INSTRUCTIONS

**Note :** Ce kit doit être installé ou réparé par un installateur qualifié, une agence de service certifiée ou un fournisseur de gaz. Ces instructions doivent être utilisées conjointement avec les instructions d'installation fournies avec les modèles de foyers indiqués ci-dessus.

#### Dimensions

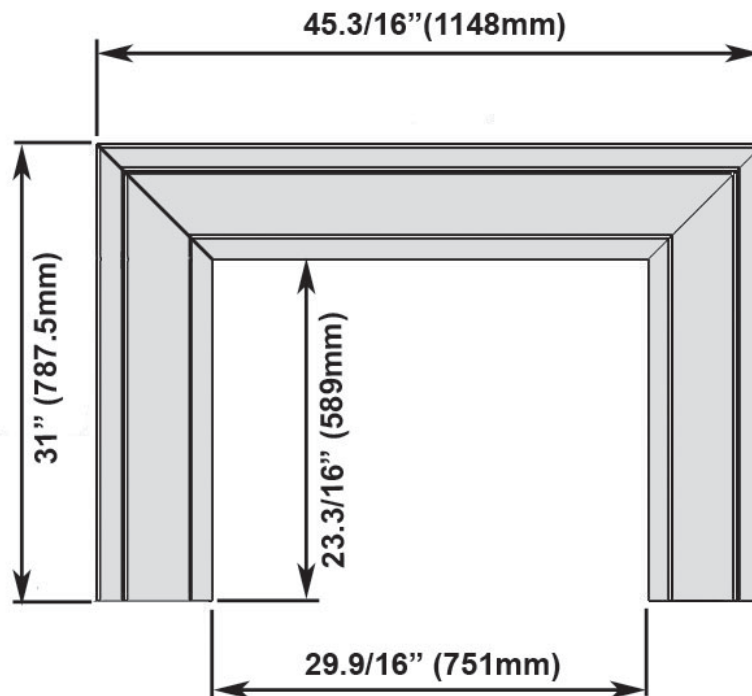


#### Contenu du kit

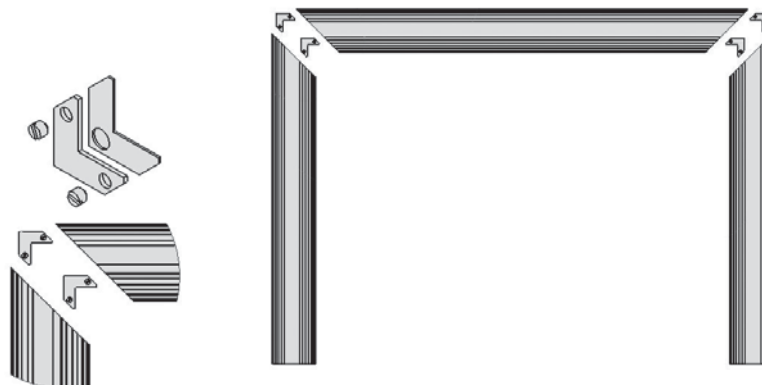


## Installation

### Assemblage de la bordure

- 1) Glissez 2 plaques d'assemblage de coin dans les rainures des sections du haut et d'un des côtés de la bordure. Aboutez les 2 sections et fixez-les ensemble à l'aide de 4 vis sans tête. Assurez-vous que le joint est solide et bien monté.
- 2) Répétez avec l'autre coin.
- 3) Fixez les 2 supports de montage aux sections des côtés à l'aide de 3 vis par côté. Les supports doivent être alignés avec le bas des sections.
- 4) Fixez la bordure à la boîte de foyer à l'aide 4 vis.

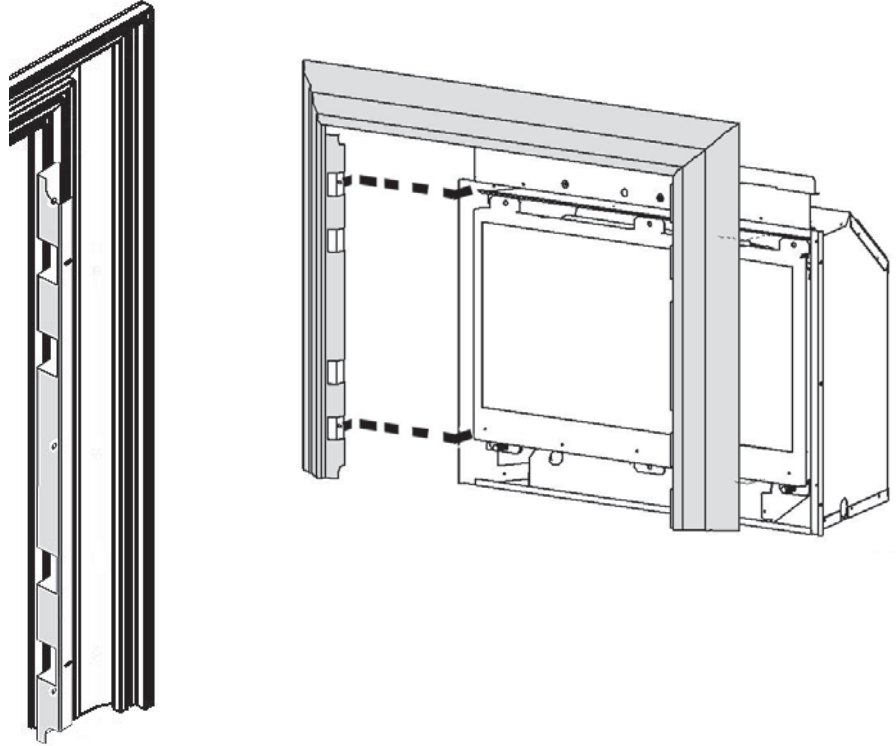

### Liste des pièces

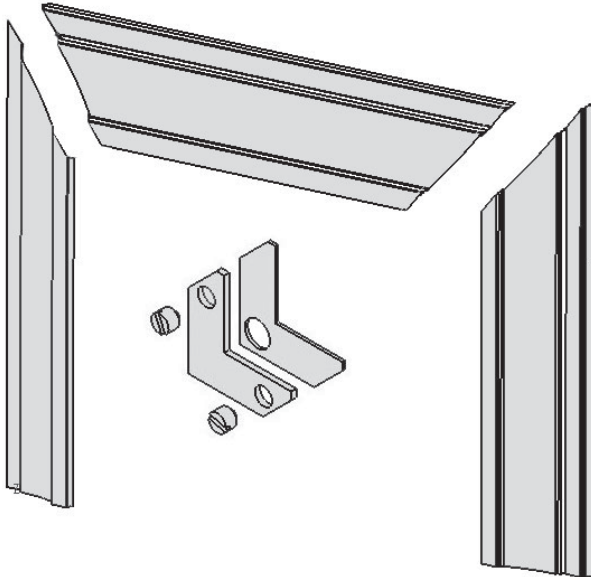

Description 753OTK Black- Noire	Pièce n°
Section du haut	4001176AZ
Section côté droit	4001177AZ
Section côté gauche	4001178AZ
Plaques d'assemblage de coin (4 sets)	4000092

Description 753OTV Vintage - Fer Antique	Pièce n°
Section du haut	4001176VI
Section côté droit	4001177VI
Section côté gauche	4001178VI
Plaques d'assemblage de coin (4 sets)	4000092

Parce que nous favorisons une politique de développement continu, certains détails de la présente publication peuvent varier.

Conçue et fabriquée par / pour

**Miles Industries Ltd.**

190 – 2255 Dollarton Highway, North Vancouver, BC, CANADA V7H 3B1

Tél. 604-984-3496 Téléc. 604-984-0246

[www.foyervalor.com](http://www.foyervalor.com)