




Model 540 WDK


Wire Dressguard Kit Required when fitting Valor Arch Fronts to 922 Adorn Fireplace

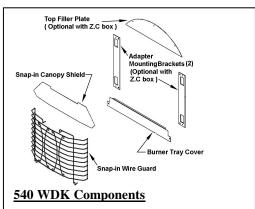


Model 540 WDK is required for all 922 Adorn Fireplace installations fitted with 539/549/550 Arch Cast fronts.

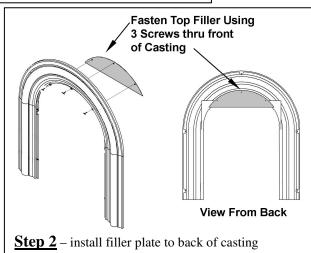

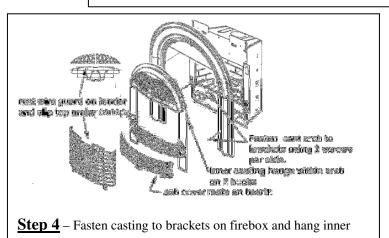

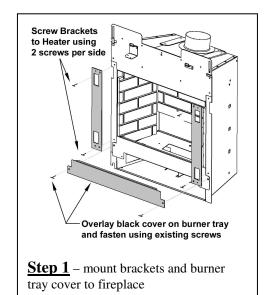

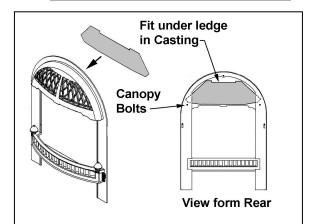

Step 3 – Install canopy shield Insert one corner of the shield into the corner behind the cast frame as shown. Bend the canopy shield to a slight radius while inserting the other corner behind the cast frame as shown (it may be necessary to loosen canopy bolts). With both the corners behind the cast frame, snap the shield forward to follow the curve of the cast iron canopy. The top of the shield should fit under the projecting ledge in the casting as shown.

Designed and Manufactured by
Miles Industries Ltd.

190 – 2255 Dollarton Highway, North Vancouver B.C, CANADA. V7H 3B1
Ph. (604) 984-3496 Fax (604) 984-0246

www.milesfireplaces.com