



# HORIZON & H4

## 618RGL

### Reflective Glass Liner Set

For use with Valor Fireplaces Models 534 and 650 ONLY

### Installation Instructions

#### Kit Content


- 4002110—Top ceramic panel
- 4005001—Rear glass panel
- 4005000—LH glass panel
- 4005002—LH filler panel
- 4004999—RH glass panel
- 4004981—Clips, LH side panels (3)
- 4004711AH—Spacers, rear and RH panels (8)

Unpack all cartons carefully, with special care for the glass panels.

To achieve the intended effect, the glass panels should be installed so the smooth side is visible.

**Note:** This kit must be installed or serviced by a qualified installer, service agency or gas supplier. These instructions are to be used in conjunction with the main installation instructions for the above listed models.


**WARNING:** If these instructions are not followed exactly, a fire or explosion may result causing property damage, personal injury or loss of life.

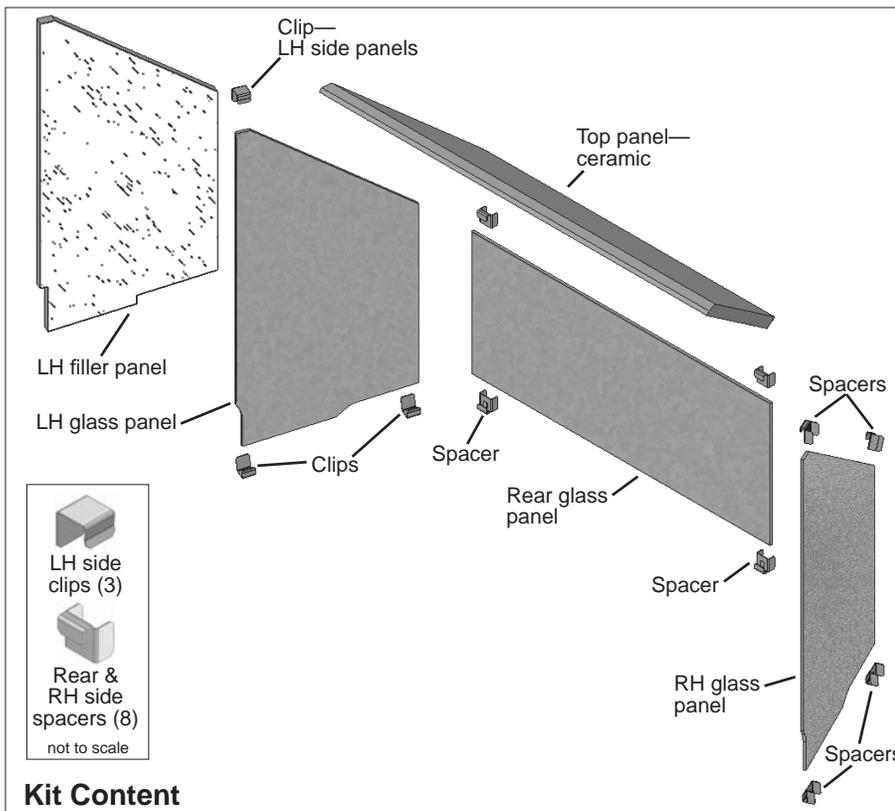



## Installation

If retrofitting an existing appliance, remove the existing fuel bed and side panels.

1. Fit 4 spacers to the rear glass panel as indicated.

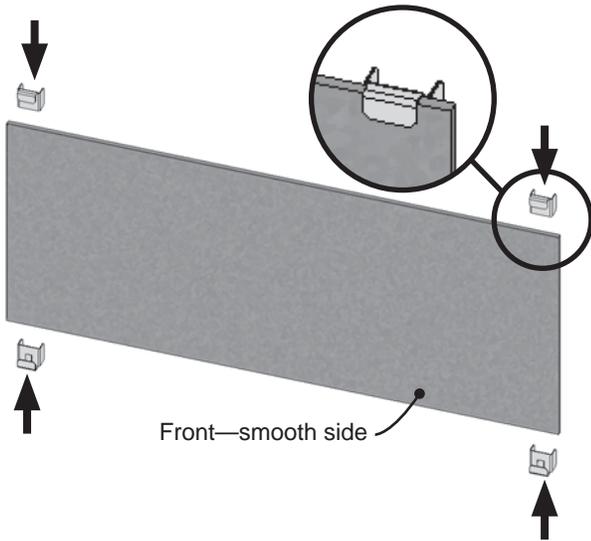


2. Place the rear glass panel, smooth side in front, against the back of the firebox on the ledge of the rear log support.

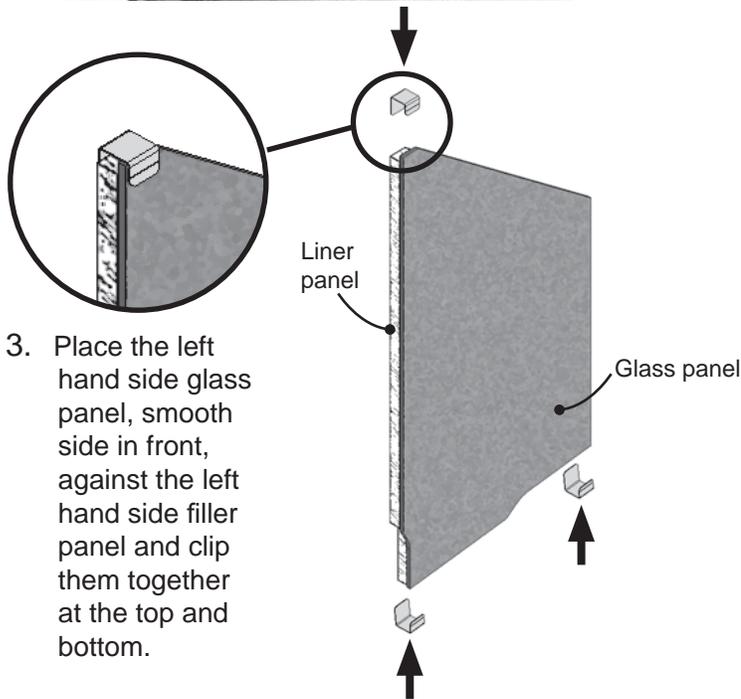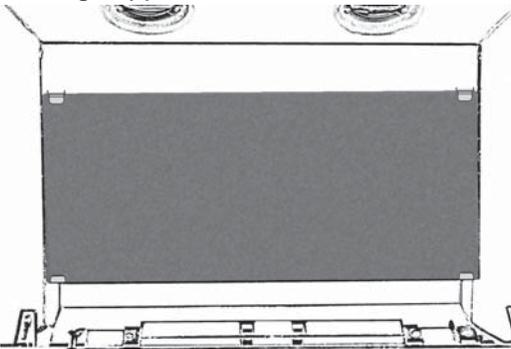


3. Place the left hand side glass panel, smooth side in front, against the left hand side filler panel and clip them together at the top and bottom.


4. Hold the left hand side panels assembly at an angle and insert its bottom edge inside the firebox. Rotate the panels to a vertical position ensuring that the top edges are behind the flange of the firebox. Pull the panels as forward as possible against the left edge of the firebox.

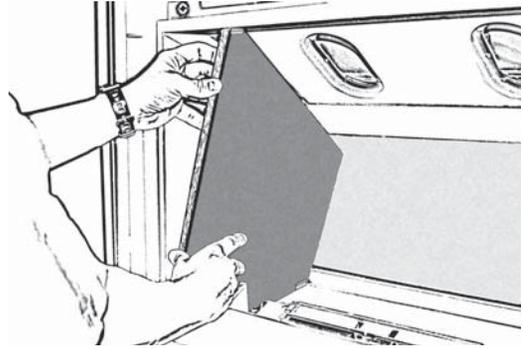


5. Fit 4 spacers to the right hand side glass panel, smooth side in front, as indicated.

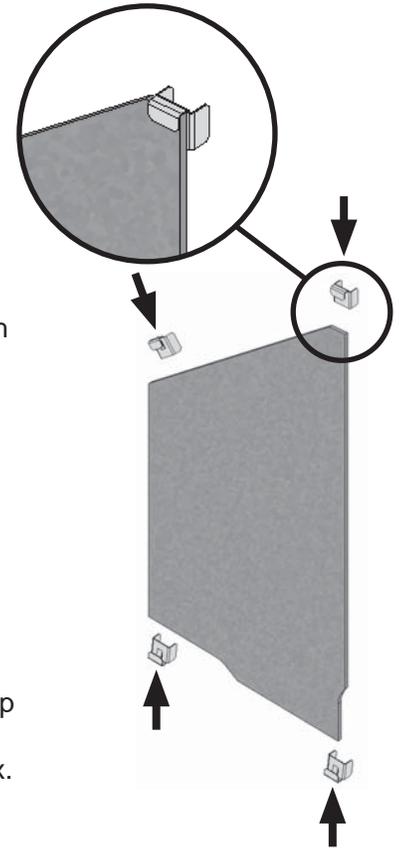

6. Hold the right hand side panel at an angle and insert its bottom edge inside the firebox. Rotate the panel to a vertical position ensuring that the top edge is behind the flange of the firebox. Pull the panel as forward as possible against the right edge of the firebox.

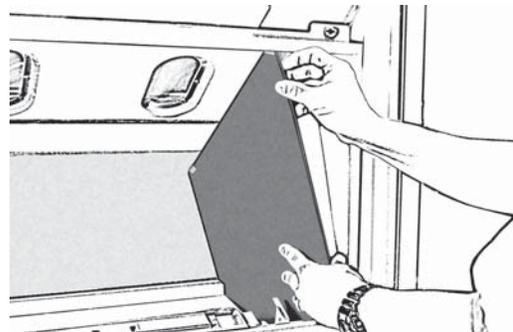

7. Insert the top panel over the left side panels while holding the top panel forward up the slope. Rotate the right side of the top panel upwards and place it over the top of the right panel. Slide the top panel down the slope of the firebox as far as possible to close the gap with the rear panel and to maximize the gap above the front edge of the top panel.

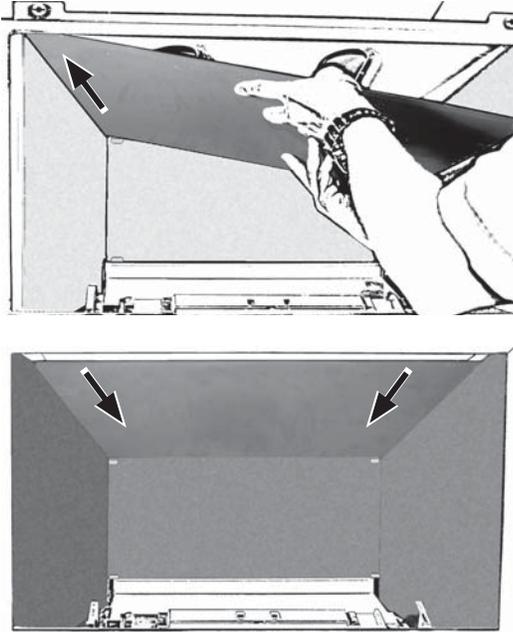

8. Continue with the fireplace installation using the installation manual provided with the fireplace.

## Maintenance

To clean the glass panels **liners**, use standard household glass cleaner.

Dust the filler panel with a soft brush.

**ATTENTION: DO NOT CLEAN THE FRONT GLASS WINDOW PANE OF THE FIREPLACE WITH AMMONIA!**

See the fireplace instruction manual for information on how to clean the fireplace glass window.

Because our policy is one of constant development and improvement, details may vary slightly from those given in this publication.

Designed and Manufactured by / for  
**Miles Industries Ltd.**

190 – 2255 Dollarton Highway, North Vancouver, B.C., CANADA V7H 3B1

Tel. 604-984-3496 Fax 604-984-0246

[www.valorfireplaces.com](http://www.valorfireplaces.com)

# HORIZON & H4

## Panneaux de verre 618RGL

Pour installation sur les foyers Valor 534 et 650 SEULEMENT

### Directives d'installation

#### Contenu du kit


- 4002110—Panneau de céramique du haut
- 4005001—Panneau de verre arrière
- 4005000—Panneau de verre gauche
- 4005002—Panneau de remplissage gauche
- 4004999—Panneau de verre droit
- 4004981—Agraphes, panneaux gauches (3)
- 4004711AH—Écarteurs, panneaux arrière et droit (8)

Déballiez les cartons avec précautions, particulièrement lorsque vous manipulez les panneaux de verre fragiles.

Afin d'obtenir l'effet réfléchissant des panneaux, installez-les avec le côté lisse visible.

**Note :** Ce kit doit être installé et entretenu par un installateur qualifié, une agence de service certifiée ou un fournisseur de gaz. Ces instructions doivent être utilisées conjointement avec les instructions d'installation des modèles mentionnés ci-haut.


**MISE EN GARDE :** Si les instructions fournies dans le présent guide ne sont pas suivies à la lettre, un feu ou une explosion pourraient résulter et causer des dommages matériels, des blessures ou la mort.

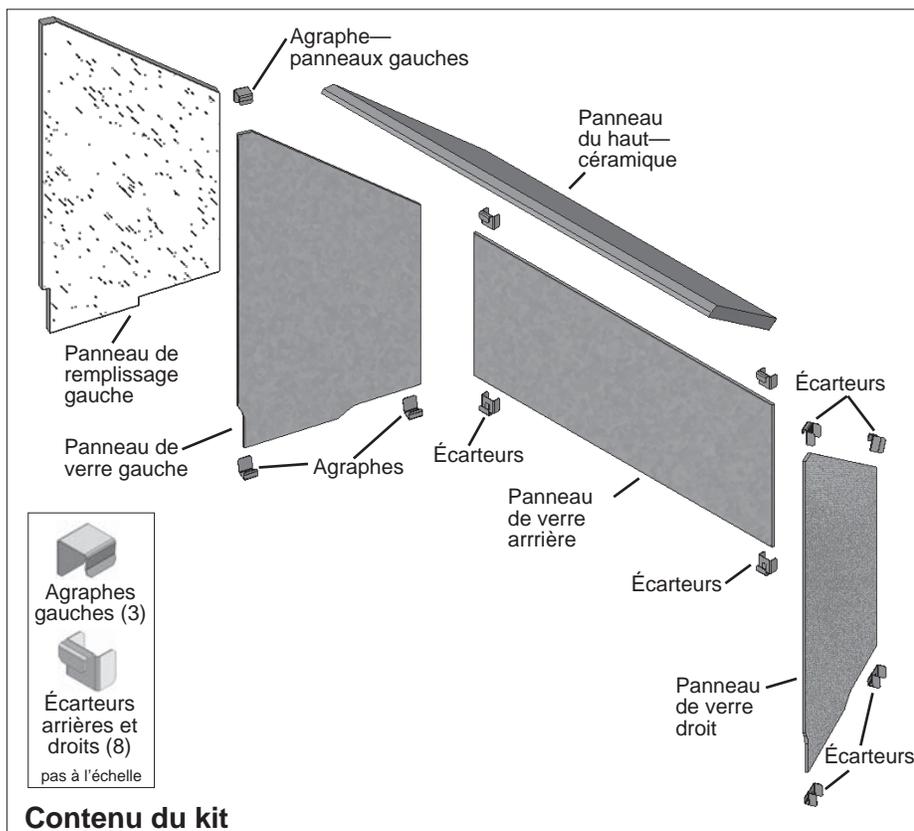



## Installation

Si vous remplacez les panneaux d'un appareil déjà installé, enlevez le lit d'alimentation et les panneaux. .

1. Fixez 4 écarteurs aux 4 coins du panneau arrière.

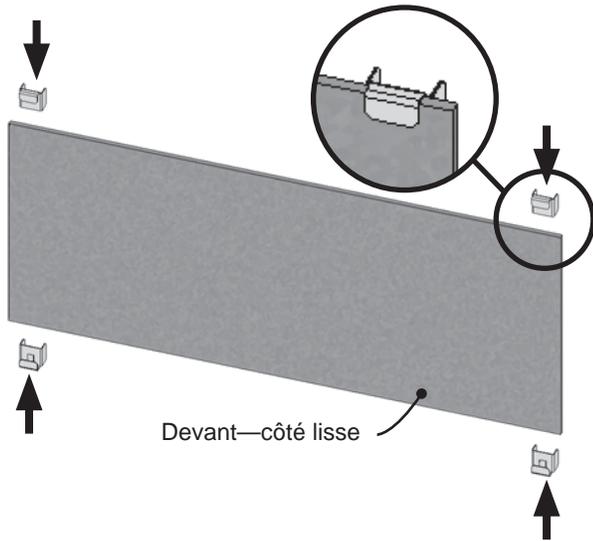

2. Placez le panneau arrière, côté lisse visible, contre la paroi arrière de la boîte de foyer sur le rebord du support à bûches.

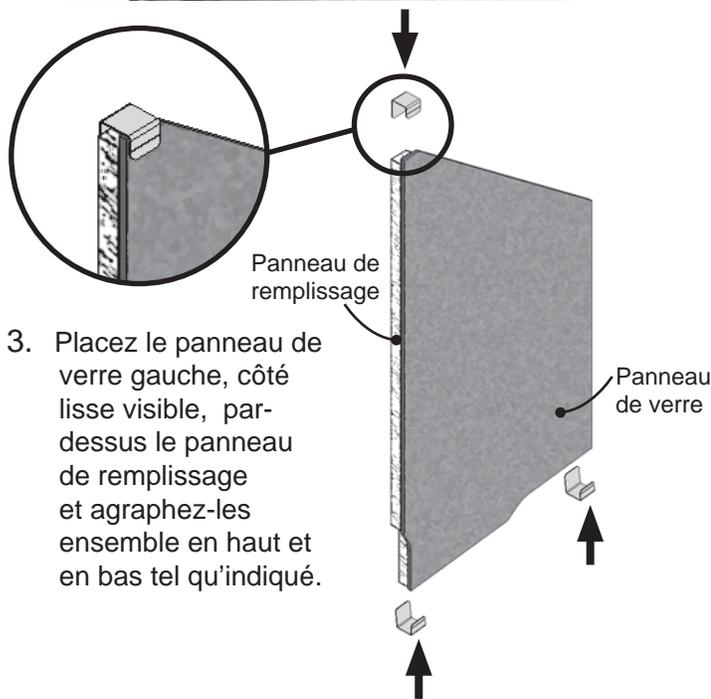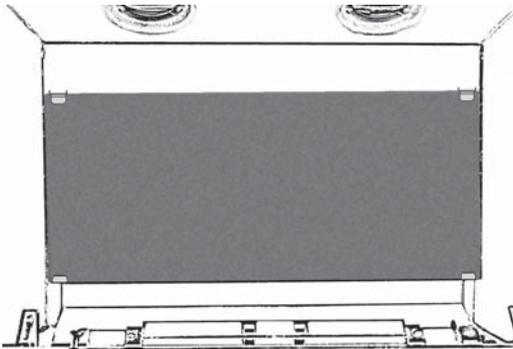



3. Placez le panneau de verre gauche, côté lisse visible, par-dessus le panneau de remplissage et agrapez-les ensemble en haut et en bas tel qu'indiqué.

4. Inclinez les panneaux gauches et insérez-les complètement dans la boîte de foyer derrière le rebord du haut. Placez le bas des panneaux d'abord et le haut ensuite. Tirez les panneaux le plus possible vers l'avant de la boîte de foyer.





5. Fixez 4 écarteurs au panneau de verre droit, côté lisse visible, tel qu'indiqué.

6. Inclinez le panneau droit et insérez-le complètement dans la boîte de foyer derrière rebord du haut. Placez le bas du panneau d'abord et le haut ensuite. Glissez le panneau le plus possible vers l'avant de la boîte de foyer.

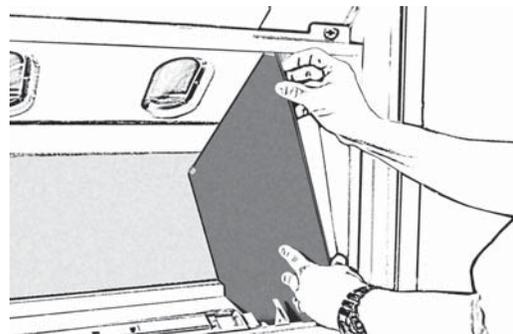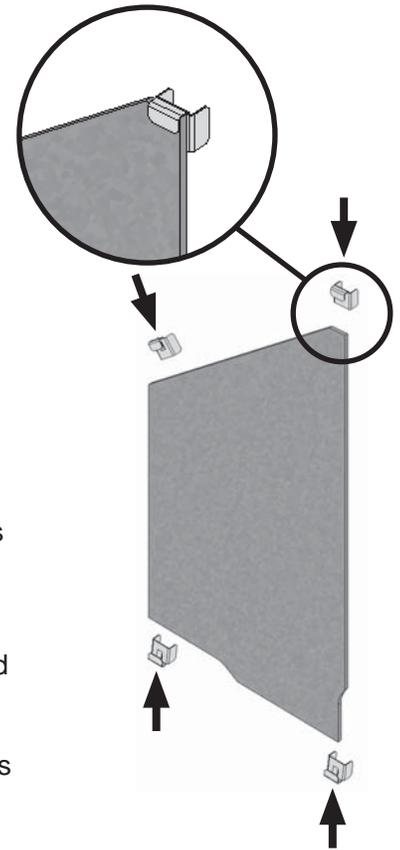

7. Insérez le panneau du haut au-dessus du panneau gauche le plus en avant possible le long de la pente de la boîte de foyer. Pivotez l'autre côté du panneau du haut et insérez-le au-dessus du panneau droit. Glissez maintenant le panneau du haut le plus en arrière possible le long de la pente de la boîte de foyer pour éliminer l'espace entre le panneau arrière et le panneau du haut et optimiser l'espace au-dessus du bord avant du panneau.

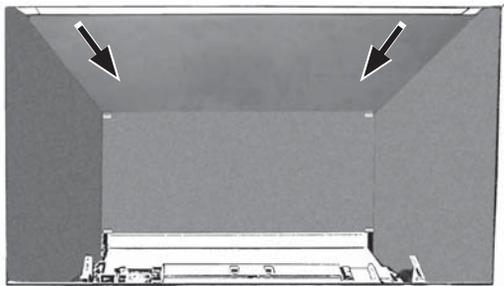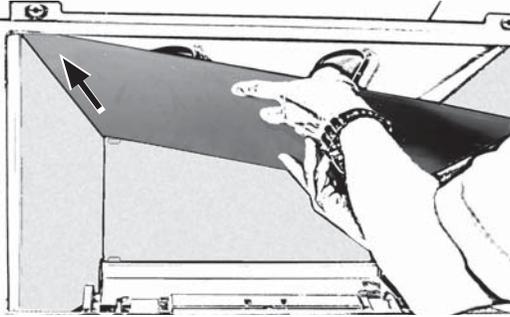

8. Continuez l'installation du foyer selon le guide d'installation fourni avec le foyer.

## Entretien

Pour nettoyer les **panneaux de verre intérieurs**, utilisez un nettoyant domestique à vitres.

Époussettez les panneaux de remplissage avec une brosse à poil doux.

**ATTENTION : NE PAS NETTOYER LA VITRE DU FOYER AVEC UN NETTOYEUR À BASE D'AMMONIAQUE!**

Consultez le guide de l'installation et du consommateur fourni avec le foyer pour plus de renseignements sur la façon de nettoyer et les produits à employer pour nettoyer la fenêtre du foyer.

Parce que nous favorisons une politique de développement continu, certains détails de la présente publication peuvent varier.

Conçu(e) et fabriqué(e) par / pour

**Miles Industries Ltd.**

190 – 2255 Dollarton Highway, North Vancouver, BC, CANADA V7H 3B1

Tél. 604-984-3496 Téléc. 604-984-0246

[www.foyervalor.com](http://www.foyervalor.com)