

INSTALLATION MANUAL

Valor® G2 Series

442EDF3B—3-Sided Surround Assembly

CSA approved for use with Valor G2 400 Models only



DANGER



**HOT GLASS WILL
CAUSE BURNS.**

**DO NOT TOUCH GLASS
UNTIL COOLED.**

**NEVER ALLOW CHILDREN
TO TOUCH GLASS.**

A barrier designed to reduce the risk of burns from the hot viewing glass is provided with this appliance and must be installed for the protection of children and other at-risk individuals.

INSTALLER



Leave this manual
with the appliance.

CONSUMER

Retain this manual
for future reference.

Note: This kit must be installed by a qualified installer, service agency or gas supplier at the time of the heater installation. These instructions are to be used in conjunction with the fireplace main installation instructions.


The 442EDF3B 3-Sided Surround Assembly can be installed on the G2 400 insert fireplace model installed into a solid-fuel burning masonry fireplace. Its installation does not affect cavity size neither mantel clearances as listed in the G2 appliance's installation manual.

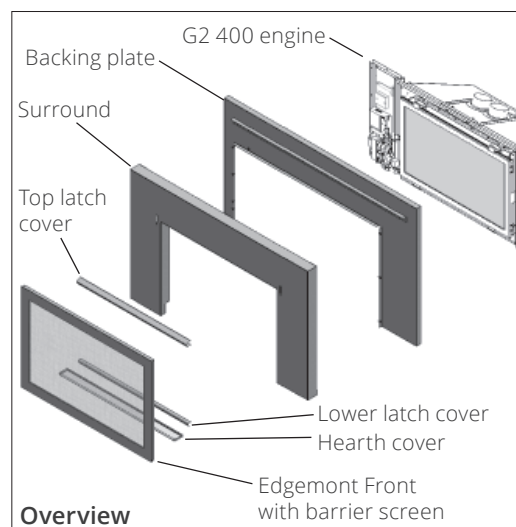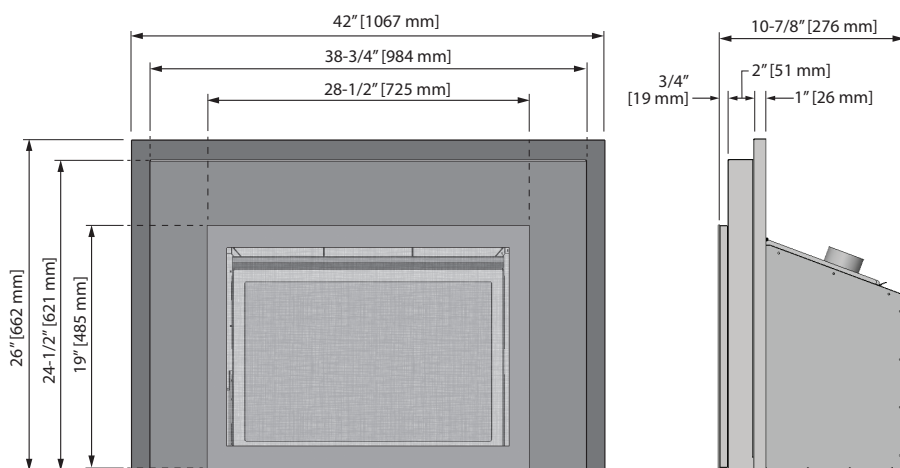


Installation

The fireplace must already be installed into a solid fuel burning masonry fireplace before installing this kit. See the fireplace Installation Manual for details.


1. Install backing plate to appliance (9 screws).

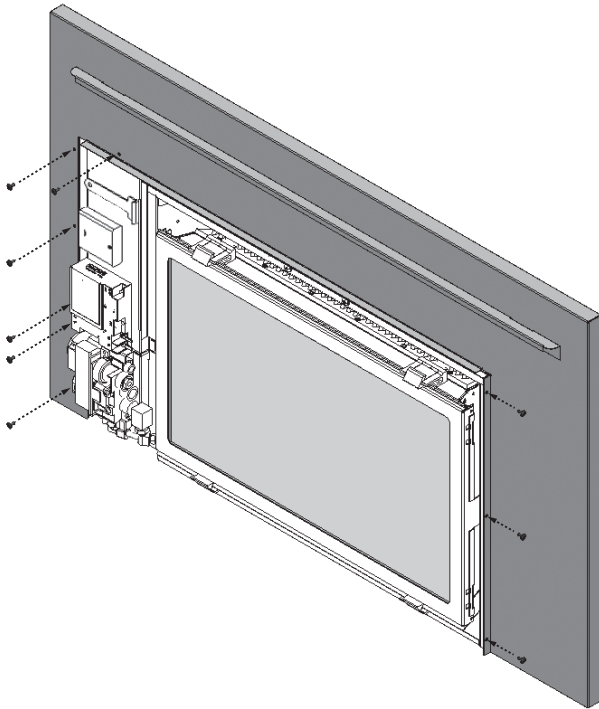


2. Hook surround to the top bracket on the backing plate and snap on magnets at the bottom.

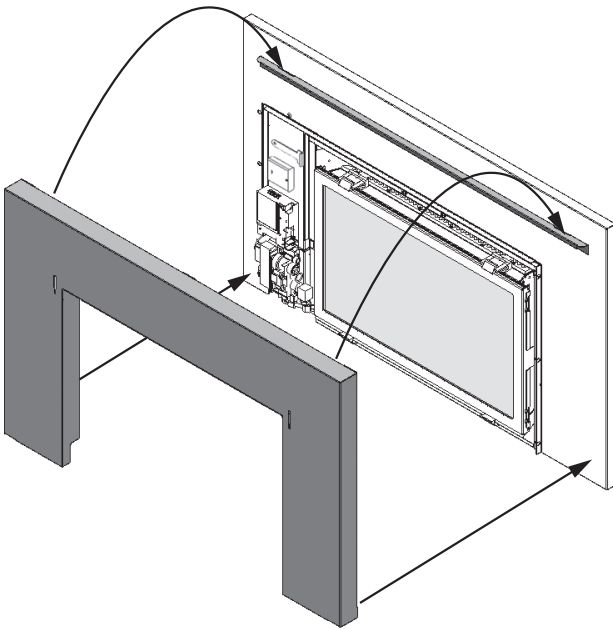


3. Once the window is installed on the fireplace and checked, hook the top latch cover to the top latches ensuring proper orientation as shown. Center it laterally.

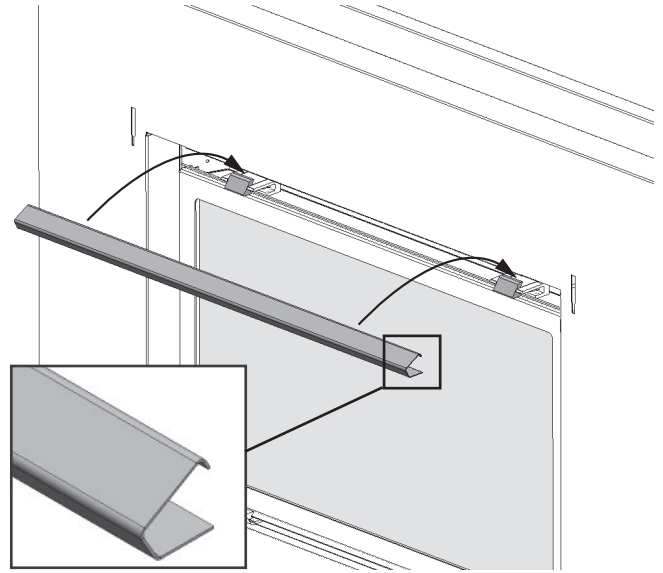


4. Slide the hearth cover butting it to the bottom of the appliance.

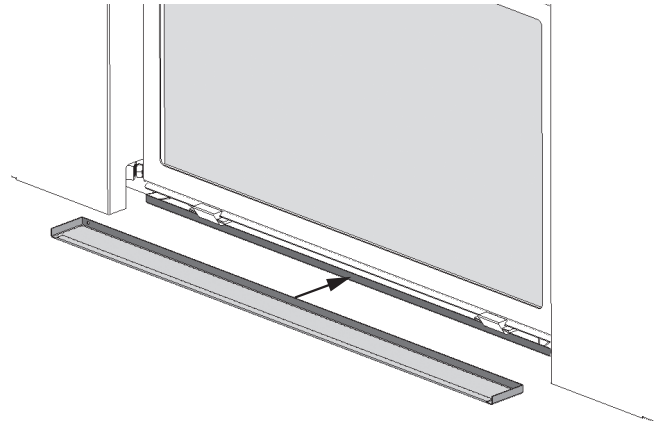

5. Hook the bottom latch cover to the bottom latches.

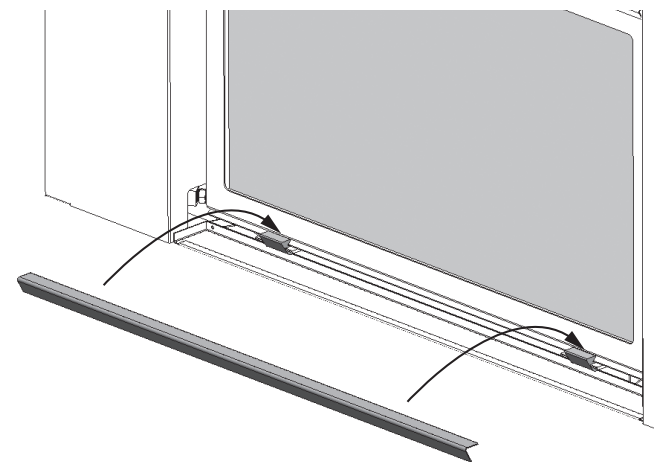


6. Hook the screened front to the surround with two hooks at the top and magnets at the bottom.

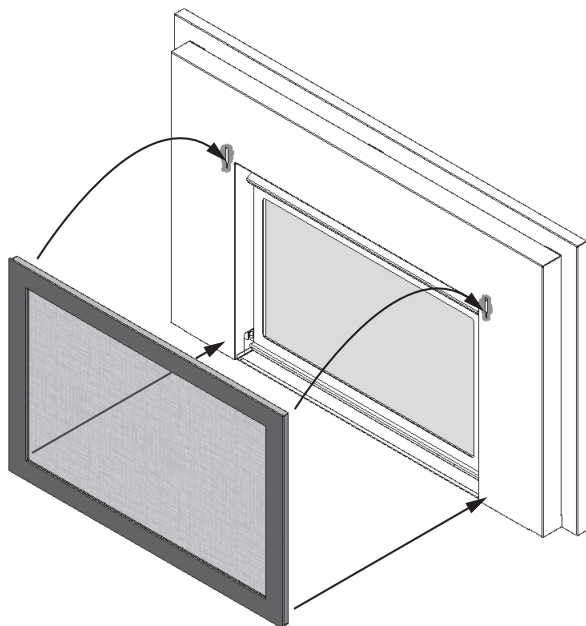

Replacement Parts List

	Description	Part Number
1	Backing plate	4011724
2	Front positioning bracket	4012327
3	#8x1/2" low profile screws, black (12)	4004560
4	3-sided surround front	4013232
5	Barrier screen assembly	4012680
6	Horizontal retainers (2)	4012679
7	Vertical retainer, left	4013339
8	Vertical retainer, right	4012678
9	Edgemont front	4012681
10	#6-32 plated hex nut (12)	4009201
11	Top latch cover	4013007
12	Lower latch cover	4013006
13	Hearth cover	4013302

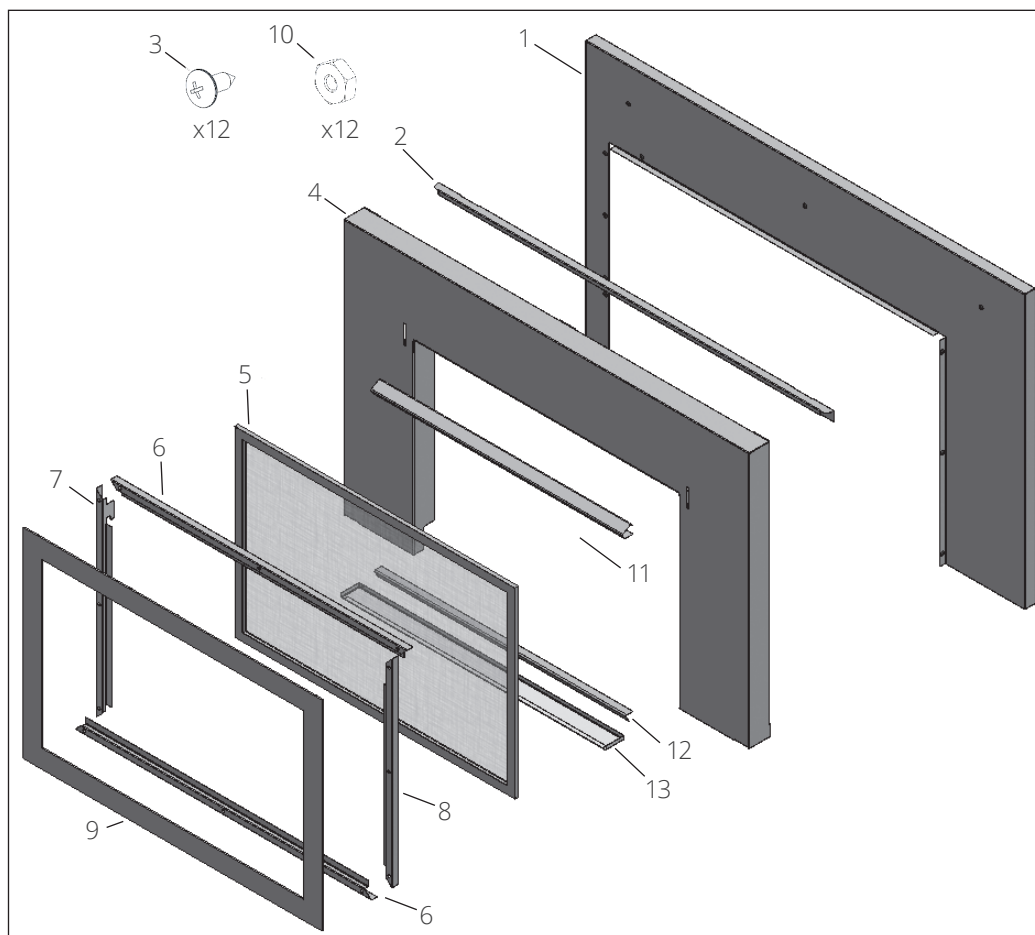

Because our policy is one of constant development and improvement, details may vary slightly from those given in this publication.

Designed and Manufactured by / for
Miles Industries Ltd.

190 – 2255 Dollarton Highway, North Vancouver, B.C., CANADA V7H 3B1

Tel. 604-984-3496 Fax 604-984-0246

www.valorfireplaces.com

DIRECTIVES D'INSTALLATION

valor Série G2

Devanture à 3 côtés 442EDF3B

Certifié par la CSA pour usage avec les foyers Valor G2 400 seulement



DANGER



VITRE CHAUDE - RISQUE DE BRÛLURES.

NE TOUCHEZ PAS UNE VITRE NON REFROIDIE.

NE LAISSEZ JAMAIS UN ENFANT TOUCHER LA VITRE.

L'écran pare-étincelles fourni avec ce foyer réduit le risque de brûlure en cas de contact accidentel avec la vitre chaude et doit être installé pour la protection des enfants et des personnes à risques.



INSTALLATEUR : Laissez cette notice avec l'appareil.

CONSOMMATEUR : Conservez cette notice pour consultation ultérieure.

Note : Ce kit doit être installé par un installateur qualifié, une agence de service ou un fournisseur de gaz au moment de l'installation du foyer. Ces directives doivent être utilisées conjointement avec le guide d'installation de l'appareil.

La Devanture à 3 côtés 442EDF3B peut être installée sur le foyer G2 400 installé dans un foyer en maçonnerie à combustibles solides.


Son installation n'est pas affectée par les dimensions de l'âtre ni les dégagements au manteau indiqués dans le guide d'installation de l'appareil G2.

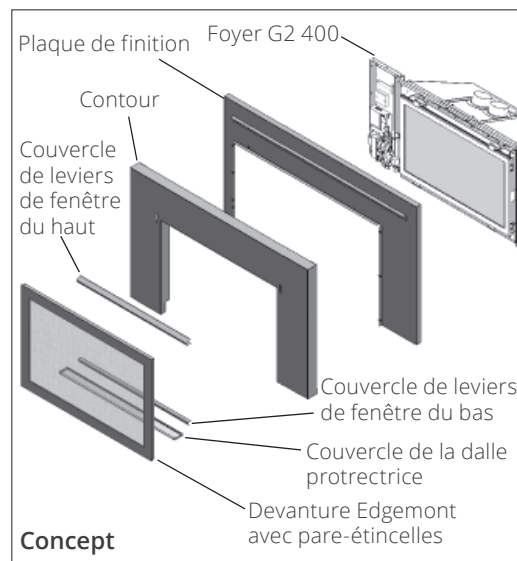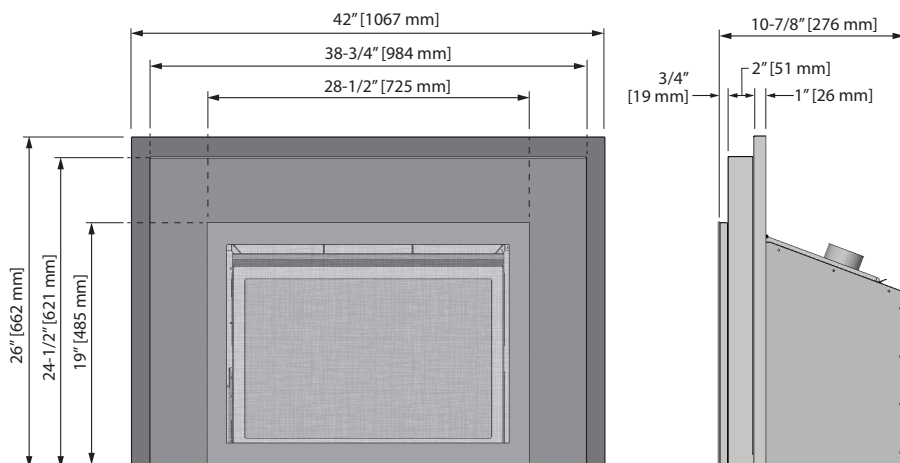


Installation

Le foyer doit être déjà installé dans l'âtre en maçonnerie à combustibles solides avant d'installer cette trousse. Voir Guide d'installation du foyer pour plus de détails.


1. Installez la plaque de finition à l'appareil (9 vis).

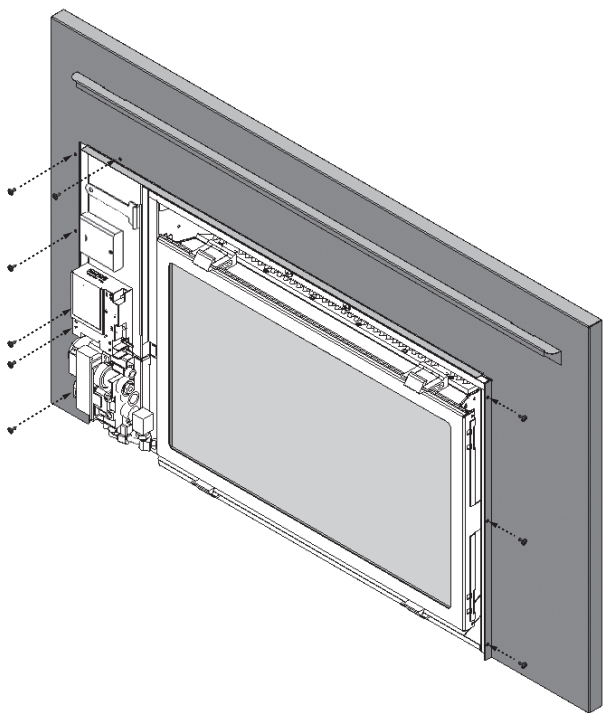


2. Accrochez le contour au support au haut de la plaque de finition et fixez le bas à la plaque avec les aimants du contour.

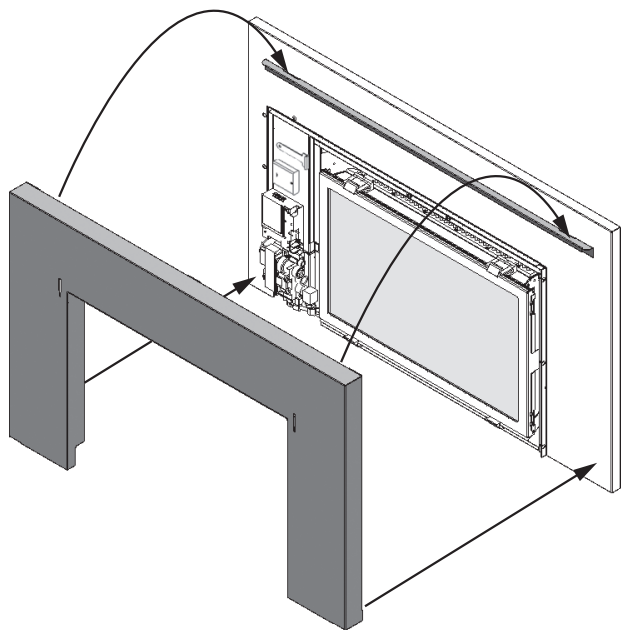


3. Une fois la fenêtre installée à l'appareil et vérifiée, accrochez le couvercle de leviers de fenêtre en vous assurant qu'il soit bien orienté. Centrez-le latéralement.

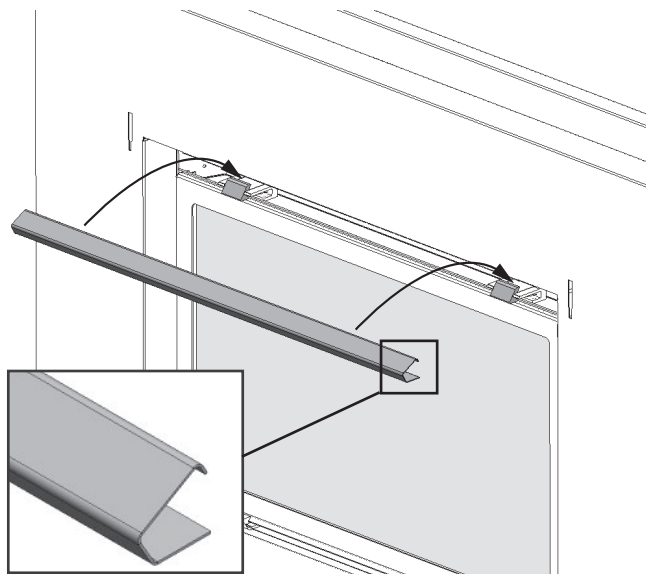


4. Glissez le couvercle de dalle contre le bas de l'appareil.

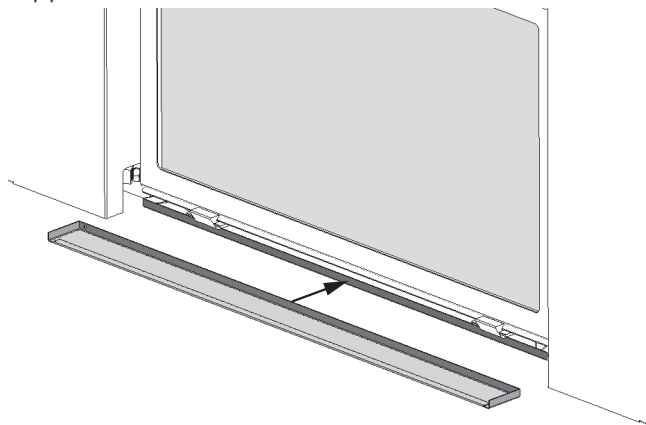

5. Accrochez le couvercle sur les leviers du bas.

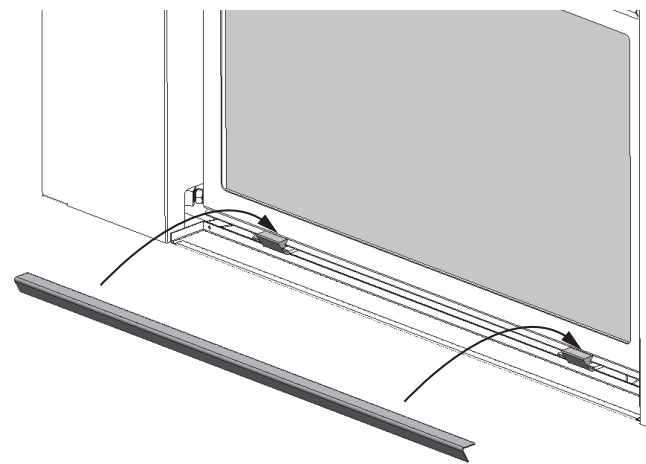


6. Accrochez le haut de la devanture/pare-étincelles au contour et fixez le bas aimanté.

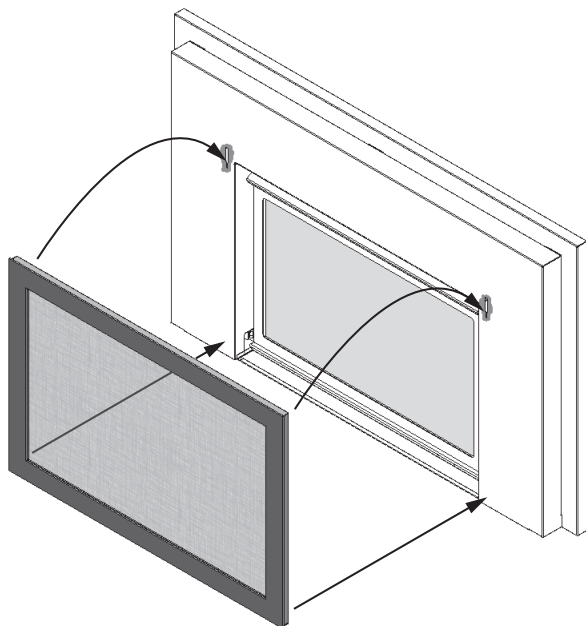

Pièces de remplacement

	Description	Pièces n°
1	Plaque de finition à 3 côtés	4011724
2	Support de contour	4012327
3	Vis noires à bas profil #8x1/2" (12)	4004560
4	Contour à 3 côtés	4013232
5	Pare-étincelles	4012680
6	Supports horizontaux, devanture (2)	4012679
7	Support vertical gauche, devanture	4013339
8	Support vertical droit, devanture	4012678
9	Devanture Edgemont	4012681
10	Écrous hex plaqués#6-32 (12)	4009201
11	Couvercle, leviers du haut	4013007
12	Couvercle, leviers du bas	4013006
13	Couvercle, dalle de protection	4013302

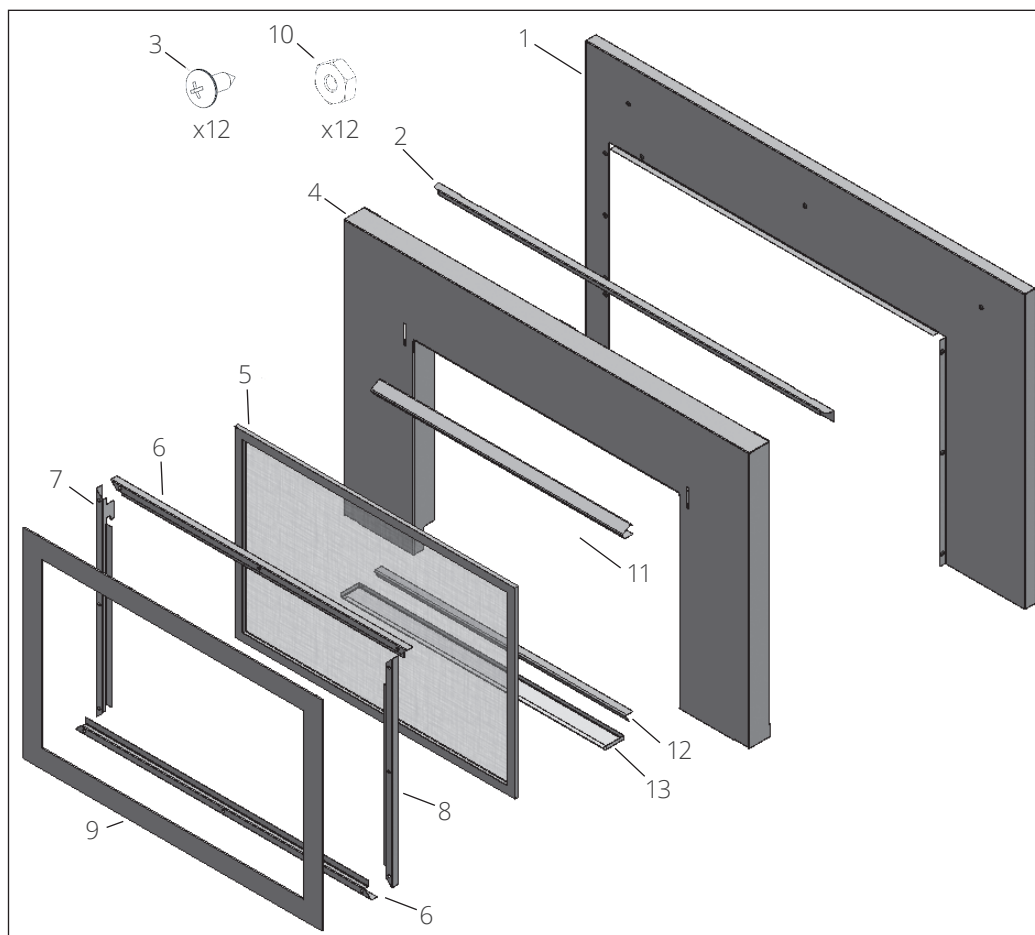

Parce que nous favorisons une politique de développement continu, certains détails de la présente publication peuvent varier.

Conçue et fabriquée par / pour Miles Industries Ltd.

190 – 2255 Dollarton Highway, North Vancouver, BC, CANADA V7H 3B1

Tél. 604-984-3496 Téléc. 604-984-0246

www.foyervalor.com