

manufactured by

**Charlton
& Jenrick^{LTD}**

PE2BLK—Birch Log Kit

Valor[®]

Kit Content

The PE2LSK contains the following items:

- Left glowing log, with connector cable
- Right glowing log, with connector cable
- Clear crystals, bagged
- Black glass embers (in clear bag)
- Flat smoked glass pieces (in orange bag)




Installation


To help set up the logs, turn on the fuel bed—see remote control instructions in the fireplace's installation manual.

Unpack the crystals, glass embers and logs carefully. The following steps indicate how to optimally place the fuel bed elements; however, you may wish to place them differently to suit your taste.

1. Locate the two connectors on the fuel bed platform; they are covered by a sticker. Remove the stickers.
2. Plug the glowing logs into their respective connector on the firebed plate, ensuring the connectors are on the correct side to fit into the fuel bed ones. The logs will light up. Place the logs on the front edge of the firebox out of the way for the moment.

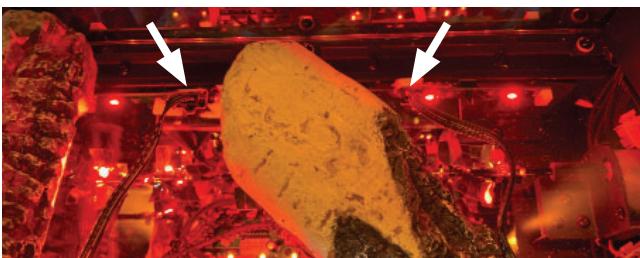

3. Lay the clear crystals evenly in a single layer to cover the bottom of the bed.

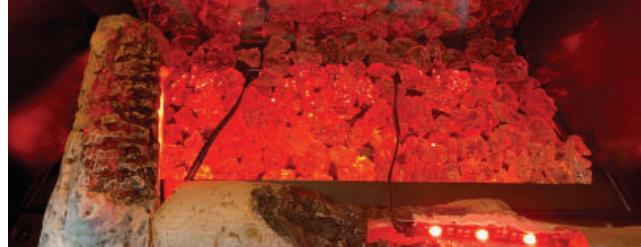

4. Lay the black glass embers—in the clear bag—randomly on top of the crystals.



5. Place the left log on top of the fuel bed media as indicated.
6. Place the right log on the left log and its other end on the fuel bed media as indicated.



7. Add some of the large charcoal pieces on top of the crystals/embers around/under the logs if desired.
8. Place the smoked flat glass pieces (from the orange bag) to cover spaces and log cables.
9. Looking at different angles, you can move the crystals and embers so that no direct light will be reflected in the black panel.


Charlton & Jenrick LTD PE2BLK—Bûches de bouleau



Contenu de l'ensemble

Le PE2LSK contient les composantes suivantes :

- Bûche incandescente gauche, avec connecteur
- Bûche incandescente droite, avec connecteur
- Cristaux clairs, en sac
- Braises de verre noir (sac transparent)
- Pièces de verre plates noir fumé (sac orange)

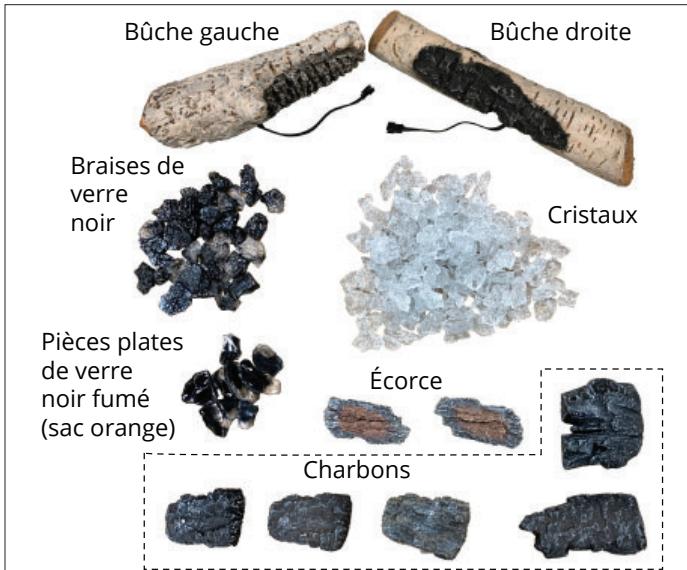

Installation


Pour faciliter l'installation de l'ensemble, allumez le lit de combustion—voir le mode d'emploi de la télécommande dans le guide d'installation du foyer.

Déballez l'ensemble soigneusement. Les étapes suivantes indiquent la position des composantes du lit de combustion; cependant, vous pouvez les placer selon vos goûts personnels.


1. Repérez les bornes de connections sur la plaque du lit de combustion. Elles sont couvertes d'une étiquette. Retirez l'étiquette.
2. Branchez les bûches gauche et droite dans leur borne respective sur la plaque du lit de combustion. Assurez-vous de brancher les connecteurs dans la position correcte suivant la forme des ouvertures. Les bûches s'allumeront de l'intérieur. Placez les bûches sur le rebord avant pour l'instant.



3. Répandez les cristaux clairs également dans une seule couche pour couvrir la plaque du lit.

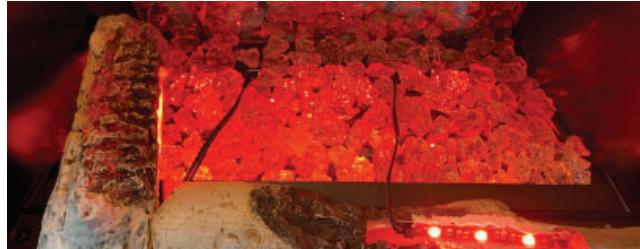

4. Ajoutez des pièces de braise noires—du sac transparent.

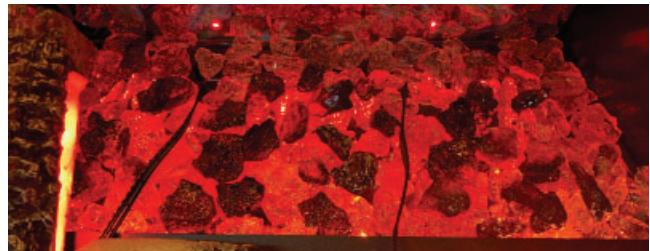

5. Placez la bûche incandescente gauche sur le lit de cristaux/braises.
6. Placez la bûche incandescente droite sur la gauche et son autre bout sur le lit de cristaux/braises.



7. Ajoutez quelques grandes pièces de charbon sur les cristaux/braises autour et en-dessous des bûches si désiré.
8. Ajoutez des morceaux plats de verre (du sac orange) pour couvrir les espaces et le connecteur des bûches.
9. En regardant sous différents angles, vous pouvez déplacer des cristaux et braises afin qu'il n'y ait pas de lumière directe apparente dans le panneau noir arrière.