


INSTALLATION INSTRUCTIONS

PE2BPB2—3-Sided Backing Plate 31" for PE2 Electric Fireplace


NOT FOR USE WITH GAS MODEL FIREPLACES

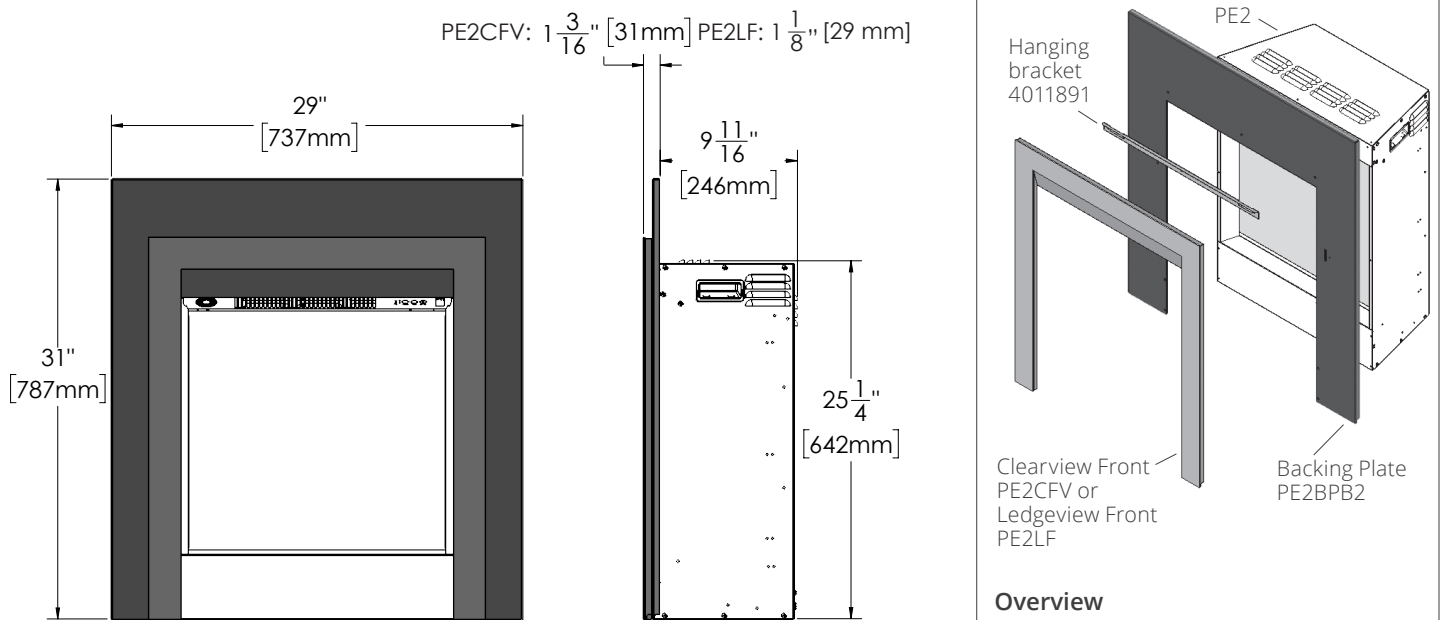


Installation

The PE2BPB2 can be used with PE2CFV Clearview Front or the PE2LF Ledgeview Front to cover a larger opening on 3 sides of the fireplace.

1. Secure the hanging bracket and backing plate to the top of the PE2 with 3 screws supplied with the front.
2. Secure the bottom of the backing plate with 2 screws per side provided with the backing plate.

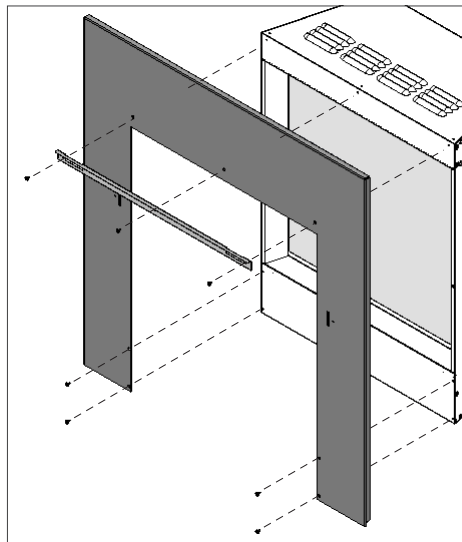

3. Hook PE2CFV or PE2LF front to the top bracket & stick bottom magnets to backing plate.


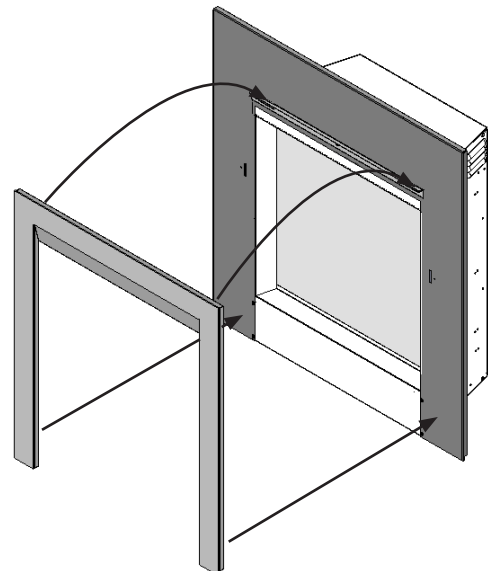


PE2CFV + PE2BPB2—Clearview Front + Backing Plate
2 hooks at top, 2 magnets at bottom
Same for PE2LF + PE2BPB2—Ledgeview Front

GUIDE D'INSTALLATION

PE2BPB2—Plaque de finition à 3 côtés 31" pour le foyer électrique PE2


NE PAS UTILISER AVEC LES FOYERS À GAZ

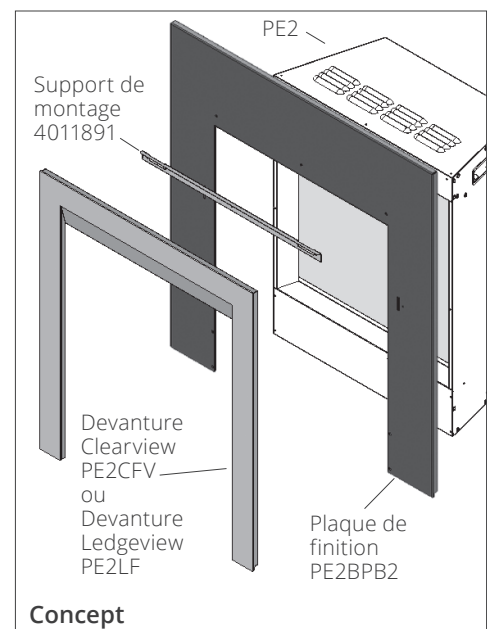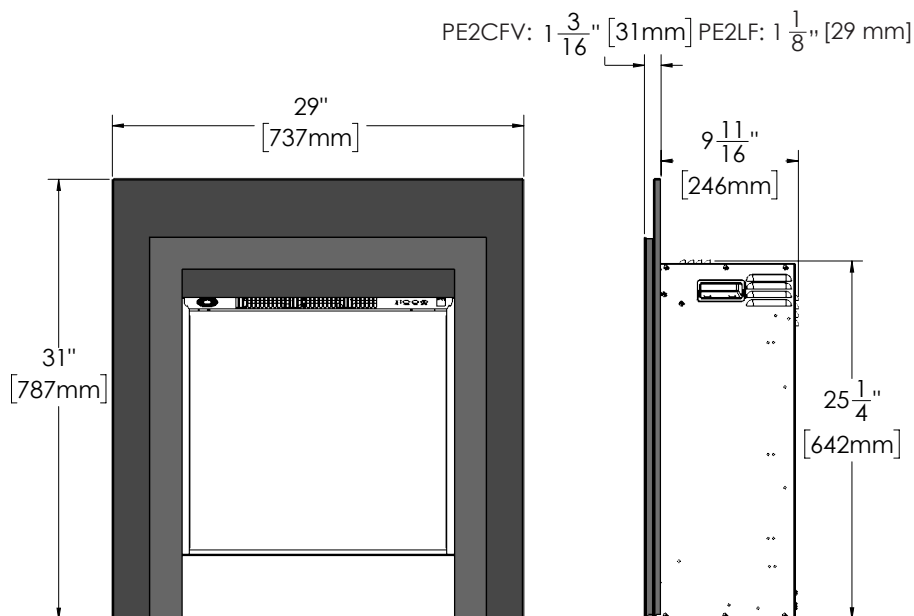


Installation

La PE2BPB2 peut être utilisée avec la Devanture Clearview PE2CFV ou la Devanture Ledgerview PE2LF pour couvrir un espace plus grand sur 3 côtés du foyer.

1. Fixez le support de montage et la plaque de finition au haut du foyer PE2 avec 3 vis fournies avec la devanture.
2. Fixez le bas de la plaque de finition avec 2 vis par côtés, fournies avec la plaque.

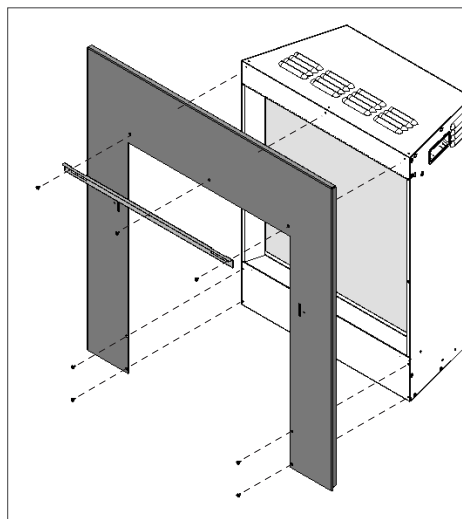

3. Accrochez la devanture PE2CFV ou PE2LF au support de montage au haut de la plaque de finition et fixez le bas aimanté aux côtés de la plaque.

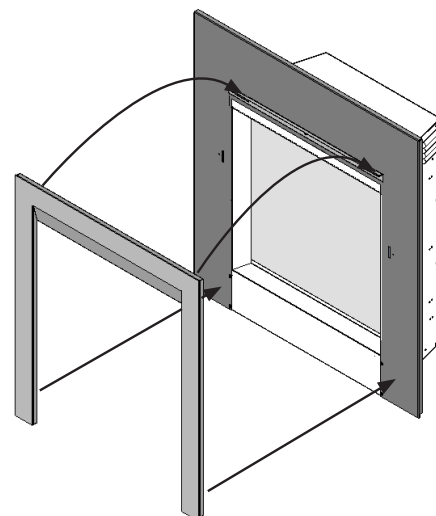

PE2CFV + PE2BPB2—Devanture Clearview + Plaque de finition: 2 crochets en haut, 2 aimants en bas
Même chose pour Devanture Ledgerview PE2LF